

 
## Deleting Selected Files


Deletes the selected files.


### Caution :

- Deleted files cannot be restored.

- 1 Select video or still image mode.

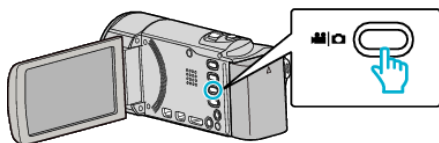

- 2 Tap  to select the playback mode.

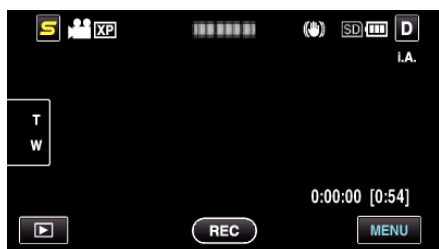 


- While the video mode is shown in the image, the same operations apply for the still image mode.

 
- 3 Tap .



- 4 Tap on the files to delete.




- ✓ appears on the selected files.  
To remove ✓ from a file, tap on the file again.
- Tap "SEL ALL" to select all files.
- Tap "REL ALL" to release all selections.
- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame. When this is tapped, an index screen of the grouped files appears. Tap on the files to delete, then tap .

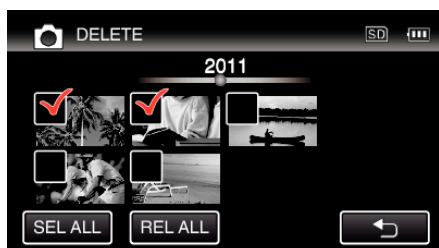

- 5 Tap "SET".



 - 6 Tap "EXECUTE" to confirm the deletion.

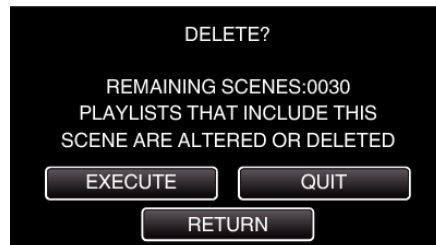

- After deleting is complete, tap "OK".
- To cancel the deletion, tap "QUIT".

### Memo :

- Files that are protected cannot be deleted.  
Release protection before deleting the file.