


Playing Back with a DVD Writer

You can play back the DVDs created on this unit.

- 1 Prepare a DVD writer.
 - Insert the DVD to play back into the DVD writer.
- 2 Tap “PLAYBACK” in the BACK-UP menu.

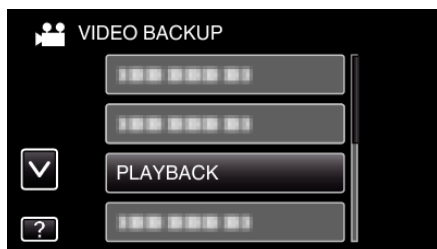

- An index screen (thumbnail display) of the videos in the disc appears.
- 3 Tap on the file to start playback.



- Tap “←” to return to the “BACK-UP” menu.
- For details on video playback, refer to ““Operation Buttons for Video Playback” (p. 0)”.
- To exit, stop playback and turn off the camcorder by pressing the ⏻ button for about 2 seconds. Then, disconnect the USB cable.

Memo :

- When playing back a disc created in DVD-Video format, no information such as date and time will be displayed.