

---

**Cannot find a recorded file.**

Cancel the date search function.

Change the playback media by tapping  on the touch screen.

Change the setting in “REC MEDIA FOR IMAGE”, “REC MEDIA FOR VIDEO”, “REC VIDEO TO SLOTS”, or “REC STILL TO SLOTS”. (Files on other media are not displayed.)

Select “PLAYBACK OTHER FILE” in the menu. (Video files that have damaged management information can be played back.)