


Rear

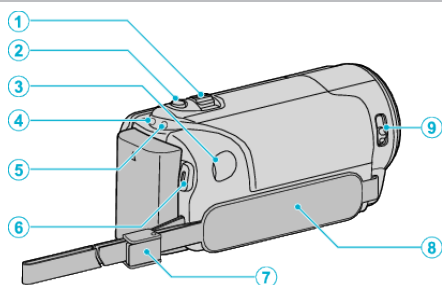

- 1** Zoom/Volume Lever
 - During shooting: Adjusts the shooting range.
 - During playback (index screen): Moves to the next or previous page.
 - During video playback: Adjusts the volume.
- 2** SNAPSHOT (Still Image Recording) Button
 - Takes a still image.
- 3** DC Connector
 - Connects to an AC adapter to charge the battery.
- 4** ACCESS (Access) Lamp
 - Lights up/blinks during recording or playback.
 - Do not remove the battery pack, AC adapter, or SD card.
- 5** POWER/CHARGE (Power/Charge) Lamp
 - Lights up: Power "ON"
 - Blinks: Charging in progress
 - Goes out: Charging finished
- 6** START/STOP (Video Recording) Button
 - Starts/stops video recording.
- 7** Strap Lock
- 8** Grip Belt
 - Pass your hand through the grip belt to hold this unit firmly.
- 9** Lens Cover Switch
 - Opens and closes the lens cover.