 



Connecting via the HDMI Mini Connector

If you are using an HDTV, you can play back in HD quality by connecting to the HDMI connector.

 
- Use a High Speed HDMI mini cable as the HDMI mini cable when not using the provided one.
- Refer also to the instruction manual of the TV in use.

1 Connect to a TV.

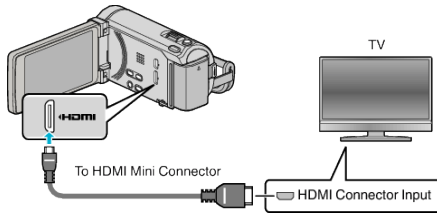

- Turn off the camcorder by pressing the  button for about 2 seconds.


2 Connect the AC adapter to this unit.

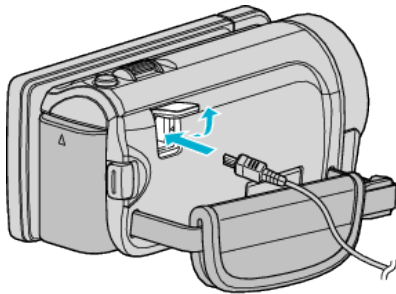

AC Adapter
To AC Outlet
(110 V to 240 V)

* The AC adapter shown in the illustration is AC-V11U.

 3 Press the external input button on the TV to switch to the input from this unit via the connected connector.

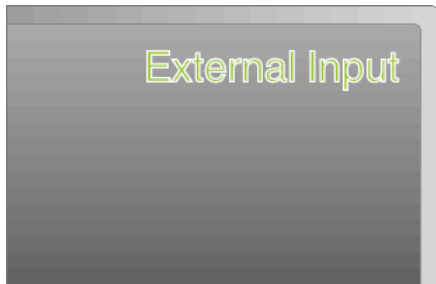

4 Play back a file.



Memo :

- Change the settings in "HDMI OUTPUT" according to the connection.
- When connected to the TV via the HDMI mini cable, images and sounds may not be output properly depending on the TV connected. In such cases, perform the following operations.
 - 1) Disconnect the HDMI mini cable and connect it again.
 - 2) Turn off and on this unit again.
- For questions about the TV or method of connection, contact your TV's manufacturer.