

Displays on the Screen

Video Recording Mode




Still Image Recording Mode



Video Playback Mode



Still Image Playback Mode

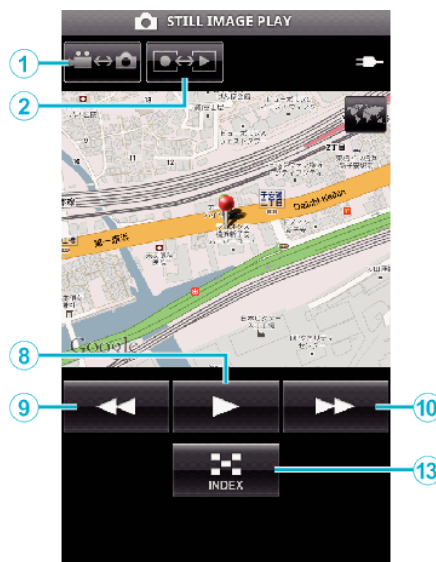

Names of Buttons and Functions

	Name of Button	Function	Mode			
			Video		Still Image	
			Recording	Playback	Recording	Playback
①	Video/Still Image Mode *1	Switches between video and still image modes.	✓	✓	✓	✓
②	Recording/Playback Mode *1	Switches between recording and playback modes.	✓	✓	✓	✓
③	Zoom (T)	Zooms to the T (telephoto) end.	✓	-	✓	-
④	Zoom (W)	Zooms to the W (wide angle) end.	✓	-	✓	-
⑤	Record	Starts video recording.	✓	-	-	-
⑥	Stop	Stops video recording.	✓	-	-	-
⑦	Shutter	Takes a still image.	-	-	✓	-
⑧	▶ (Play) *2	Starts playback of the selected video or still image. During video/still image playback: Starts/pauses playback.	-	✓	-	✓
⑨	◀◀ (Rewind)	During index screen display: Moves the cursor to the left.	-	✓	-	✓
		During video playback: Performs reverse search. During still image playback: Returns to the previous image.	-	✓	-	✓
⑩	▶▶ (Fast Forward)	During index screen display: Moves the cursor to the right.	-	✓	-	✓
		During video playback: Performs forward search. During still image playback: Advances to the next image.	-	✓	-	✓
⑪	◀◀ (Reverse Skip)	During video playback: Returns to the beginning of the scene.	-	✓	-	-
⑫	▶▶ (Forward Skip)	During video playback: Advances to the next video.	-	✓	-	-
⑬	Index	During playback: Returns to the index screen.	-	✓	-	✓
⑭	SNAP SHOT *3	During video playback: Captures a still image from the video when this is tapped while playback is paused.	-	✓	-	-

*1 Switching of modes cannot be performed during video recording.
 *2 If location information is recorded in the video or still image, the location will be displayed on the map.
 *3 Captured still images are stored in the same media as the original image.