

## CONT. SHOOTING SPEED

Sets the speed for continuous shooting.


Setting	Details
HIGH SPEED	<ul style="list-style-type: none"> <li>Shoots up to 40 still images continuously in the still image mode in about 2.7 second.</li> <li>Shoots up to 40 still images continuously in the video mode in about 0.67 second.</li> </ul>
MEDIUM SPEED	<ul style="list-style-type: none"> <li>Shoots up to 40 still images continuously in the still image mode in about 5.3 second.</li> <li>Shoots up to 40 still images continuously in the video mode in about 4 second.</li> </ul>
LOW SPEED	Shoots continuously until the recording media is full.

### Memo :

- Shooting speed slows down gradually as continuous shooting goes on in the "LOW SPEED" mode.
- "HIGH SPEED" and "MEDIUM SPEED" are not available when image size is set to "2656X1992(5.3M)" in the still image recording mode.
- Performing continuous shooting while video recording is in progress switches the mode to "LOW SPEED" temporarily.

### Displaying the Item

- Select still image mode.

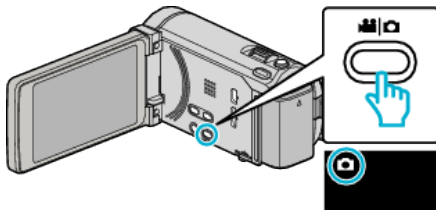

- Tap "MENU".



- Tap "CONT. SHOOTING SPEED".

