

CHECK CARD'S WRITE PROTECTION SWITCH

Set the write protect switch of the SD card to off.