
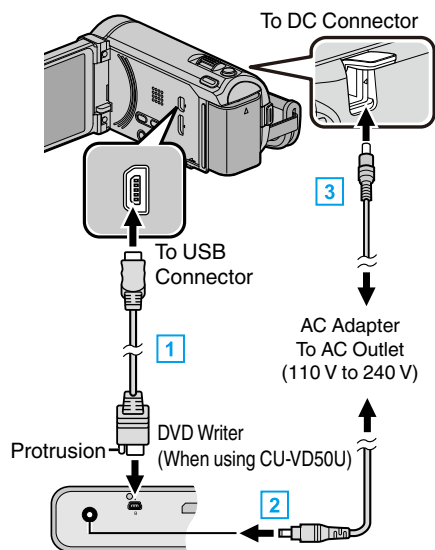



## Preparing a DVD Writer (CU-VD50U)

- 1 Connect the USB cable and the AC adapter.
  - Turn off the camcorder by pressing the  button for about 2 seconds.



\* The AC adapter shown in the illustration is AC-V11U.

- 1 Connect the USB cable provided with the DVD writer.
  - 2 Connect the AC adapter of the DVD writer.
  - 3 Connect the AC adapter to this unit.
    - This unit powers on automatically when the AC adapter is connected.
    - This unit turns on and the "BACK-UP" menu appears.
    - While the USB cable is connected, the "BACK-UP" menu is displayed.
    - Refer also to the instruction manual of the DVD writer.
- 2 Turn on the DVD writer and insert a new disc.

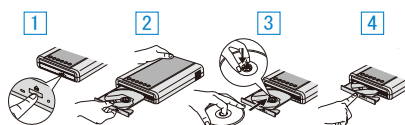

- 1 Press the power button to turn on the power.
- 2 Press the eject button to open the disc tray.
- 3 Pull out the tray completely and load a new disc properly.
- 4 Push the disc tray in until it clicks into place.

### Caution :

- Be sure to turn off the power when connecting the devices. Otherwise, electric shocks or malfunctions may occur.

### Memo :

- All buttons on the DVD writer CU-VD50U, other than the power and eject buttons, will not work when connected to this unit.