


## Common Menu

1 Tap "MENU".



2 Tap .

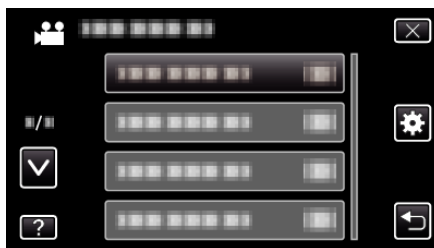

Setting	Details
CLOCK ADJUST	Resets the current time or sets to the local time when using this unit overseas.
DATE DISPLAY STYLE	Sets the order of year, month, day and the time display format (24H/12H).
LANGUAGE	The language on the display can be changed.
MONITOR BRIGHTNESS	Sets the brightness of the LCD monitor.
REC MEDIA FOR VIDEO	Sets the recording/playback media of videos.
REC MEDIA FOR IMAGE	Sets the recording/playback media of still images.
OPERATION SOUND	Turns on or off the operation sound.
AUTO POWER OFF	Prevents the situation of forgetting to turn off the power when this is set.
QUICK RESTART	Reduces the power consumption within 5 minutes after the LCD monitor is closed to 1/3 of that used during recording.
REMOTE	Enables remote control operation.
DEMO MODE	Introduces the special features of this unit in digest form.
3D LEVEL ADJUST (for GZ-HM960)	Adjusts the appearance of 3D images.

## Menu Settings

Setting	Details
TOUCH SCREEN ADJUST	Adjusts the response position of the buttons on the touch screen.
3D DISPLAY WARNING (for GZ-HM960)	Sets whether to display warnings during 3D playback.
DISPLAY ON TV	Displays icons and date/time on a TV screen.
VIDEO OUTPUT	Sets the aspect ratio (16:9 or 4:3) according to the connecting TV.
COMPONENT OUTPUT	Sets the definition of the video output from the COMPONENT connector.
HDMI OUTPUT	Sets the definition of the video output from the HDMI mini connector.
HDMI CONTROL	Sets the linked operations ON/OFF when the TV and this unit are connected using the HDMI mini connector.
Bluetooth	Enables wireless connection with other devices.
AUTO FINALIZE	Finalizes the discs created automatically so that they can be played back on compatible devices.
FACTORY PRESET	Returns all the settings to their default values.
UPDATE	Updates the functions of this unit to the latest version.
PC SOFTWARE UPDATE	Updates the built-in PC software of this unit to the latest version.
FORMAT BUILT-IN MEM.	Deletes all files on the built-in memory.
FORMAT SD CARD	Deletes all files on the SD card.
ERASE ALL DATA	Execute this process when disposing of this unit or passing it to another person.