



## Main Menu for Still Image Playback

You can delete or look for specific still images.

- 1 Select still image mode.

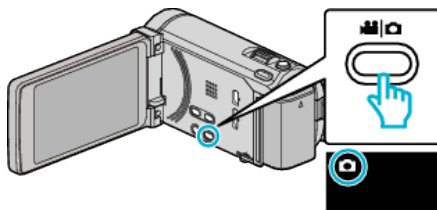

- 2 Tap  to select the playback mode.

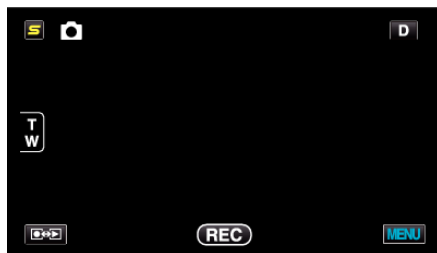

- The mode changes between recording and playback with every tap.

- 3 Tap "MENU".



| Setting                           | Details  |
|-----------------------------------|--|
| SEARCH DATE                       | You can search and play videos or still images according to recording dates.   |
| SLIDE SHOW EFFECTS (for GZ-HM860) | Sets the transition effects in slideshow playback.   |
| PROTECT/CANCEL                    | Protects files from being deleted accidentally.  |
| COPY                              | Copies files from the built-in memory to the SD card.  |
| MOVE                              | Moves files from the built-in memory to the SD card.   |
| STILL IMAGE TRANSFER              | When Bluetooth connection is established with a BIP/OPP-compliant device, you can transfer recorded still image data to this device. |