

---

**The same image is displayed for a long time.**

Use a high speed SD card (Class 4 or higher).

Clean the terminals of the SD card with a dry cotton swab or something similar.

Execute "FORMAT SD CARD" in the "COMMON" menu. (All data will be deleted.)