 


Setting the USER Button

By assigning one of manual adjustment functions that you frequently use to the USER button, you can access the function quickly.

 
Assigning a Function to the USER Button

- 1 Select video or still image mode.

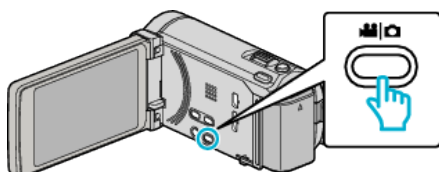


- The video or still image mode icon appears.

- 2 Tap "MENU".

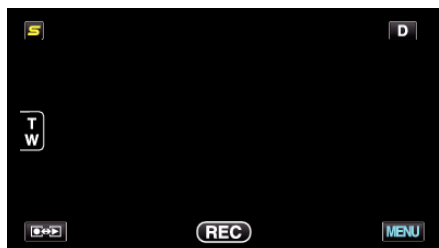


- 3 Tap "USER BUTTON SETTING".

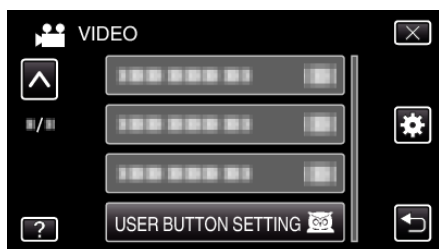 

- Tap \uparrow or \downarrow to move upward or downward for more selection.
- Tap X to exit the menu.
- Tap \leftarrow to return to the previous screen.

 - 4 Select the desired function.

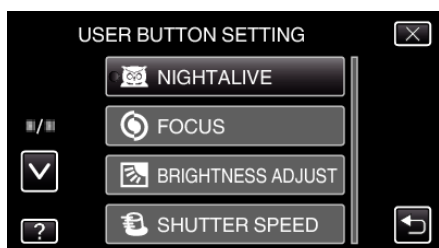

You can select one of the following functions.

- NIGHTLIVE
- TOUCH PRIORITY AE/AF (for GZ-HM960)
- FOCUS
- BRIGHTNESS ADJUST
- SHUTTER SPEED
- APERTURE PRIORITY
- BACKLIGHT COMP.
- WHITE BALANCE
- FOCUS ASSIST
- FLASH (still image mode)
- SHUTTER MODE
- CONT. SHOOTING SPEED
- DIS (video mode)
- SELF-TIMER (still image mode)

Making Adjustments with the USER Button

Operate as follows.

- **Functions with settings that change (or turn ON/OFF) with every press**
(NIGHTLIVE, BACKLIGHT COMP., DIS, SELF-TIMER, SHUTTER MODE, CONT. SHOOTING SPEED, FOCUS ASSIST, FLASH)

Press the USER button to change the setting.

- **Functions with manual adjustments**
(FOCUS, BRIGHTNESS ADJUST, SHUTTER SPEED, APERTURE PRIORITY)

Press the USER button to switch between automatic and manual.

For details on manual adjustments, refer to "Manual Recording" (p. 0).

- **Functions with a selection menu**
(TOUCH PRIORITY AE/AF, WHITE BALANCE)

1) Press the USER button.

2) Tap the desired function to set.

Memo : _____

- The USER button is invalid when the menu is displayed.