 



## Playing Back Still Images

You can select and play back the recorded still images from an index screen (thumbnail display).

- 1 Select still image mode.

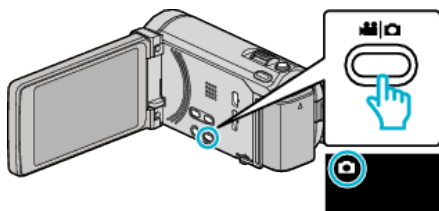

 - 2 Tap to select the playback mode.

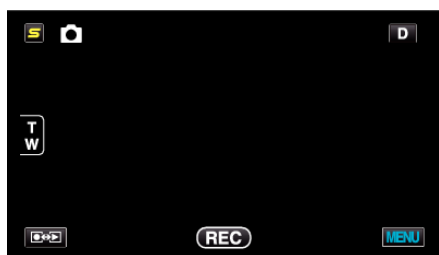


- 3 Tap on the file to start playback.



- Tap to select the media for playback.
- Tap to return to the index screen.
- The button on the index screen is only displayed during still image playback. Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together and displayed with a green frame on a separate index screen. The index screen changes between the normal index screen and group index screen with every tap of the button.

## Operation Buttons for Still Image Playback

 
### During Index Screen Display

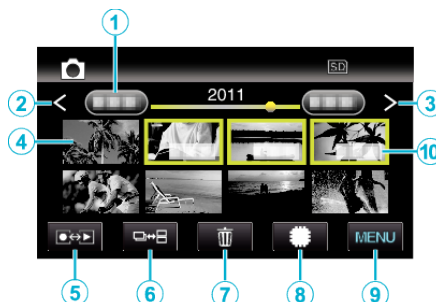

- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame.

	Display	Description
①	Date	Moves to the previous/next date
②	<	Displays the previous index screen (thumbnail display) • You can perform the same operation with the zoom lever.
③	>	Displays the next index screen (thumbnail display) • You can perform the same operation with the zoom lever.
④	Thumbnail (File)	Tap on thumbnail - Starts playback Drag to right - Scrolls to the right to show the previous index screen (thumbnail display) Drag to left - Scrolls to the left to show the next index screen (thumbnail display)
⑤	Recording/ Playback Mode 	Switches between recording and playback modes.
⑥		Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together and displayed with a green frame on a separate index screen. The index screen changes between the normal index screen and group index screen with every tap of the button.
⑦		Displays the index screen (thumbnail display) to perform deletion
⑧		Switches between the index screen of the built-in memory and SD card
⑨	MENU	Displays the menu screen
⑩	Recording Date	Recording date (only displayed on the first file of each date)

## During Still Image Playback

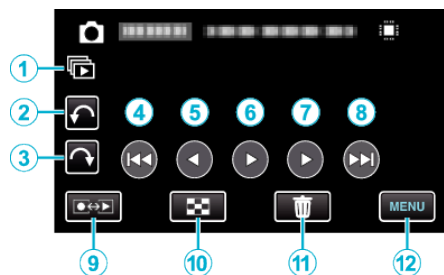 

	Display	Description
①		Continuous playback of grouped files (such as still images captured by continuous shooting).
②		Rotates to the left (rotates by $-90^\circ$ with each tap)
③		Rotates to the right (rotates by $90^\circ$ with each tap)
④		Returns to the previous still image
⑤		Reverse playback during slideshow
⑥		Starts/pauses slideshow
⑦		Normal playback during slideshow
⑧		Advances to the next still image
⑨	Recording/ Playback Mode 	Switches between recording and playback modes.
⑩		Returns to index screen
⑪		Displays the index screen (thumbnail display) to perform deletion
⑫	MENU	Displays the menu screen

### Memo :

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 5 seconds. Tap on the screen to display the operation buttons again.
- You can rotate a still image  $90^\circ$  to the right or left during playback. Rotation applies to the on-screen display only.
- You can search for a specific file by the recording date. This is useful when searching from a large number of files.

### Caution :

- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.