


Names of Buttons and Functions on the LCD Monitor

The following screens are displayed during the video and still image modes, and operate as the touch screens.

Recording Screen (Video/Still Image)

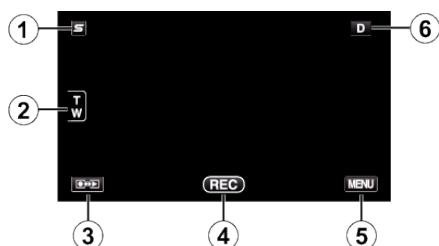

- 1 Face Short Cut Menu Button
 - Displays a short cut screen of face recognition functions.
- 2 Zoom Button
- 3 Recording/Playback Mode Button
 - Switches between recording and playback modes.
- 4 Recording Start/Stop Button
 - **REC**: Video Recording Start Button
 - **●||**: Video Recording Stop Button
 - **⊞**: Still Image Recording Button
- 5 Menu Button
- 6 Display Button

Some displays disappear after approximately 3 seconds. Use the **D** button to change the displays as shown below.


 - Tap **D** button
Displays appear for approximately 3 seconds with every tap.
 - Tap and hold **D** button
Displays are fixed such that they do not disappear. After setting, the display button changes from **D** to **D?**. Tap **D?** to release the displays.

Playback Screen (Video)




- 1 Recording/Playback Mode Button
 - Switches between recording and playback modes.
- 2 Index Screen Button
- 3 Delete Button
- 4 Volume Adjustment Button
- 5 Menu Button
- 6 Operation Buttons

Playback Screen (Still Image)

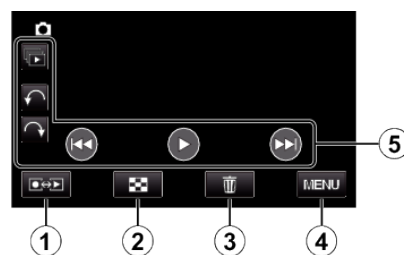


- 1 Recording/Playback Mode Button
 - Switches between recording and playback modes.
- 2 Index Screen Button
- 3 Delete Button
- 4 Menu Button
- 5 Operation Buttons

Index Screen

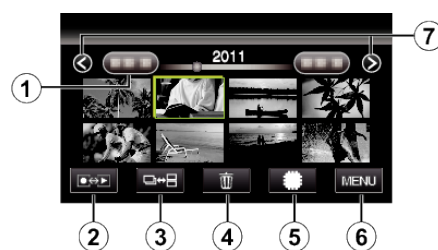

- 1 Date Button
- 2 Recording/Playback Mode Button
 - Switches between recording and playback modes.
- 3 Index Screen Switching Button (Still image only)
- 4 Delete Button
- 5 Playback Media Button
 - Switches between SD card and built-in memory.
- 6 Menu Button
- 7 Page Forward/Back Button

Menu Screen

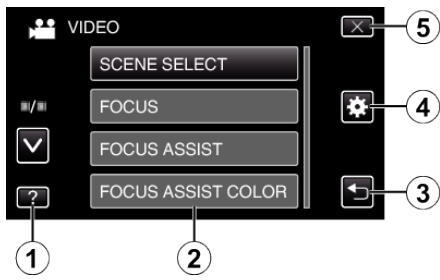

- 1 Help Button
- 2 Menu Items
- 3 Return Button
- 4 Common Menu Button
- 5 Close Button