

3D DISPLAY WARNING (for GZ-HM960)

Sets whether to display warnings during 3D playback.

Setting	Details
OFF	Hides 3D warning displays.
ON	Shows 3D warning displays at a regular interval.

Displaying the Item

- 1 Tap "MENU".



- 2 Tap .



- 3 Tap "3D DISPLAY WARNING".

