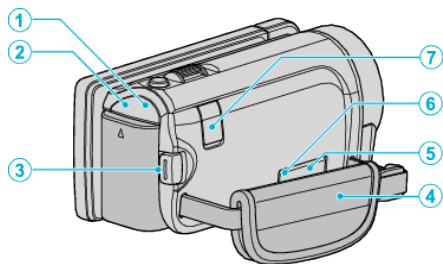


**Rear**

- 1** POWER/CHARGE (Power/Charge) Lamp
  - Lights up: Power "ON"
  - Blinks: Charging in progress
  - Goes out: Charging finished
- 2** ACCESS (Access) Lamp
  - Lights up/blinks during recording or playback.
  - Do not remove the battery pack, AC adapter, or SD card.
- 3** START/STOP (Video Recording) Button
  - Starts/stops video recording.
- 4** Grip Belt
  - Pass your hand through the grip belt to hold this unit firmly.
- 5** AV Connector
  - Connects to the AV connector of a TV, etc.
- 6** COMPONENT (Component) Connector
  - Connects to the component connector of a TV, etc.
- 7** DC Connector
  - Connects to an AC adapter to charge the battery.