

**INSERT DISC/CHANGE DISC**

Open the tray of the DVD writer or external Blu-ray drive, check and reset the BD/DVD, then close the tray.

Replace the disc in the DVD writer or external Blu-ray drive.