 

## Connecting via the HDMI Mini Connector

If you are using an HDTV, you can play back in HD quality by connecting to the HDMI connector.

- Use a High Speed HDMI mini cable as the HDMI mini cable when not using the provided one. (for GZ-HM960)
- Use a High Speed HDMI mini Cable as the HDMI mini cable. (for GZ-HM845)
- Refer also to the instruction manual of the TV in use.
- 1 Connect to a TV.



- Turn off the camcorder by pressing the  $\ensuremath{\mathfrak{O}}$  button for about 2 seconds.
- Connect the AC adapter to this unit.

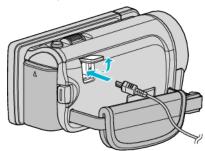

AC Adapter To AC Outlet (110 V to 240 V)

- \* The AC adapter shown in the illustration is AC-V10M.
- 3 Press the external input button on the TV to switch to the input from this unit via the connected connector.



4 Play back a file.



## Memo

- Change the settings in "HDMI OUTPUT" according to the connection.
- When connected to the TV via the HDMI mini cable, images and sounds may not be output properly depending on the TV connected.
  In such cases, perform the following operations.
  - 1) Disconnect the HDMI mini cable and connect it again.
  - 2) Turn off and on this unit again.
- For questions about the TV or method of connection, contact your TV's manufacturer.