



Protecting/Releasing Protection of Selected Files

Protects or releases protection of the selected files.

- 1 Select video or still image mode.

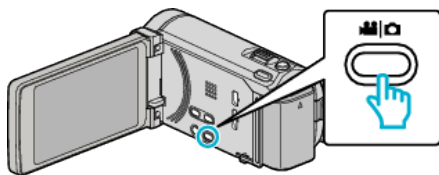


- 2 Tap to select the playback mode.

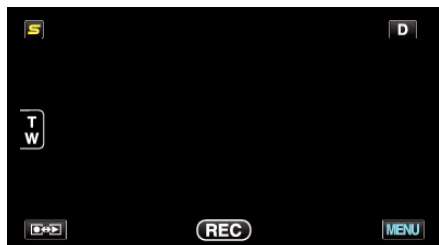

- 3 Tap "MENU".



- 4 Tap "PROTECT/CANCEL".

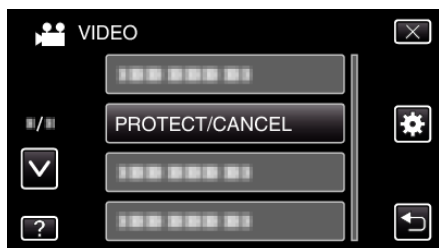

- 5 Tap on the files to protect or release protection of.



- ✓ appears on the selected files.
To remove ✓ from a file, tap on the file again.
- and ✓ are displayed on the files that are already protected.
To release protection of a file, tap on the file such that ✓ is removed.
- Tap "SEL ALL" to select all files.
- Tap "REL ALL" to release all selections.



- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first

recorded file is shown and the group is displayed with a green frame. When this is tapped, an index screen of the grouped files appears. Tap on the files to protect or release protection of, then tap .

- When using an Eye-Fi card, if the transfer mode of Eye-Fi Helper is set to "Selective Share" or "Selective Transfer", will be displayed.

- 6 Tap "SET" to complete the setting.



- Protect marks appear on the selected files.
Protect marks disappear from the deselected files.