

Optional Accessories

You can record for a longer time by using the optional battery pack.

Product Name	Description
Battery Pack <ul style="list-style-type: none"> • BN-VG114E • BN-VG121E • BN-VG138E 	<ul style="list-style-type: none"> • Provides a longer recording time. It can also be used as a spare battery pack.
Battery Charger <ul style="list-style-type: none"> • AA-VG1 	<ul style="list-style-type: none"> • Enables the battery pack to be charged without using this unit.
HDMI Cable <ul style="list-style-type: none"> • VX-HD310 • VX-HD315 • VX-HD320 • VX-HD330 	<ul style="list-style-type: none"> • For viewing in high picture quality. • Transmits video, audio, and control signals between devices.

Memo :

- The above optional accessories may not be supported in some regions.
- For more information, refer to the catalog.
- BN-VG114E is the same battery pack that comes with this unit.

Approximate Recording Time (Using Battery)

■ 3D Display on LCD Monitor (for GZ-HM960)

Battery Pack	Actual Recording Time	Continuous Recording Time
BN-VG114E (Supplied)	35 m	1 h
BN-VG121E	50 m	1 h 30 m
BN-VG138E	1 h 30 m	2 h 45 m

■ 2D Display on LCD Monitor (for GZ-HM960)

Battery Pack	Actual Recording Time	Continuous Recording Time
BN-VG114E (Supplied)	40 m	1 h 10 m
BN-VG121E	1 h	1 h 45 m
BN-VG138E	1 h 40 m	3 h 5 m

■ 2D Display on LCD Monitor (for GZ-HM845)

Battery Pack	Actual Recording Time	Continuous Recording Time
BN-VG114E (Supplied)	40 m	1 h 15 m
BN-VG121E	1 h 5 m	1 h 55 m
BN-VG138E	1 h 55 m	3 h 25 m

- The above are values when "LIGHT" is set to "OFF" and "MONITOR BRIGHTNESS" is set to "3" (standard).
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.
(Replace the battery pack with a new one.)