

FORMAT SD CARD

Deletes all files on the SD card.

| Setting                    | Details                                                                         |
|----------------------------|---------------------------------------------------------------------------------|
| FILE                       | Deletes all files on the SD card.                                               |
| FILE +<br>MANAGEMENT<br>NO | Deletes all files on the SD card and resets the folder and file numbers to "1". |

Caution :

- Not available for selection when no SD card is inserted.
- All data on the card will be deleted when it is formatted.  
Copy all files on the card to a computer before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.

Displaying the Item

1 Tap "MENU".



2 Tap "⚙️".



3 Tap "FORMAT SD CARD".

