


Main Menu for Still Image Playback

You can delete or look for specific still images.

1 Select still image mode.

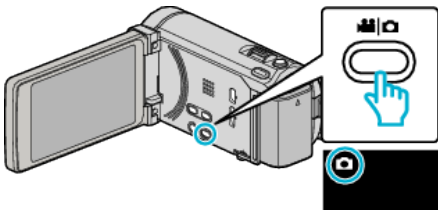

2 Tap to select the playback mode.



- The mode changes between recording and playback with every tap.

3 Tap "MENU".



Setting	Details
SEARCH DATE	You can search and play videos or still images according to recording dates.
SLIDE SHOW EFFECTS (for GZ-HM845)	Sets the transition effects in slideshow playback.
PROTECT/CANCEL	Protects files from being deleted accidentally.
COPY	Copies files from the built-in memory to the SD card.
MOVE	Moves files from the built-in memory to the SD card.
STILL IMAGE TRANSFER	When Bluetooth connection is established with a BIP/OPP-compliant device, you can transfer recorded still image data to this device.