Common Recording Indications



- **1** TOUCH PRIORITY AE/AF
- 2 Backlight Compensation
- 3 Auto REC
- 4 Tele Macro
- 5 Scene Select
- 6 White Balance
- 7 Time
- 8 Smile Shot
- 9 Media
- 10 Battery Indicator
- 11 Continuous Shooting
- 12 Recording Mode
- 13 Radio Reception Status (for GZ-HM960)
- 14 GPS Communication Status (for GZ-HM960)
- 15 Focus Assist
- 16 Zoom
- 17 Focus
- 18 APERTURE PRIORITY
- 19 Brightness
- 20 Shutter Speed