
ERASE ALL DATA

Execute this process when disposing of this unit or passing it to another person.


7 Tap "MENU".

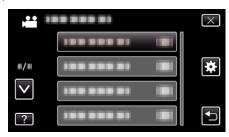

2 Tap "♣".



3 Tap "ERASE ALL DATA".

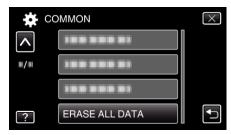

4 Tap "YES".



• After deleting is complete, tap "OK".

Caution:-

• Connect the AC adapter when erasing all data on the built-in memory. Erasing cannot be performed if the AC adapter is not connected.

Memo:

• Repeat the process to make data restoration even more difficult.