 



Playing Back Still Images

You can select and play back the recorded still images from an index screen (thumbnail display).

- 1 Select still image mode.

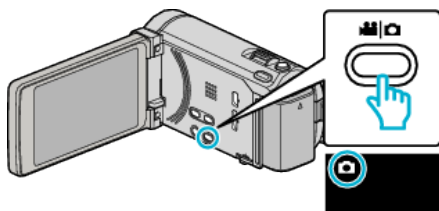

 - 2 Tap to select the playback mode.

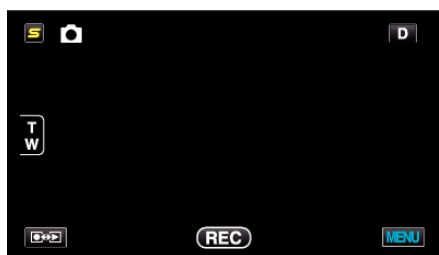


- 3 Tap on the file to start playback.



- Tap to select the media for playback.
- Tap to return to the index screen.
- The button on the index screen is only displayed during still image playback. Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together and displayed with a green frame on a separate index screen. The index screen changes between the normal index screen and group index screen with every tap of the button.

Operation Buttons for Still Image Playback

 
During Index Screen Display

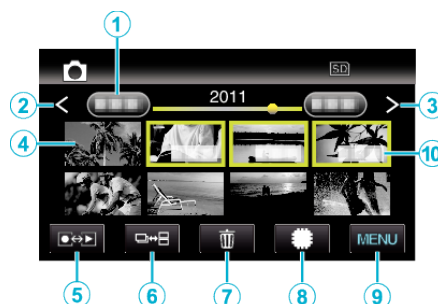

- Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together. Only the first recorded file is shown and the group is displayed with a green frame.

	Display	Description
①	Date	Moves to the previous/next date
②	<	Displays the previous index screen (thumbnail display) <ul style="list-style-type: none"> • You can perform the same operation with the zoom lever.
③	>	Displays the next index screen (thumbnail display) <ul style="list-style-type: none"> • You can perform the same operation with the zoom lever.
④	Thumbnail (File)	Tap on thumbnail - Starts playback Drag to right - Scrolls to the right to show the previous index screen (thumbnail display) Drag to left - Scrolls to the left to show the next index screen (thumbnail display)
⑤	Recording/Playback Mode 	Switches between recording and playback modes.
⑥		Still images that are recorded continuously within 2 seconds or with the continuous shooting mode will be grouped together and displayed with a green frame on a separate index screen. The index screen changes between the normal index screen and group index screen with every tap of the button.
⑦		Displays the index screen (thumbnail display) to perform deletion
⑧		Switches between the index screen of the built-in memory and SD card
⑨	MENU	Displays the menu screen
⑩	Recording Date	Recording date (only displayed on the first file of each date)

 During Still Image Playback

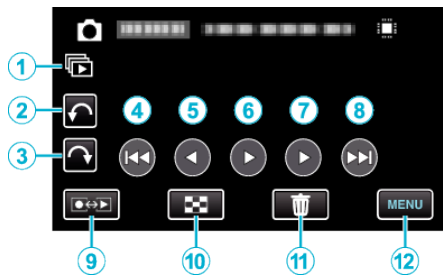

	Display	Description
①		Continuous playback of grouped files (such as still images captured by continuous shooting).
②		Rotates to the left (rotates by -90° with each tap)
③		Rotates to the right (rotates by 90° with each tap)
④		Returns to the previous still image
⑤		Reverse playback during slideshow
⑥		Starts/pauses slideshow
⑦		Normal playback during slideshow
⑧		Advances to the next still image
⑨	Recording/ Playback Mode 	Switches between recording and playback modes.
⑩		Returns to index screen
⑪		Displays the index screen (thumbnail display) to perform deletion
⑫	MENU	Displays the menu screen

Memo :

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 5 seconds. Tap on the screen to display the operation buttons again.
- You can rotate a still image 90° to the right or left during playback. Rotation applies to the on-screen display only.
- You can search for a specific file by the recording date. This is useful when searching from a large number of files.

Caution :

- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.