

SEAMLESS RECORDING


Continues recording on the SD card without stopping when the remaining space on the built-in memory runs out.

Setting	Details
OFF	Does not switch recording media automatically.
ON	Switches recording media automatically.

- Memo :**
- Seamless recording cannot be performed if there is not enough free space in the SD card.
 - To start seamless recording again after the previous session is complete, it is necessary to combine seamless videos, or delete the combination information of the seamless videos.

Displaying the Item

1 Select video mode.

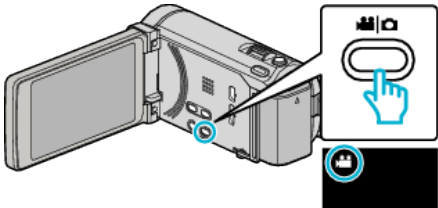

2 Tap "MENU".



3 Tap "SEAMLESS RECORDING".

