 


Playing Back Videos

You can select and play back the recorded videos from an index screen (thumbnail display).

1 Select video mode.

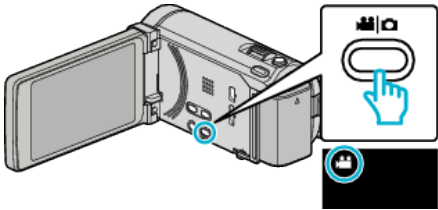

2 Tap to select the playback mode.



 
3 Tap on the file to start playback.



- Tap to select the media for playback.
- Tap to pause.
- Tap to return to the index screen.


Operation Buttons for Video Playback

During Index Screen Display

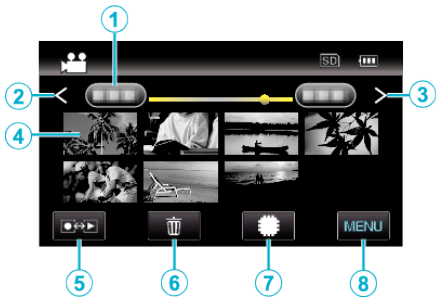

	Display	Description
①	Date	Moves to the previous/next date
②	<	Displays the previous index screen (thumbnail display) <ul style="list-style-type: none"><li>• You can perform the same operation with the zoom lever.</li></ul>
③	>	Displays the next index screen (thumbnail display) <ul style="list-style-type: none"><li>• You can perform the same operation with the zoom lever.</li></ul>
④	Thumbnail (File)	Tap on thumbnail - Starts playback Drag to right - Scrolls to the right to show the previous index screen (thumbnail display) Drag to left - Scrolls to the left to show the next index screen (thumbnail display)
⑤	Recording/Playback Mode 	Switches between recording and playback modes.
⑥		Displays the index screen (thumbnail display) to perform deletion
⑦		Switches between the index screen of the built-in memory and SD card
⑧	MENU	Displays the menu screen

 During Video Playback

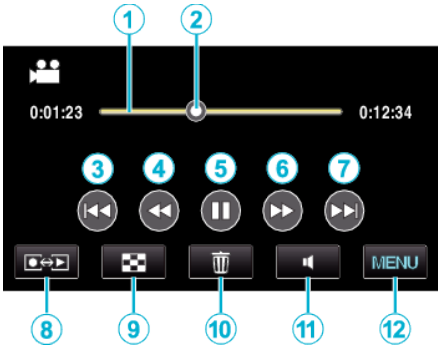

	Display	Description
①	Timeline Bar	Tap on a random position - Moves to the tapped position Drag playback point to the left or right - Starts playback from the new position
②	Pointer	Displays the current estimated playback position within the scene
③	⏮	Returns to the beginning of the scene
④	⏮	Reverse search
④	⏮	Reverse slow-motion / Press and hold to start reverse slow playback
⑤	▶/⏸	Playback/pause
⑥	⏭	Forward search
⑥	⏭	Forward slow-motion / Press and hold to start slow playback
⑦	⏭	Advances to the next video
⑧	Recording/Playback Mode 📹/▶	Switches between recording and playback modes.
⑨	⏹	Stop (returns to index screen)
⑩	🗑	Displays the index screen (thumbnail display) to perform deletion
⑪	🔊	Volume adjustment
⑫	MENU	Displays the menu screen

Memo :

- Tap or drag on the operation area of the touch screen.
- Operations buttons on the touch screen disappear if the unit is not operated for about 5 seconds. Tap on the screen to display the operation buttons again.
- You can search for a specific file by the recording date.

 
Caution :

- Make a backup of important recorded data.  
It is recommended to copy your important recorded data to a DVD or other recording media for storage.
- This unit is a microcomputer-controlled device. Electrostatic discharge, external noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such a case, turn off the power, then remove the AC adapter and battery pack. This unit will be reset.
- 

Adjusting the Volume of Videos

You can tap on the volume adjustment button to control the volume.


1 Tap 🔊.

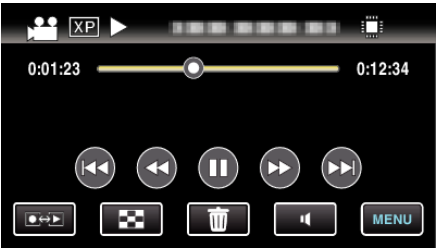

2 Tap “+” or “-”.



 - Volume can also be adjusted using the zoom lever during playback.



- Tap X to exit volume adjustment.
- Volume adjustment is disabled when an AV cable (audio/video) or HDMI cable is connected.

Checking the Recording Date and Other Information

1 Pause the playback and press the INFO button.

You can display the recording date and duration of the selected file.

