

---

## CLOCK ADJUST

Resets the current time or sets to the local time when using this unit overseas.  
Operating Details