

### The motion is choppy.

Use a high speed SD card (Class 4 or higher).

Clean the terminals of the SD card with a dry cotton swab or something similar.

Execute "FORMAT SD CARD" in the "COMMON" menu. (All data will be deleted.)

Verify the system requirements of your PC when using Everio MediaBrowser 3 (3 BE) to play back.