## Preparing an External Blu-ray Drive

## Memo:


When connecting to the external Blu-ray drive, use a USB cable with Mini-A (Male) – B (Male) connectors.

The USB cable provided with this unit cannot be used.

• To use the USB cable provided with the external Blu-ray drive, purchase the USB extension cable.

Mini-A (Male) – A (Female) (Part number: QAM0852-001)

- 1 Connect the USB cable and the AC adapter.
  - $\bullet$  Turn off the camcorder by pressing the  $\ensuremath{\mbox{0}}$  button for about 2 seconds.

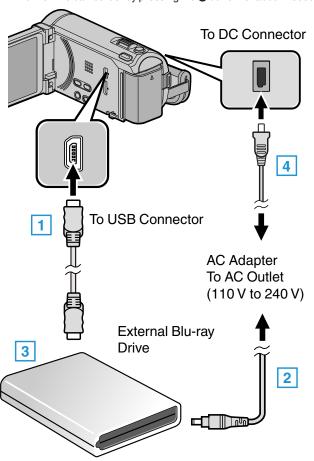

- 1 Connect the USB cable of the external Blu-ray drive to this unit.
- 2 Connect the AC adapter of the external Blu-ray drive.
- 3 Turn on the external Blu-ray drive.
- 4 Connect the AC adapter to this unit.
  - This unit powers on automatically when the AC adapter is connected.
  - This unit turns on and the "BACK-UP" menu appears.
  - While the USB cable is connected, the "BACK-UP" menu is displayed.
  - $\bullet\,$  Refer also to the instruction manual of the external Blu-ray drive.

## 2 Insert a new disc.

 Press the power button on the external Blu-ray drive to turn on the power.



- 1 Press the eject button to open the disc tray.
- 2 Load a new disc properly.
- 3 Press the eject button to close the disc tray.

## Caution:

Be sure to turn off the power when connecting the devices.

Otherwise, electric shocks or malfunctions may occur.