

SHUTTER MODE


Continuous shooting settings can be adjusted.

Setting	Details
RECORD ONE SHOT	Records one still image.
CONTINUOUS SHOOTING	Records still images continuously while the SNAPSHOT button is pressed.
BRACKETING	Records 5 images with varying brightness continuously when the SNAPSHOT button is pressed. <ul style="list-style-type: none"><li>- Normal brightness</li><li>- Dark (-0.6EV)</li><li>- Slightly dark (-0.3EV)</li><li>- Slightly bright (+0.3EV)</li><li>- Bright (+0.6EV)</li></ul>

- Memo :**
- The continuous shooting speed can be changed.
  - Continuous shooting and bracketing are not available when image size is set to 3,968 x 2,976.
  - Some SD cards may not support continuous shooting.
  - The continuous shooting speed will drop if this function is used repeatedly.

Displaying the Item

- 1 Select still image mode.

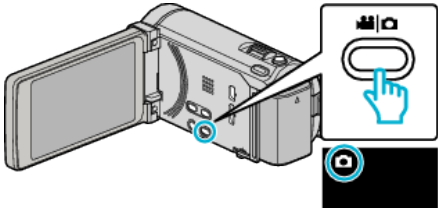

- 2 Tap "MENU".



- 3 Tap "SHUTTER MODE".

