 


## TOUCH SCREEN ADJUST

Adjusts the response position of the buttons on the touch screen.

 
- 1 Tap "MENU".

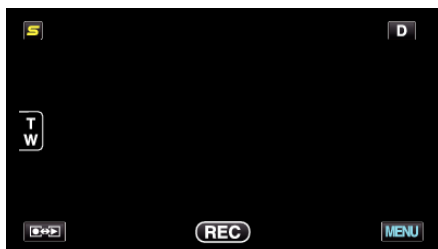

- 2 Tap "⚙️".



- 3 Tap "TOUCH SCREEN ADJUST".

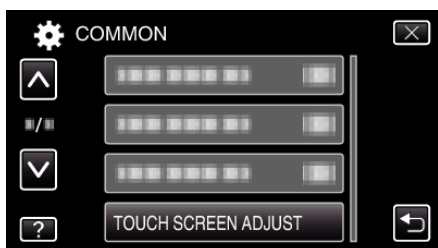


- The touch screen adjustment screen appears.

- 4 Tap "+". (3 times in total)




- Keep tapping "+" as its position changes with every tap.

 - 5 Tap "+" again to confirm the adjusted positions. (3 times in total)

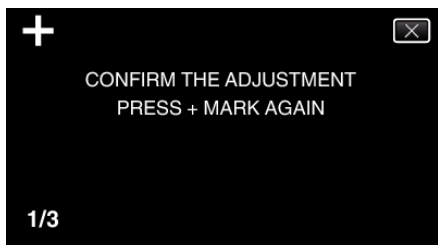

- Keep tapping "+" as its position changes with every tap.
- If areas on the adjustment screen other than the "+" mark are tapped, errors will occur. In this case, try again from step 4.

 - 6 Tap "OK".

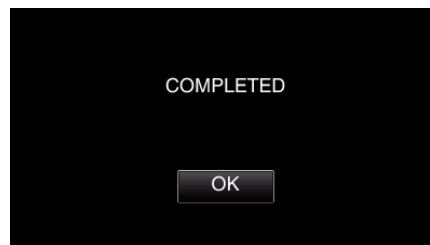

- Setting ends and returns to the menu screen.

### Caution :

- Do not tap areas other than the "+" mark during touch screen adjustment (steps 4 - 5). Doing so may cause the touch screen to malfunction.

### Memo :

- Adjust by lightly tapping with a corner of an SD card, etc.
- Do not press with an object with a sharp tip or do not press hard.