

Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

1 Tap "MENU".




2 Tap "SCENE SELECT".



- Tap ^ or v to move upward or downward for more selection.
- Tap X to exit the menu.
- Tap ↶ to return to the previous screen.

3 Tap the appropriate scene.

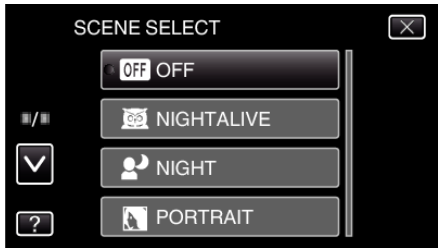

- Tap "OFF" to cancel the selection.
- Tap ^ or v to move upward or downward for more selection.
- Tap X to exit the menu.
- Tap ↶ to return to the previous screen.

*The image is only an impression.

Setting	Effect
NIGHTALIVE	Increases gain and brightens the scene automatically using a slow shutter when the surrounding is dark. To prevent camera shake, use a tripod. <div><div>OFF</div><div>ON</div></div>
NIGHT	Captures night scenes naturally. <div><div>OFF</div><div>ON</div></div>
PORTRAIT	Blurs the background to bring out the people in the picture. <div><div>OFF</div><div>ON</div></div>
SPORTS	Captures fast-moving subjects clearly in every single frame. <div><div>OFF</div><div>ON</div></div>
SNOW	Prevents the subject from appearing too dark when recording snow scenes on a sunny day. <div><div>OFF</div><div>ON</div></div>
SPOTLIGHT	Prevents the human subject from appearing too bright under light. <div><div>OFF</div><div>ON</div></div>

Memo : _____

- All scenes of "SCENE SELECT" cannot be set during "TIME-LAPSE RECORDING".