Preparing a USB External Hard Disk Drive


Memo:

 When connecting to the external hard disk drive, use a USB cable with Mini-A (Male) – B (Male) connectors.
 The USB cable provided with this unit cannot be used.

• To use the USB cable provided with the external hard disk drive, purchase the following USB extension cable.

Mini-A (Male) – A (Female) (Part number: QAM0852-001)

- 1 Connect the USB cable and the AC adapter.
 - Turn off the camcorder by pressing the **b** button for about 2 seconds.

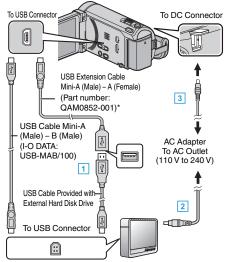

- * The AC adapter shown in the illustration is AC-V10M.
- 1 Connect the USB cable with the USB external hard disk drive.
- 2 Connect the AC adapter of the USB external hard disk drive.
- 3 Connect the AC adapter to this unit.
 - $\bullet\,$ This unit powers on automatically when the AC adapter is connected.
 - This unit turns on and the "BACK-UP" menu appears.
 - While the USB cable is connected, the "BACK-UP" menu is displayed.
 - Refer also to the instruction manual of the external hard disk drive.
- 2 Turn on the external hard disk drive.

Caution: -

- Be sure to turn off the power when connecting the devices.
 Otherwise, electric shocks or malfunctions may occur.
- Do not connect a USB hub between this unit and the USB external hard disk drive.