 



Deleting Playlists

Delete the playlists that you have created.


- 1 Select the playback mode.

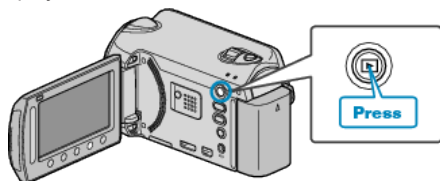

 
- 2 Select video mode.

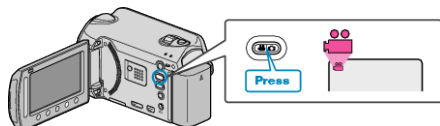

- 3 Touch **MENU** to display the menu.

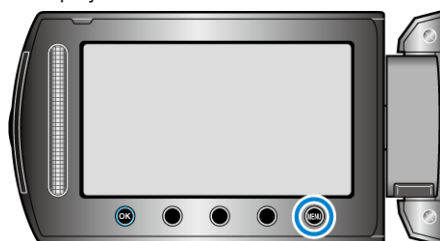 

 - 4 Select "EDIT PLAYLIST" and touch **OK**.

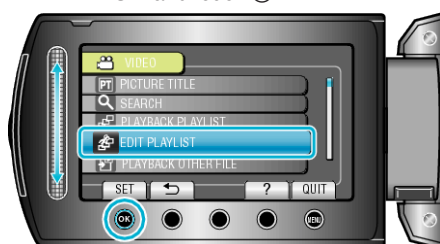

- 5 Select "DELETE" and touch **OK**.

 


- 6 Select the playlist you want to delete and touch **OK**.



- All created playlists will be deleted when "DELETE ALL" is selected.

- 7 Select "YES" and touch **OK**.

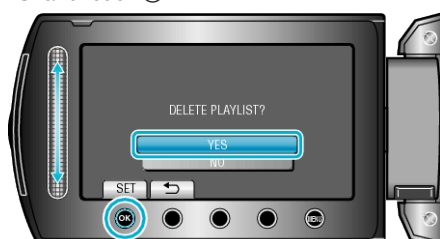

- After deleting, touch **OK**.
- To exit the screen, touch **MENU**.