


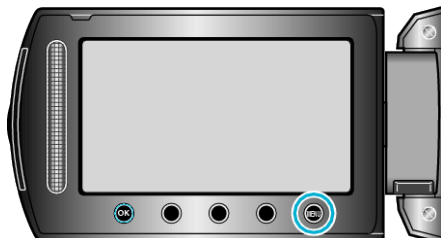
RECORD BUTTON

Displays the "REC" button on the LCD monitor and enables it to be used as the START/STOP button.

Setting	Details
OFF	No display.
ON	Displays the REC button on the LCD monitor.

Displaying the Item

- 1 Touch  to display the menu.



- 2 Select "BASIC SETTINGS" and touch .



- 3 Select "RECORD BUTTON" and touch .

