

**FORMAT HDD**

Deletes all files on the HDD.


Setting	Details
FILE	Deletes all files on the HDD.
FILE + MANAGEMENT NO	Deletes all files on the HDD and resets the folder and file numbers to "1".


- After formatting, touch .

**Caution :**

- All data on the HDD will be deleted when it is formatted.  
Copy all files on the HDD to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.

**Displaying the Item**

- 1 Touch  to display the menu.

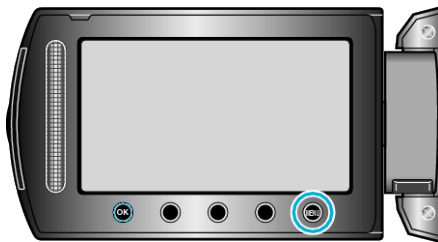


- 2 Select "MEDIA SETTINGS" and touch .



- 3 Select "FORMAT HDD" and touch .



- 4 Select the setting and touch .

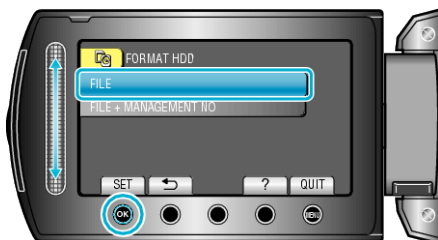

- 5 Select "YES" and touch .

