
PLAYBACK FAILED

Remove and re-insert the microSD card.
Remove any dirt from the microSD card terminals.
Insert the microSD card before turning on the power.
Do not subject this unit to strong impact/vibrations.