 



Protecting the Currently Displayed File

Protects or releases protection of the currently displayed file.


- 1 Select the playback mode.

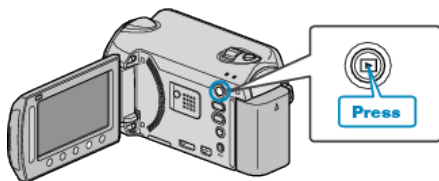

 - 2 Select video or still image mode.

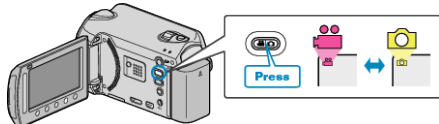

- 3 Touch to display the menu.

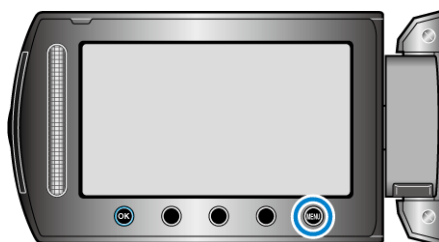 

- 4 Select "EDIT" and touch .



- 5 Select "PROTECT/CANCEL" and touch .



- 6 Select "CURRENT" and touch .



- 7 Check that it is the file to protect or release protection of, select "YES" and touch .



- The file to protect or release protection of appears on this screen.
- Touch the operation buttons "←" / "→" to select the previous or next file.
- After setting, touch .
- To exit the screen, touch .