



Changing the Event of the Currently Displayed File

Checks and changes the event of the currently displayed file.


1 Select the playback mode.

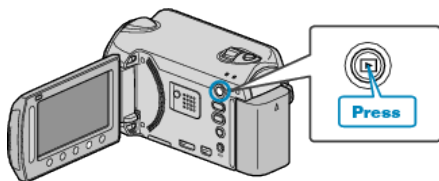

2 Select video mode.

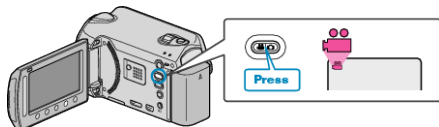

3 Touch to display the menu.

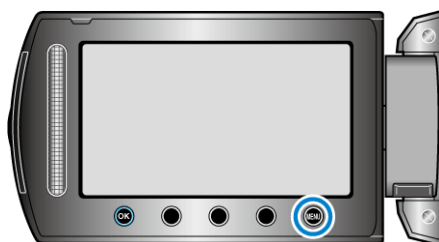 

4 Select "EDIT" and touch .



5 Select "CHANGE EVENT REG." and touch .



6 Select "CURRENT" and touch .



7 Select the file you want to register and touch .



• The file to register appears on this screen.

• Touch the operation buttons "←" / "→" to select the previous or next file.

8 Select a new event and touch .



• You can cancel the registered event by touching "CANCEL".

• After setting, touch .

• To exit the screen, touch .