


SLIDE SHOW EFFECTS

Effects can be added to the transitions in slideshow playback.


Setting	Details
SLIDE	Switches the screen by sliding in from right to left.
BLINDS	Switches the screen by dividing into vertical strips.
CHECKERBOARD	Switches the screen by changing through a checkered pattern.
RANDOM	Switches the screen with a random effect from "SLIDE", "BLINDS", and "CHECKERBOARD".

Displaying the Item


- 1 Select the playback mode.

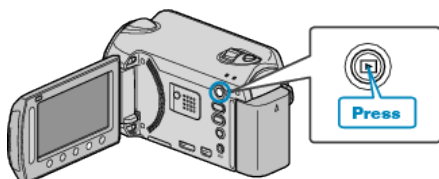

- 2 Select still image mode.

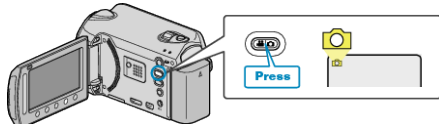

- 3 Touch \odot to display the menu.

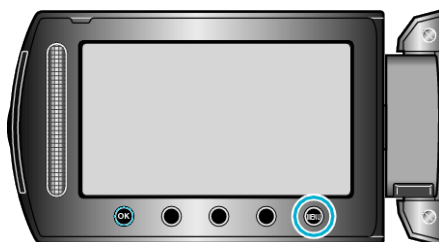

- 4 Select "SLIDE SHOW EFFECTS" and touch \odot .

