

FORMAT SD CARD

Deletes all files on the microSD card.


Setting	Details
FILE	Deletes all files on the microSD card.
FILE + MANAGEMENT NO	Deletes all files on the microSD card and resets the folder and file numbers to "1".


Caution :

- Not available for selection when no microSD card is inserted.
- All data on the card will be deleted when it is formatted.
Copy all files on the card to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.
- Format a newly purchased microSD card with this unit before use.

- After formatting, touch .

Displaying the Item

- 1 Touch  to display the menu.

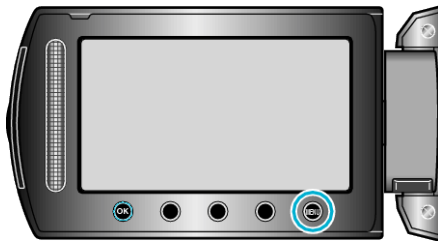


- 2 Select "MEDIA SETTINGS" and touch .



- 3 Select "FORMAT SD CARD" and touch .



- 4 Select the setting and touch .

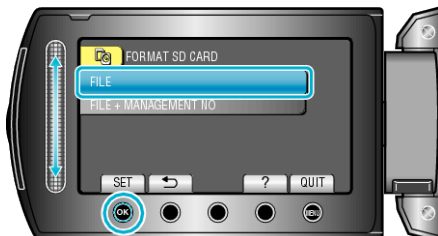

- 5 Select "YES" and touch .

