 



Changing the Event of the Selected Files

Changes the event of multiple files by specifying a range.


- 1 Select the playback mode.

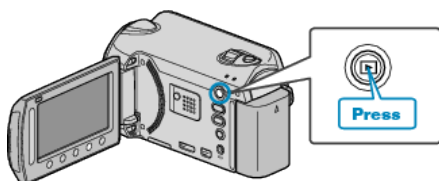

 - 2 Select video mode.

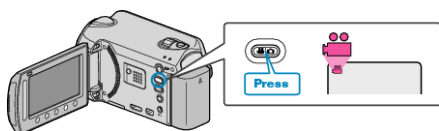

- 3 Touch to display the menu.

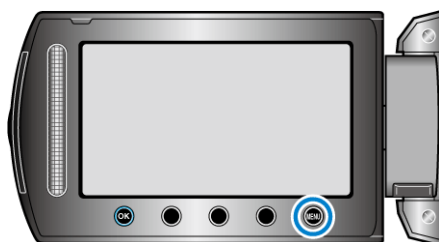 

- 4 Select "EDIT" and touch .



- 5 Select "CHANGE EVENT REG." and touch .



- 6 Select "TO RESET RANGE" and touch .



- 7 Select the first file of the range and touch .



- Touch "CHECK" to check the selected file.

- 8 Select the last file of the range and touch .



- Touch "CHECK" to check the selected file.

- 9 Select a new event and touch .



- You can cancel the registered event by touching "CANCEL".
- After setting, touch .
- To exit the screen, touch .