
RECORDING CANCELLED

Set "REC MEDIA FOR VIDEO" to "SD", then record to a microSD card.

Turn off the unit, and turn it on again.

Protect the unit from vibration and shock.