

Optional Accessories

Product Name	Description
Battery Pack <ul style="list-style-type: none"> • BN-VG114E • BN-VG121E • BN-VG138E 	<ul style="list-style-type: none"> • Provides a longer recording time than the battery pack that comes with this unit. It can also be used as a spare battery pack.
Battery Charger <ul style="list-style-type: none"> • AA-VG1 	<ul style="list-style-type: none"> • Enables the battery pack to be charged without using this unit.
Component Cable <ul style="list-style-type: none"> • QAM1266-001 	<ul style="list-style-type: none"> • For viewing in high picture quality.

Memo :

- For more information, refer to the catalog.
- BN-VG114E is the same battery pack that comes with this unit.

Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time*	Continuous Recording Time*
BN-VG114E (Supplied)	50 m	1 h 30 m
BN-VG121E	1 h 15 m	2 h 15 m
BN-VG138E	2 h 15 m	4 h 5 m

* The above are values when "LCD BACKLIGHT" is set to "STANDARD".

Battery Pack	Actual Recording Time*	Continuous Recording Time*
BN-VG114E (Supplied)	45 m	1 h 25 m
BN-VG121E	1 h 10 m	2 h 10 m
BN-VG138E	2 h 5 m	3 h 50 m

* The above are values when "LCD BACKLIGHT" is set to "BRIGHTER".

- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.
(Replace the battery pack with a new one.)