 


Combining Videos Recorded by Seamless Recording

 
Videos that are recorded on two separate media and with "SEAMLESS RECORDING" in the video recording menu enabled can be combined into a single video.

1 Open the LCD monitor.

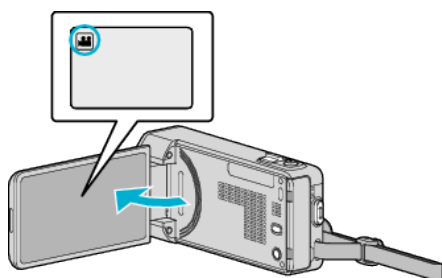


- Check if the recording mode is .
- If the mode is still image, tap on the recording screen to display the mode switching screen. Tap to switch the mode to video.


2 Tap "<<PLAY" to select the playback mode.

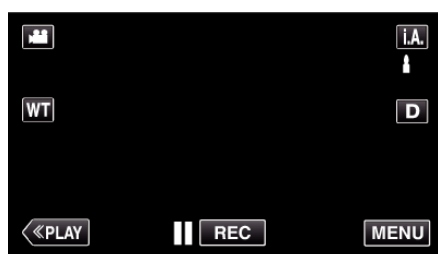

3 Tap "MENU".

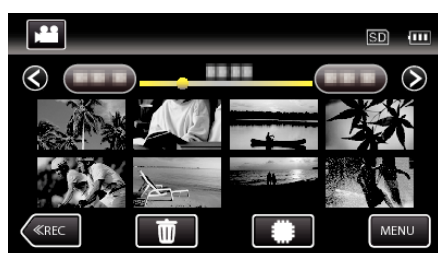 

4 Tap "SEAMLESS REC CTRL".

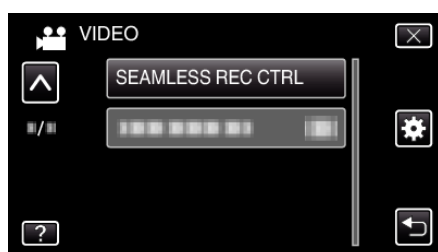 


5 Tap "COMBINE SCENES".




- This unit starts a search to detect seamless videos. Combining cannot be performed if no seamless videos are found.

 6 Tap "YES".

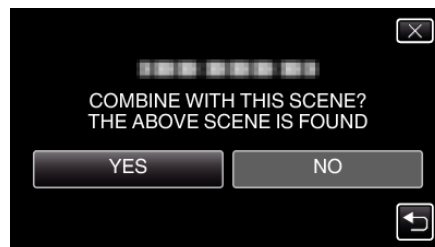

7 Tap the media to store to.

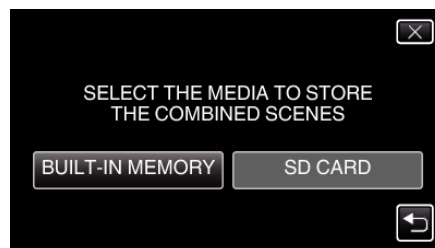 

8 Tap "YES".



- Combining of the videos starts.
- After videos are combined, tap "OK".

Memo : _____
 • Seamless videos cannot be combined if there is not enough free space in the built-in memory or SD card. Check the amount of remaining free space before combining.

How to Enable Seamless Video Recording Again

To start seamless recording again after the previous session is complete, it is necessary to combine seamless videos, or delete the combination information of the seamless videos.

To delete the combination information of seamless videos, select "DEL COMBINED SCENES" in step 5.