

JVC


HD MEMORY CAMERA

Detailed User Guide

GZ-HM430

GZ-HM50

GZ-HM30

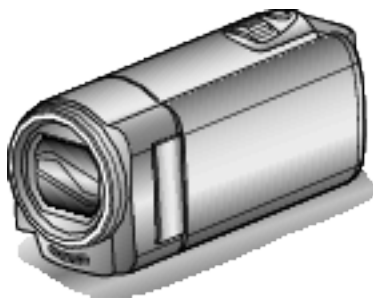

Everio

Table of Contents

Beginner's Guide 4

| | |
|--------------------------------|---|
| Charging | 4 |
| Recording | 4 |
| Playback | 4 |
| Shooting Tips | 4 |
| Holiday Season/Christmas | 5 |
| Wedding | 6 |
| Travel | 7 |
| Amusement Park | 9 |

Getting Started

| | |
|--|----|
| Key Features | 10 |
| Model Differences | 10 |
| Verifying the Accessories | 11 |
| Charging the Battery Pack | 12 |
| Charging with USB Cable | 13 |
| Grip Adjustment | 14 |
| Using as a Hand Strap | 14 |
| Inserting an SD Card | 14 |
| Types of Usable SD Card | 15 |
| Using an Eye-Fi Card | 15 |
| Turning On the Unit | 16 |
| Clock Setting | 16 |
| Resetting the Clock | 17 |
| Changing the Display Language | 18 |
| Holding this Unit | 19 |
| Tripod Mounting | 19 |
| Using this Unit Overseas | 19 |
| Charging the Battery Pack Overseas | 19 |
| Setting the Clock to Local Time when Traveling | 20 |
| Setting Daylight Saving Time | 20 |
| Optional Accessories | 21 |

Recording

| | |
|---|----|
| Taking Videos in Intelligent Auto Mode | 22 |
| Video Quality | 23 |
| Zooming | 24 |
| Manual Recording | 24 |
| Scene Selection | 25 |
| Adjusting Focus Manually | 26 |
| Adjusting Brightness | 27 |
| Setting White Balance | 28 |
| Setting Backlight Compensation | 29 |
| Taking Close-up Shots | 30 |
| Reducing Camera Shake | 31 |
| Capturing Human Subjects Clearly (Face Detection AE/AF) | 31 |
| Recording at Intervals (TIME-LAPSE RECORDING) | 32 |
| Recording Automatically by Sensing Movements (AUTO REC) | 34 |
| Remaining Recording Time/Battery Power | 35 |

Playback

| | |
|--|----|
| Playing Back Videos | 37 |
| Playing a Video with Defective Management Information | 38 |
| Searching for a Specific Video | 39 |
| Date Search | 39 |
| Connecting to and Viewing on TV | 40 |
| Connecting via the HDMI Mini Connector | 40 |
| Connecting via the Component Connector (GZ-HM30/GZ-HM50) | 42 |
| Connecting via the AV Connector | 43 |

Editing

| | |
|-------------------------------|----|
| Deleting Unwanted Files | 44 |
|-------------------------------|----|

| | |
|---|----|
| Deleting the Currently Displayed File | 44 |
| Deleting Selected Files | 45 |
| Deleting All Files | 46 |
| Protecting Files | 46 |
| Protecting the Currently Displayed File | 46 |
| Protecting Selected Files | 47 |
| Protecting All Files | 48 |
| Releasing Protection of All Files | 48 |
| Combining Videos Recorded by Seamless Recording (GZ-HM50) | 49 |

Copying

| | |
|--|----|
| Copying Files to Card (GZ-HM50) | 50 |
| Copying All Files (GZ-HM50) | 50 |
| Copying Selected Files (GZ-HM50) | 51 |
| Moving Files to Card (GZ-HM50) | 52 |
| Moving All Files (GZ-HM50) | 52 |
| Moving Selected Files (GZ-HM50) | 53 |
| Dubbing Files by Connecting to a DVD Recorder or VCR | 54 |
| Creating a Disc Using a Connected Blu-ray Recorder | 54 |
| Copying to Windows PC | 56 |
| Verifying System Requirements (Guideline) | 57 |
| Installing the Provided Software | 57 |
| Backing Up All Files | 58 |
| Organizing Files | 59 |
| Recording Videos to Discs | 60 |
| Backing Up Files Without Using Provided Software | 61 |
| List of Files and Folders | 62 |
| Copying to Mac Computer | 63 |

Menu Settings

| | |
|------------------------------------|----|
| Operating the Menu | 64 |
| Recording Menu (Video) | 65 |
| FACE PRIORITY AE/AF | 66 |
| DIS | 66 |
| GAIN UP | 67 |
| WIND CUT | 67 |
| TIME-LAPSE RECORDING | 67 |
| AUTO REC | 67 |
| VIDEO QUALITY | 68 |
| ZOOM | 69 |
| SEAMLESS RECORDING (GZ-HM50) | 69 |
| x.v.Color | 70 |
| CLOCK ADJUST | 70 |
| Manual Settings Menu | 71 |
| SCENE SELECT | 71 |
| FOCUS | 71 |
| BRIGHTNESS ADJUST | 71 |
| WHITE BALANCE | 71 |
| BACKLIGHT COMP. | 71 |
| TELE MACRO | 71 |
| Playback Menu (Video) | 72 |
| DELETE | 73 |
| PROTECT/CANCEL | 73 |
| COPY (GZ-HM50) | 73 |
| MOVE (GZ-HM50) | 73 |
| SEARCH DATE | 73 |
| PLAYBACK OTHER FILE | 73 |
| SEAMLESS REC CTRL (GZ-HM50) | 73 |
| CLOCK ADJUST | 73 |
| REC MEDIA SETTING (GZ-HM50) | 74 |
| ON-SCREEN DISPLAY | 74 |
| Display Settings Menu | 75 |
| LANGUAGE | 75 |
| DATE DISPLAY STYLE | 75 |
| MONITOR BRIGHTNESS | 76 |
| Basic Settings Menu | 77 |
| DEMO MODE | 77 |
| OPERATION SOUND | 78 |
| AUTO POWER OFF | 78 |

| | |
|--|----|
| QUICK RESTART | 79 |
| UPDATE | 79 |
| FACTORY PRESET | 79 |
| Connection Settings Menu | 80 |
| DISPLAY ON TV | 80 |
| VIDEO OUTPUT | 80 |
| COMPONENT OUTPUT (GZ-HM30/GZ-HM50) | 81 |
| HDMI OUTPUT | 81 |
| HDMI CONTROL | 82 |
| Media Settings Menu | 83 |
| FORMAT SD CARD | 83 |
| FORMAT BUILT-IN MEM. (GZ-HM50) | 84 |
| ERASE ALL DATA (GZ-HM50) | 85 |

Names of Parts

| | |
|-------------------|----|
| Front | 86 |
| Rear | 86 |
| Bottom | 87 |
| Interior | 87 |
| LCD Monitor | 88 |

Indications on the LCD monitor

| | |
|-----------------------|----|
| Video Recording | 88 |
| Video Playback | 89 |

Troubleshooting

| | |
|-----------------------|----|
| Battery Pack | 90 |
| Recording | 90 |
| Card | 91 |
| Playback | 91 |
| Editing/Copying | 92 |
| Computer | 92 |
| Screen/Image | 93 |
| Other Problems | 93 |
| Error Message? | 94 |

Maintenance

95

Specifications

96

Charging

- Refer to the operating instructions found in the animation on the Detailed User Guide.

Recording

- Refer to the operating instructions found in the animation on the Detailed User Guide.

Playback

- Refer to the operating instructions found in the animation on the Detailed User Guide.

Shooting Tips

Basic Way to Hold a Camcorder ~ Recording Stable Images ~



This is the standard way of shooting while standing up. Be sure to master this basic technique in order to achieve stable images.

■ [Getting Ready]

- 1 Open your feet to the width of your shoulders.
- 2 Keep the elbow of your right arm, which is holding the camcorder, close to your side.
- 3 Hold the LCD monitor with your left hand and adjust the angle accordingly.

Extending Your Hands to Shoot ~ High-Angle Shooting ~



Extend your hand when your subject is being hidden behind a crowd of people.

■ [Getting Ready]

- 1 Open your feet to the width of your shoulders.
- 2 Extend your right hand and hold the camcorder over your head.
- 3 Hold the LCD monitor with your left hand and adjust the angle accordingly.

Caution :

- Use this way of shooting only as a last resort as it is difficult to achieve stable images.
- Set to the wide angle as much as possible as the image will be prone to camera shake.
- Be considerate. Do not inconvenience the people around you.

Squatting and Shooting at Eye Level



Staying low is a common position to take when shooting small children. By recording from the eye level of the child, you can capture all his cute expressions clearly.

■ [Getting Ready]

- 1 Kneel down with your left knee while keeping your right foot on the ground.
- 2 Place the elbow of your right arm, which is holding the camcorder, on your right knee.
- 3 Hold the LCD monitor with your left hand and adjust the angle accordingly.

Panning

- Refer to the operating instructions found in the animation on the Detailed User Guide.

Use this method to shoot a wide angle of view.

■ [Getting Ready]

- 1 Shoot by rotating your body instead of moving your arms while keeping the basic way of holding a camcorder as stated above.
- 2 Stand facing the direction where the rotation will stop.
- 3 Twist your upper body to the direction where recording will start.
- 4 Press the start button and record for 2 seconds, then slowly twist back your body to face the front.
Record for another 2 seconds while facing the front, then press the stop button.
(The 90 degrees rotation should take about 5 seconds, giving the feeling of a slow motion.)

Holiday Season/Christmas

Record the happy Christmas celebration with your family!



Decorating the Tree and Preparing the Dinner

The decoration of tree and preparation of dinner are part of the joy of Christmas. Be sure to record these happy family times!

■ Decorating the tree



A tree is the most important thing to bring out the mood of Christmas. Simply the scene of all family members engaging in the decorating of a fir tree with various colorful ornaments is full of the feeling of happiness.

■ Preparing the Dinner



Record the scenes as everyone helps to prepare the feast of the night. You can film the mother who is cooking, the children who are helping, and of course, the process of making a cake!

Recording the Christmas Party



After all preparations, it is finally the Christmas party itself. Not only should you record the candle-blowing scene, but also the smiles of the family while being surrounded by good food, or even the father who is slightly drunk from champagne!

Finding the Presents



For children, the greatest joy of Christmas is receiving presents the next morning.

Their expression of delight when finding a present next to their pillow is a recording opportunity not to be missed. Get ready to shoot before the children wake up!

Wedding

Create an awesome wedding video for the bride and groom!



Discussing and Planning Before the Event

Before the day of the wedding reception, it is important to discuss with the bride and groom about various details such as the order of the ceremony and whether there are any entertainment programs or change of clothes. By understanding the preferences of the bride and groom, you will be able to shoot more appropriately.

■ Finding out the route of entrance



The highlight of a wedding reception is the entrance of the bride and groom. Find out which door they will enter from and the route they will take from the person-in-charge of the wedding hall in advance. Set up the tripod at a place where you can follow the couple using zoom without having to move around.

■ Number of times and timing of clothes-changing

Find out the timing of any changing of clothes so as to capture the scene well when the bride and groom enter again. You can also make use the time while the bride and groom are changing to record comments of well wishes from the guests.

Finding the Right Angle to Capture Both Bride and Groom

■ Composing the picture with the groom in front and the guests at the back



The main characters of a wedding are of course the bride and groom. Record their expressions clearly during the toast, speech, entertainment programs, and other scenes.

Another recommendation is to capture the face shots of the guests, then pan towards the groom. Picture composition containing the crowd of guests only lacks fun, so be sure to pay attention to the shooting angle and size.

Recording the Expressions and Comments of Guests

■ Setting the shot from eye level to chest level



You can record comments from the guest by going around asking, "Please say a few words for the bride and groom". This can be done at the guests' waiting room, when the bride and groom are changing, or during the entertainment programs.

Closing Up on the Bride's Face During the Thank You Speech

The climax of the event finally comes during the bride and groom's thank you speech and presentation of flowers. The touching words of appreciation from the bride and tears of joy from the parents are scenes that must not be missed.

Start by closing up on the bride's face using zoom. As the tears start to form in the bride's eyes, continue shooting for a little longer. Then, slowly zoom out to the wide angle to show the parents who are moved by the speech.

Advanced Operation with Two Camcorders

If video-editing is to be done, record using two camcorders so that a video with varying scenes can be created. You can try asking a close friend who has a camcorder at home.

Set the borrowed camcorder on a tripod to focus on taking close-up shots of the bride and groom. In this way, the other camcorder can be moved around to record other scenes, enabling an interesting video with changing scenes to be created through editing and compilation.

As most people own at least a digital camera nowadays, even if you are really unable to find an extra camcorder, inserting still pictures to the video at various points is also a good way to add variety. Do give it a try!

■ <Camcorder 1>

Closing up on the bride and groom all the time



■ <Camcorder 2>

Recording the congratulatory messages from friends at the same time



Travel

Capture all the good times of your domestic or overseas trips!



Bringing the Necessary Equipment

The necessary things to bring on a trip depends on your traveling purpose and the destination.

For overseas trips in particular, you have to think about what to bring in accordance to the local conditions.

Here are some suggestions for your consideration.

■ Camcorder

Think about how many hours of shooting you will usually perform in a day. Be sure to prepare enough recording medium especially for long overseas trips.

If you are recording in SD cards, get ready the sufficient number of cards, including some for backup.

■ Battery Pack

Prepare a battery pack that is ready for double the expected recording time in a day. For example, if you plan to record for 2 hours a day, prepare a battery pack that is ready for 4 hours (actual recording time).

For a day trip, you can prepare a battery with low capacity but for a long trip, do prepare a few batteries with high capacities.

■ AC Adapter

The JVC AC adapter supports voltages from 100 V to 240 V, and hence can be used anywhere in the world.

Bring along the adapter if you are traveling for a long time. Charge the battery pack while sleeping so that you can record with full battery power the next day.

■ Power Plug Adapter



The shape of the power plug varies according to countries. Be sure to check the shape of the power plug beforehand, and bring the appropriate power plug adapter.

“Charging the Battery Pack Overseas” (☞ p. 19)

■ Battery Charger



Recording cannot be performed when an AC adapter is connected to the camcorder for battery charging.

You can bring an additional battery charger to charge battery packs if you plan to use the camcorder for recording at night. You can also charge multiple battery packs by using both the battery charger and this camcorder at the same time.

■ Tripod



A tripod is an essential item to take stable images. Select an appropriate tripod in accordance to your purpose and style of traveling, such as a compact one to be used on a table or one that is at least 1 m tall.

Recording the Excitement Before Departure

It may be a little abrupt to start your travel video at the destination suddenly. Record also the preparations prior to departure if it is a family trip, or the time when everyone is gathered at the meeting place if you are traveling with your friends.

For overseas trips, taking a shot of the signs and displays at the airport of the flight you are taking may be useful for future reference.



Useful Shooting Techniques

Using Pan at the Places of Interest

Tourists spots with beautiful scenery or historical sites are places that you would certainly want to record.

To capture the magnificence of a scene which cannot be fitted into a single frame, try the panning technique.

Refer to the "Shooting Tips" found in this website on how to use panning effectively.

In addition, you may also like to take a shot of the signs or monuments that can often be found at the tourist spots.



Showing Everyone Having a Good Time

When taking a video, it is rather dull to shoot only the scenery or historical sites.

Talk about your feelings while recording the breath-taking scenery of an attraction so that it will be an interesting scene to view later.

Amusement Park

Take more shots of the smiling faces of everyone in the family!



■ <Without backlight compensation>



Taking Videos of Moving Subjects



■ <With backlight compensation>



Scenarios with changes in body movement are suitable for taking videos. This includes situations where there are rapid changes in facial expressions or voices of surprise and delight.

*Some amusement parks do not allow passengers to perform any recording. Be sure to check beforehand.

- [Examples] Merry-go-round, go kart, coffee cup, etc.

Inducing Responses by Calling Out



Videos with no waving of hands nor laughter are not only dull when you view them later, but also put the capability of the audio-recording function of the camcorder to a waste.

When recording, induce more reactions by enthusiastically waving your hands or shouting out "Is it fun?" and the like.

Advanced Operation with Backlight Compensation

It is useful to make use of backlight compensation when the subject's face is in backlight or when the expression cannot be seen clearly. Increase the brightness of the whole image by setting "BACKLIGHT COMP." if the faces appear too dark. Even the expressions of faces under shadows can be captured brightly and clearly.

"Setting Details" (☞ p. 29)

Key Features

Key features of your camcorder

- 1 AVCHD Lite (1280x720p/720x480i) Video Recording (GZ-HM30/GZ-HM50)
AVCHD (1920x1080/1280x720) (GZ-HM430)
- 2 i.AUTO (Intelligent Auto Recording): Detects 12 types of pre-set scenes
- 3 Digital Image Stabilizer
- 4 40x Optical Zoom
- 5 Auto Recording: Automatically starts recording when subject enters the detecting area
- 6 Time-lapse Recording: Watch long hours of recording in a few seconds
- 7 Eye-Fi Card Ready: Upload Videos through your home Wi-Fi networks
- 8 HDMI, Component (GZ-HM30/GZ-HM50), USB, and AV Out connectors







Model Differences

Confirm the model name of your camcorder.

| Model | Recording Media | Built-in Memory | Seamless Recording | Copy/Move Files | Resolution | Picture Mode |
|----------|-------------------------------|-----------------|--------------------|------------------------------|------------|---|
| GZ-HM430 | SDHC/SDXC | - | - | - | 1920 HD | AVCHD (UXP/XP/SP/EP) Standard Definition (SSW/SEW) |
| GZ-HM50 | SDHC/SDXC/ Built-in Memory | 8 GB | Yes | Built-in memory → SD card | 720 HD | AVCHD Lite (LS/LE) Standard Definition (SSW/SEW/SS/SE) |
| GZ-HM30 | SDHC/SDXC | - | - | - | 720 HD | AVCHD Lite (LS/LE) Standard Definition (SSW/SEW/SS/SE) |

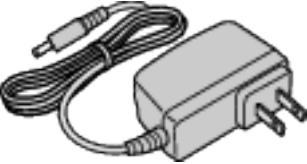Verifying the Accessories

If any of the items are missing or defective, consult your JVC dealer or the nearest JVC service center.
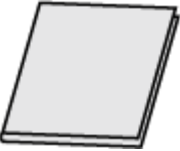
| Illustration | Description |
|---|--|
|  | <p>AC Adapter AC-V11U</p> <ul style="list-style-type: none"> Connects to this unit to charge the battery pack. It can also be used when recording or playing back videos indoors. |
|  | <p>Battery Pack BN-VG108U/BN-VG107U</p> <ul style="list-style-type: none"> Attaches to this unit to supply power. |
|  | <p>AV Cable</p> <ul style="list-style-type: none"> Connects this unit to a TV to play back recorded images on the TV. |
|  | <p>USB Cable (Type A - Mini Type B)</p> <ul style="list-style-type: none"> Connects this unit to a computer. |
|  | <p>CD-ROM</p> <ul style="list-style-type: none"> For installing the provided software Everio MediaBrowser on a computer. |
|  | <p>Basic User Guide</p> <ul style="list-style-type: none"> Read well and keep in a safe place where it can be accessed easily when necessary. |

Memo :

- SD cards are sold separately.

“Types of Usable SD Card” (p. 15)

“Using an Eye-Fi Card” (p. 15)

- When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.


“Charging the Battery Pack Overseas” (p. 19)

Charging the Battery Pack

Charge the battery pack immediately after purchase and when the remaining battery power is low.


The battery pack is not charged at the time of purchase.

1 Attach the battery pack.

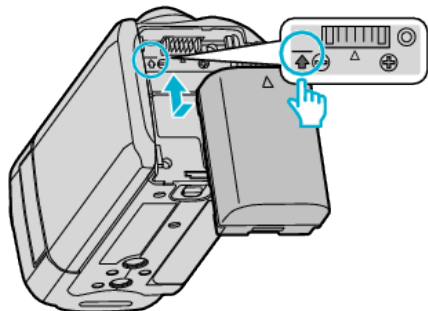


- Align the top of the battery with the mark on this unit, and slide in until the battery clicks into place.

2 Connect the AC adapter to the DC connector.

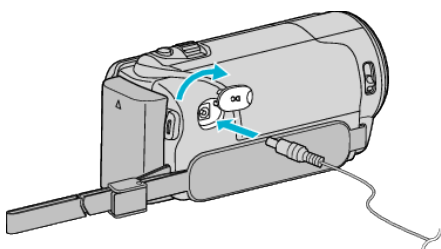

3 Plug in the power.

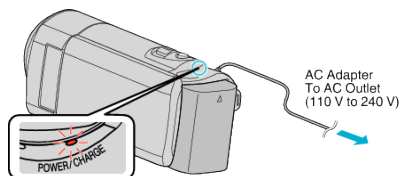

- The charging lamp blinks when charging is in progress. It goes out when charging is finished.

Caution :



Be sure to use JVC battery packs.

- If you use any other battery packs besides JVC battery packs, safety and performance cannot be guaranteed.
- Charging time: Approx. 2 h 10 m (BN-VG108U)/1 h 50 m (BN-VG107U) (using supplied battery pack)
The charging time is when the unit is used at 25°C (77°F). If the battery pack is charged outside the room temperature range of 10°C to 35°C (50°F to 95°F), charging may take a longer time or it may not start.
The recordable and playable time may also be shortened under some usage conditions such as at low temperature.

Be sure to use the supplied JVC AC adapter.

- If you use any other AC adapters besides the supplied JVC AC adapter, malfunctions may occur.

Rechargeable Batteries :

- When using the battery in a low temperature environment (10°C (50°F) or below), the operating time may be shortened, or it may not function properly. When using this unit outdoors in the winter weather, warm the battery, such as by placing it in the pocket, before attaching it. (Keep away from direct contact with a warm pack.)
- Do not expose the battery to excessive heat, such as direct sunlight or fire.
- After removing the battery, store it in a dry place between 15°C to 25°C (59°F to 77°F).
- Keep a 30 % battery level () if the battery pack is not to be used for a long period of time. In addition, fully charge and then fully discharge the battery pack every 2 months, then continue to store it at a 30 % battery level ().

Memo :


- You can connect this unit to the AC adapter to record for long hours indoors.

(Battery charging begins when the LCD monitor is closed.)

- Charging is also possible with a USB cable.

“Charging with USB Cable” ( p. 13)

Detaching the Battery Pack

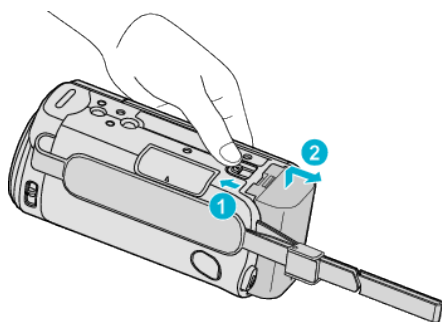

- Slide the battery release lever to detach the battery from this unit.

Approximate Battery Charging Time (Using AC Adapter)

| Battery Pack | Charging Time |
|--------------|---------------|
| BN-VG107U | 1 h 50 m |
| BN-VG108U | 2 h 10 m |
| BN-VG114U | 2 h 30 m |
| BN-VG121U | 3 h 30 m |
| BN-VG138U | 6 h 10 m |


- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.
(Replace the battery pack with a new one.)

* The charging time is when the unit is used at 25°C (77°F). If the battery pack is charged outside the room temperature range of 10°C to 35°C (50°F to 95°F), charging may take a longer time or it may not start. The recordable and playable time may also be shortened under some usage conditions such as at low temperature.

“Approximate Recording Time (Using Battery)” (p. 36)

Charging with USB Cable

- 1 Close the LCD monitor to turn off the camcorder and disconnect the AC adapter as well as battery pack from the camcorder.
- 2 Turn on the computer and connect the USB cable to the camcorder.

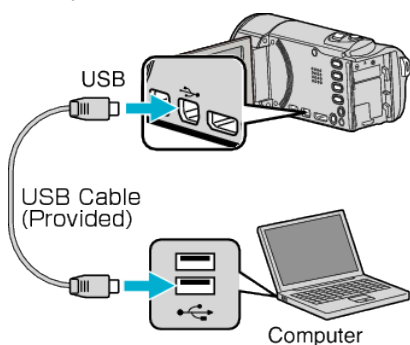

- Do not attach the battery pack before connecting the USB cable.
- 3 Attach the battery pack.
 - The charging lamp blinks when charging is in progress.
It goes out when charging is finished.

Memo :


- USB charging is not possible while the AC adapter is connected to the camcorder.
- Do not turn off or set the computer to sleep mode during charging (the charging will stop).
- With some types of computers, charging is possible even when the computer is turned off. Refer to the instruction manual of the computer or consult its manufacturer.
- Charging is also possible with an optional USB AC adapter (AC-V10L). If you use any other USB AC adapters besides JVC AC adapters, safety and performance cannot be guaranteed.

- If charging does not start, detach the battery pack and try again from step 1.
- You cannot record or play back videos while the camcorder is connected to a computer. Disconnect the USB cable after charging.

Approximate Battery Charging Time (Using USB Cable)

| Battery Pack | Charging Time |
|--------------|---------------|
| BN-VG107U | 9 h 30 m |
| BN-VG108U | 9 h 45 m |
| BN-VG114U | 18 h 30 m |
| BN-VG121U | 25 h |
| BN-VG138U | 45 h 30 m |

Grip Adjustment

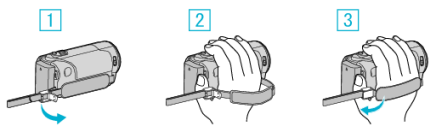


- 1 Open the lever on the strap lock
- 2 Adjust the length of the belt
- 3 Close the lever

Caution :

- Be sure to fasten the grip belt properly.
If the belt is loose, this unit may drop and result in injuries or damages.

Using as a Hand Strap


Adjust the length of the belt and loop it around your wrist.

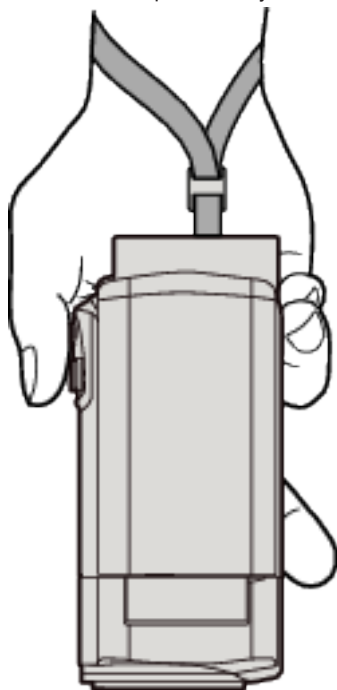


Inserting an SD Card

Insert a commercially available SD card before recording. (GZ-HM30)
When a commercially available SD card is inserted, recordings can still be made to the card without stopping when the remaining recording time on the built-in memory runs out. (GZ-HM50)
“Types of Usable SD Card” (p. 15)
“Using an Eye-Fi Card” (p. 15)
“Approximate Video Recording Time” (p. 36)


- 1 Close the LCD monitor.

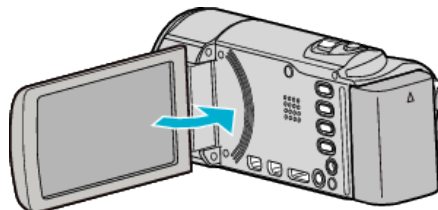

- 2 Open the cover.

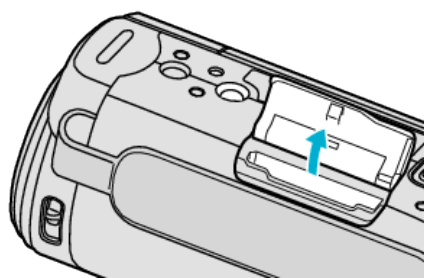

- 3 Insert an SD card.

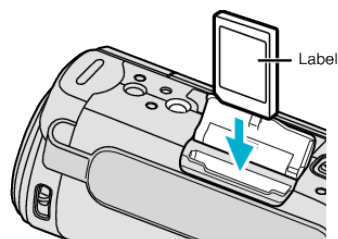

- Insert with the label facing outward.

Warning


- Make sure not to insert the card in the wrong direction. It may cause damage to the unit and card.
- Turn off the power of this unit before inserting or removing a card.
- Do not touch the metal contact area when inserting the card.

Memo :

- Recording switches automatically from the built-in memory to SD card after the built-in memory is full. (GZ-HM50)
“SEAMLESS RECORDING (GZ-HM50)” (p. 69)
- To record to the card, it is necessary to perform media settings. When no card is available, set media settings to “BUILT-IN MEMORY” for recording. (GZ-HM50)
“REC MEDIA SETTING (GZ-HM50)” (p. 74)
- To use cards that have been used on other devices, it is necessary to format (initialize) the card using “FORMAT SD CARD” from media settings.
“FORMAT SD CARD” (p. 83)

Removing the Card

Push the SD card inward once, then pull it out straight.

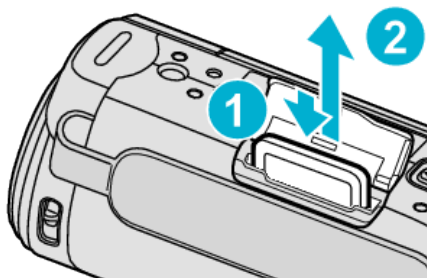

Types of Usable SD Card

The following SD cards can be used on this unit. Operations are confirmed on the SD cards from the following manufacturers.

- Panasonic
- TOSHIBA
- SanDisk

SDHC Card



- Use a Class 4 or higher compatible SDHC card (4 GB to 32 GB) for video recording.
- You can also use a Class 10 compliant SDHC/SDXC card.

SDXC Card



- Use a Class 4 or higher compatible SDXC card (Max. 64 GB).

Memo :

- Using SD cards (including SDHC/SDXC cards) other than those specified above may result in recording failure or data loss.
- Class 4 and Class 6 are guaranteed to have a minimum transfer rate of 4 MB/s and 6 MB/s respectively during reading or writing of data.
- To protect the data, do not touch the terminals of the SD card.

When your computer cannot recognize the SDXC card

Confirm and update the OS of your computer.

| | |
|--|--|
| Windows XP / Windows XP SP1 | Necessary to update to SP2 or higher. |
| Windows XP SP2 / Windows XP SP3 | Necessary to download the update software. (KB955704) http://www.microsoft.com/downloads/details.aspx?FamilyID=1cbe3906-ddd1-4ca2-b727-c2dff5e30f61&displaylang=en |
| Windows Vista | Necessary to update to SP1 or higher. |
| Mac OS | Not compatible. |

Using an Eye-Fi Card

Eye-Fi is an SD memory card with wireless LAN function. Using an Eye-Fi card, you can transfer videos to a computer or the web. (A broadband wireless LAN environment is required.) Use of Eye-Fi card may be illegal and prohibited in countries and regions where it has not been approved by competent authorities. Please contact Eye-Fi support for the details of approved countries and regions.

Types of Cards

The following Eye-Fi cards can be used on this unit.

- Eye-Fi X2 Series
- Eye-Fi Connect X2
- Eye-Fi Explore X2
- Eye-Fi Pro X2

Video files cannot be transferred without the Eye-Fi X2 series.

Using the Eye-Fi Card

Make settings on the Eye-Fi card with Eye-Fi Center. For how to install and operate the Eye-Fi Center, refer to its instruction manual.

- Recorded videos are automatically transferred. (The files already transferred earlier are not transferred again.)

Memo :

- You cannot transfer files during the recording mode, editing and formatting of the card.
- You cannot transfer video files larger than 2 GB. (as of December, 2010)
- Transfer may take long or be interrupted depending on the connection conditions.

| Icon | Description |
|------|---|
| | Eye-Fi setting OFF (depends on Eye-Fi Center setting) |
| | Identifying the Eye-Fi card |
| | Ready for transfer from the Eye-Fi card |
| | Transferring from the Eye-Fi card (animated) |


- We recommend using the AC adapter when transferring files of large size.
- If it doesn't operate properly, first make use of Eye-Fi Helper to confirm that the settings of the Eye-Fi card are correct. In addition, try the data transfer by inserting the Eye-Fi card into other equipment such as a computer.
- Do not use the camcorder in places where wireless use is prohibited such as on a plane.
- Before deleting a file, check that you have transferred it to a computer or uploaded it to a video sharing website.
- For the latest information on the Eye-Fi card, refer to the website of Eye-Fi, Inc.

<http://www.eye.fi/>

Turning On the Unit

You can turn the power of this unit on/off by opening or closing the LCD monitor.

- 1 Open the LCD monitor.

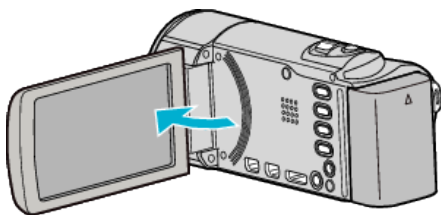

- The unit turns on.
- When the LCD monitor is closed, the unit turns off.


Clock Setting

The "SET DATE/TIME!" screen appears when you turn on this unit for the first time after purchase, when it has not been used for a long time, or when the clock is not set yet.


Set the clock before recording.

Memo : _____

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

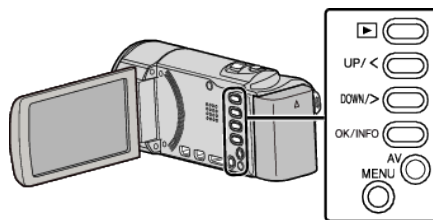

- 1 Open the LCD monitor.

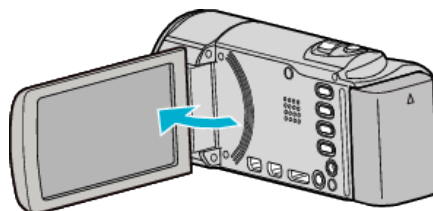


- The unit turns on.
- When the LCD monitor is closed, the unit turns off.

- 2 Select "YES" and press OK when "SET DATE/TIME!" is displayed.




- Press UP/< or DOWN/> to move the cursor.

- 3 Set the date and time.

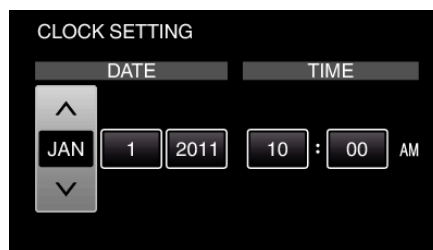

- Press UP/< or DOWN/> to adjust the setting value and press OK to confirm it. The cursor moves to the next item.
- Repeat this step to input the year, month, day, hour, and minute.
- To cancel and return to the previous screen, press MENU.

- 4 Press UP/< or DOWN/> to select the region where you live and press OK.

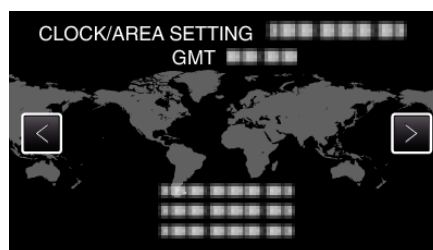

- The city name and time difference are displayed.
- To cancel and return to the previous screen, press MENU.

Memo : _____

- The clock can be reset again later.

“Resetting the Clock” (☞ p. 17)


- When using this unit overseas, you can set it to the local time for recording.
- “Setting the Clock to Local Time when Traveling” (☞ p. 20)
- “SET DATE/TIME!” is displayed when you turn on this unit after it has not been used for a prolonged period.
Connect the AC adapter for more than 24 hours to charge the internal clock battery of this unit before setting the clock.
- “Charging the Battery Pack” (☞ p. 12)
- You can turn on or off the clock display during playback mode.
- “ON-SCREEN DISPLAY” (☞ p. 74)

Resetting the Clock


Set the clock with “CLOCK ADJUST” from the menu.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

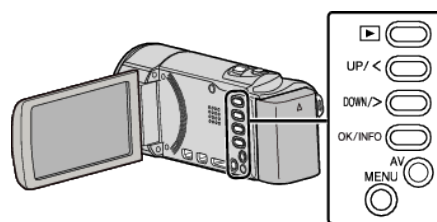

- 1 Press MENU.

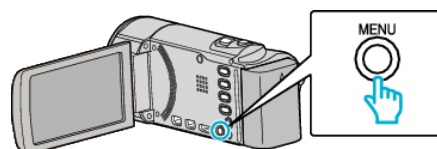


- 2 Select “CLOCK ADJUST” and press OK.

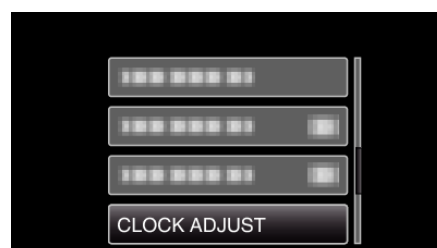


- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

- 3 Select “CLOCK SETTING” and press OK.

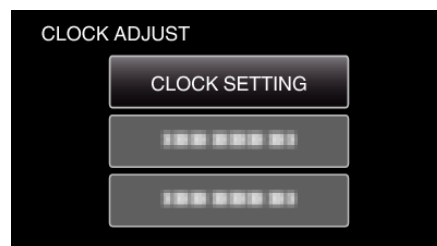


- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

- 4 Set the date and time.

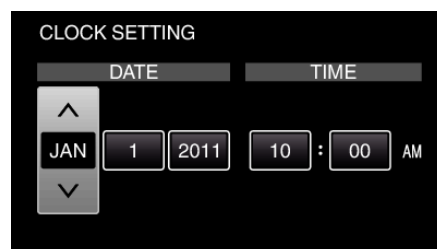

- Press UP/< or DOWN/> to adjust the setting value and press OK to confirm it. The cursor moves to the next item.
- Repeat this step to input the year, month, day, hour, and minute.
- To cancel and return to the previous screen, press MENU.

- 5 Press UP/< or DOWN/> to select the region where you live and press OK.

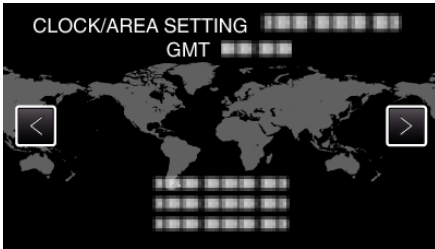


- The city name and time difference are displayed.
- To cancel and return to the previous screen, press MENU.

Changing the Display Language


The language on the display can be changed.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

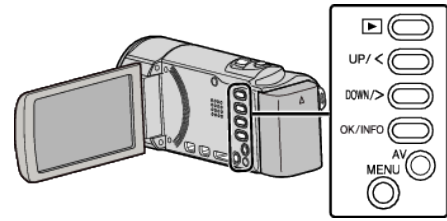

- 1 Press MENU.

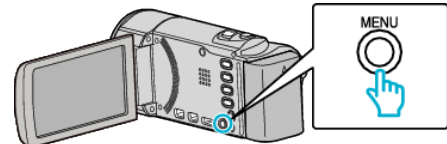


- 2 Select "DISPLAY SETTINGS" and press OK.

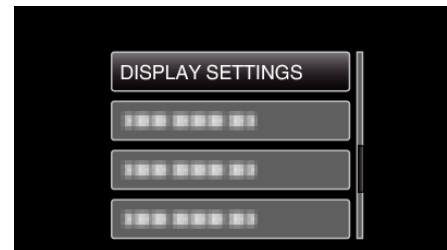

- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

- 3 Select "LANGUAGE" and press OK.

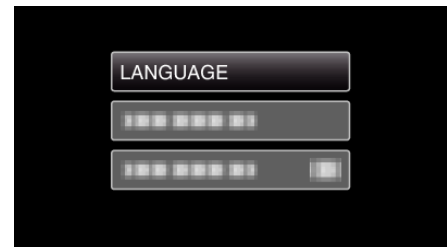

- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

- 4 Select the desired language and press OK.



- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

Holding this Unit

When holding this unit, keep your elbows close to your sides to prevent camera shake.



Caution : _____

- Be careful not to drop this unit during transportation.
- Guardians should pay close attention when this unit is being used by children.


Memo : _____

- If camera shake is excessive, use the digital image stabilizer.

“Reducing Camera Shake” (p. 31)

Tripod Mounting

This unit can be mounted on a tripod (or monopod). This is useful for preventing camera shake and recording from the same position.

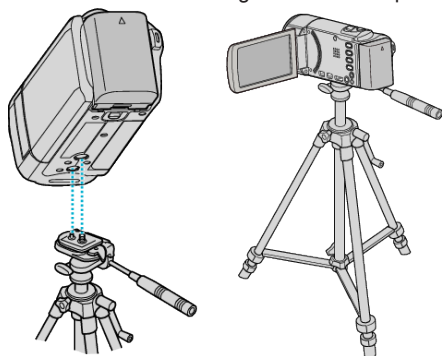

- To prevent this unit from falling off, check the tripod mounting screw holes and positioning holes on the unit carefully before mounting, and turn the screws until they are fastened firmly.

Caution : _____

- To prevent injuries or damages which may result if this unit falls off, read the instruction manual of the tripod (or monopod) to be used and make sure that it is securely attached.

Memo : _____

- It is recommended to use a tripod or monopod when recording in conditions prone to camera shake (such as in dark places or when zoomed to the telephoto end).
- Set the digital image stabilizer to (OFF) when using a tripod for recording.

“Reducing Camera Shake” (p. 31)

Using this Unit Overseas

The shape of the power outlet varies according to countries and regions. To charge the battery pack, you need a converter plug that matches the shape of the outlet.

“Charging the Battery Pack Overseas” (p. 19)

Change the date and time display to the local time by selecting your travel destination in “AREA SETTING” of “CLOCK ADJUST”.

“Setting the Clock to Local Time when Traveling” (p. 20)

When “ON” is selected in “DST SETTING” of “CLOCK ADJUST”, the time is set 1 hour ahead.

“Setting Daylight Saving Time” (p. 20)

Charging the Battery Pack Overseas

The shape of the power outlet varies according to countries and regions. To charge the battery pack, you need a converter plug that matches the shape of the outlet.

| A | B | BF | C | O |
|---|---|----|---|---|
| | | | | |


| North America | Europe | Oceania | Middle East |
|---|----------------------|---------------|-----------------------------------|
| United States A | Iceland C | Australia O | Israel C |
| Canada A | Ireland C | Guam A | Iran C |
| Mexico A | United Kingdom B, BF | Tahiti C | Kuwait B, C |
| | Italy C | Tonga O | Jordan B, BF |
| Asia | Austria C | New Zealand O | |
| India B, C, BF | Netherlands C | Fiji O | Africa |
| Indonesia C | Canary Islands C | | Algeria A, B, BF, C |
| Singapore B, BF | Greece C | Latin | Egypt B, BF, C |
| Sri Lanka B, C, BF | Switzerland C | Argentina O | Guinea C |
| Thailand A, BF, C | Sweden C | Colombia A | Kenya B, C |
| South Korea A, C | Spain A, C | Jamaica A | Zambia B, BF |
| China A, B, BF, C, O | Denmark C | Chile B, C | Tanzania B, BF |
| Japan A | Germany C | Haiti A | Republic of South Africa B, C, BF |
| Nepal C | Norway C | Panama A | Mozambique C |
| Pakistan B, C | Hungary C | Bahamas A | Morocco C |
| Bangladesh C | Finland C | Puerto Rico A | |
| Philippines A, BF, O | France C | Brazil A, C | |
| Vietnam A, C | Belgium C | Venezuela A | |
| Hong Kong Special Administrative Region B, BF | Poland B, C | Peru A, C | |
| Macau Special Administrative Region B, C | Portugal B, C | | |
| Malaysia B, BF, C | Romania C | | |

Setting the Clock to Local Time when Traveling


Change the date and time display to the local time by selecting your travel destination in "AREA SETTING" of "CLOCK ADJUST". Restore the region settings after you returned from the trip.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

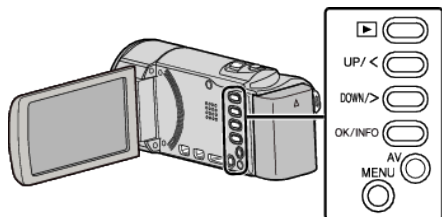

1 Press MENU.

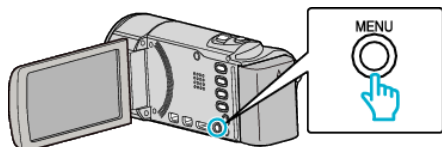


2 Select "CLOCK ADJUST" and press OK.

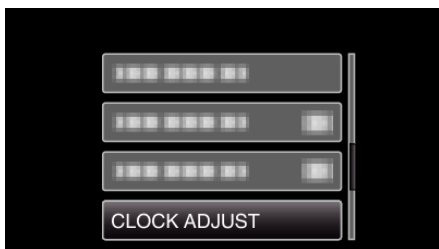


- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

3 Select "AREA SETTING" and press OK.

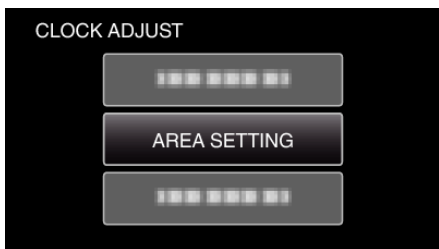

- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

4 Press UP/< or DOWN/> to select the area you are traveling to and press OK.

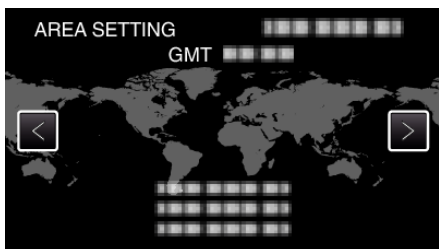

- The city name and time difference are displayed.
- To cancel and return to the previous screen, press MENU.

Memo : _____


• Setting "AREA SETTING" changes the clock time such that time difference is accounted for.
After returning to your country, re-select the region that was set initially to restore the original clock settings.

Setting Daylight Saving Time


When "ON" is selected in "DST SETTING" of "CLOCK ADJUST", the time is set 1 hour ahead.

Memo : _____

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

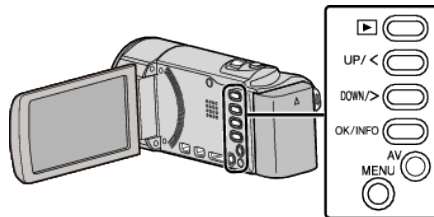

1 Press MENU.

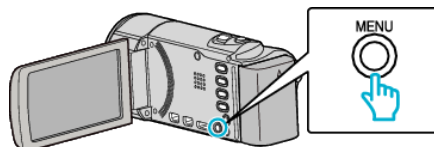


2 Select "CLOCK ADJUST" and press OK.




- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

3 Select "DST SETTING" and press OK.

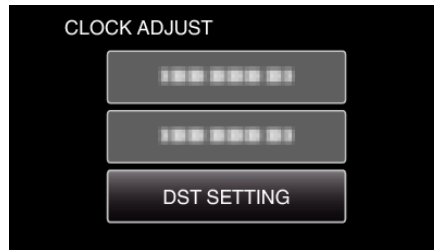

- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.

4 Press UP/< or DOWN/> to set daylight saving time and press OK.

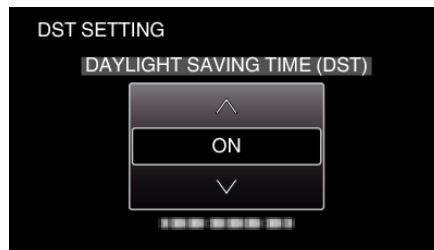

- To cancel and return to the previous screen, press MENU.

Memo : _____

• What is daylight saving time?
Daylight saving time is the system of setting the clock 1 hour ahead for a fixed period in summer. It is used mainly in the Western countries.
• Restore the daylight saving time settings after you returned from the trip.

Optional Accessories

You can record for a longer time by using the optional battery pack.

| Product Name | Description |
|---|--|
| Battery Pack <ul style="list-style-type: none"> ● BN-VG114U ● BN-VG121U | <ul style="list-style-type: none"> ● Provides a longer recording time than the battery pack that comes with this unit. It can also be used as a spare battery pack. |
| Battery Charger <ul style="list-style-type: none"> ● AA-VG1U | <ul style="list-style-type: none"> ● Enables the battery pack to be charged without using this unit. |
| Component Cable <ul style="list-style-type: none"> ● QAM1266-001 | <ul style="list-style-type: none"> ● For viewing in high picture quality. ● Consult your nearest JVC service center. JVC Service Center http://www2.jvc-victor.co.jp/support/after/ |
| HDMI Cable <ul style="list-style-type: none"> ● VX-HD310ES ● VX-HD315ES ● VX-HD320 ● VX-HD330 | <ul style="list-style-type: none"> ● For viewing in high picture quality. ● Transmits video, audio, and control signals between devices. |

Memo :

- For more information, refer to the catalog.
- BN-VG108U/BN-VG107U is the same battery pack that comes with this unit.
- File copying by connecting this unit to a DVD writer is not supported.

Approximate Recording Time (Using Battery)

| Battery Pack | Actual Recording Time | Continuous Recording Time |
|----------------------------|-----------------------|---------------------------|
| BN-VG108U/BN-VG107U | 40 m | 1 h 5 m |
| BN-VG114U | 1 h 15 m | 2 h 10 m |
| BN-VG121U | 1 h 55 m | 3 h 15 m |

- The above are values when "MONITOR BRIGHTNESS" is set to "3" (standard).
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.
(Replace the battery pack with a new one.)


Taking Videos in Intelligent Auto Mode

You can record without worrying about the setting details by using the Intelligent Auto mode. Settings such as exposure and focus will be adjusted automatically to suit the shooting conditions.


- In case of specific shooting scenes such as backlight (☀️), night view (🌙), person (👤) etc., its icon is displayed on the screen.
- Before recording an important scene, it is recommended to conduct a trial recording.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

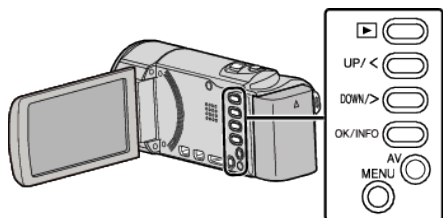

1 Open the lens cover.

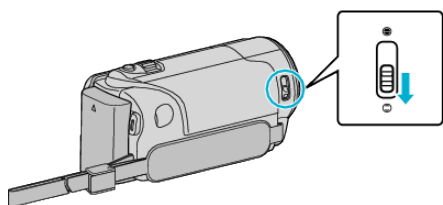


2 Open the LCD monitor.

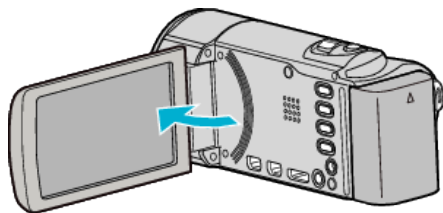


- The unit turns on and the video mode icon appears.
- When the LCD monitor is closed, the unit turns off.

3 Check if the recording mode is Intelligent Auto.

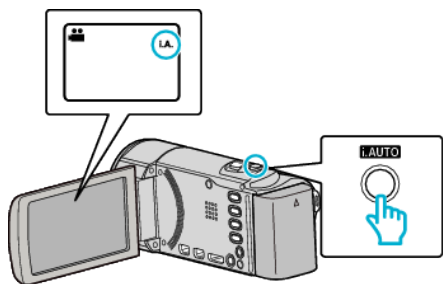


- If the mode is **M** Manual, press the i.AUTO button to switch. The mode changes between Intelligent Auto and Manual with every press.

4 Start recording.

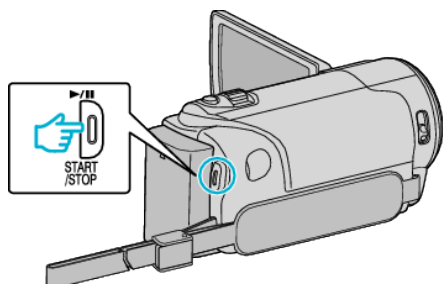





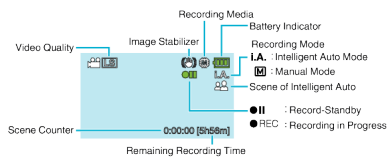







- Press again to stop.

Indications During Video Recording



| Display Icon | Description |
|--------------------------------------|--|
| Recording Mode | Press the i.AUTO button to switch the recording mode between i.A. (Intelligent Auto) and M (Manual). |
| Video Quality | Displays the icon of the "VIDEO QUALITY" setting selected in the recording menu. "VIDEO QUALITY" (☞ p. 68) |
| Remaining Recording Time | Displays the remaining time for video recording. |
| ● REC Recording in Progress | Appears when video recording is in progress. |
| ● Record-Standby | Appears when video recording is paused. |
| Scene Counter (Recorded Time) | Displays the elapsed time of the video that is currently being recorded. |
| Recording Media | Displays the icon of the recording media. The recording media can be changed for GZ-HM50. "REC MEDIA SETTING (GZ-HM50)" (☞ p. 74) |
| Battery Indicator | Displays the approximate remaining battery power. Details of the battery power can be displayed by pressing the OK/INFO button. "Remaining Recording Time/Battery Power" (☞ p. 35) |
| Image Stabilizer | Sets whether to reduce camera shake. "Reducing Camera Shake" (☞ p. 31) |

■ Scenes of Intelligent Auto

| Display Icon | Description |
|--|--|
|  | Closes up on the subject while the background is blurred. |
|  | Focuses on both person and background when the zoom lever is adjusted to the wide angle (W) end. |
|  | Focuses at a far distance and captures a sharp image. |
|  | Captures the subject without raising sensitivity nor using flash when the surrounding is dark. |
|  | Reproduces the night scene at a shutter speed that is lower than usual. |
|  | Reproduces the blue color of sky and sea vividly without darkening the subject due to strong sunlight from the background. |
|  | Focuses on a near object and reproduces its colors vividly. |
|  | Reproduces the green color of trees vividly. |
|  | Reproduces the glowing colors of sunset. |
|  | Adjusts settings so that the subject does not appear too dark due to backlight. |
|  | Uses flash so that a person appears clearly and reproduces the colors of the background vividly. |
|  | Focuses on a near object and reproduces its colors vividly while using flash. |

Memo :

- Scenes can be detected according to the shooting conditions and automatically adjusted in Intelligent Auto mode.
- Some functions may not work properly depending on the shooting conditions.

Useful Settings for Recording

- The aspect ratio for recording can be switched between 16:9 and 4:3. "VIDEO QUALITY" (☞ p. 68)
- When "QUICK RESTART" is set to "ON", this unit turns on immediately if you open the LCD monitor within 5 minutes after the power is turned off by closing the monitor. "QUICK RESTART" (☞ p. 79)
- When "AUTO POWER OFF" is set to "ON", this unit turns itself off automatically to conserve power when it is not operated for 5 minutes. (only when using the battery pack) "AUTO POWER OFF" (☞ p. 78)
- When "FACE PRIORITY AE/AF" is set to "ON" (default setting), this unit detects faces and automatically adjusts its brightness and focus to record the faces more clearly. "Capturing Human Subjects Clearly (Face Detection AE/AF)" (☞ p. 31)
- If the remaining space on the recording media runs out while "SEAMLESS RECORDING" is set to "ON", recording continues after switching to another recording media. "SEAMLESS RECORDING (GZ-HM50)" (☞ p. 69)

Caution :

- Do not expose the lens to direct sunlight.
- Do not use this unit in the rain, snow, or places with high humidity like the bathroom.
- Do not use this unit in places subject to excessive humidity or dust, as well as places exposed to steam or smoke directly.
- Do not remove the battery pack, AC adapter, or SD card when the access lamp is lighted. The recorded data may become unreadable.
- Make a backup of important recorded data. It is recommended to copy your important recorded data to a DVD or other recording media for storage. JVC will not be responsible for any lost data.

Memo :

- Check the remaining recording time in the media before you start shooting. If there is not enough space, move (copy) the data to a computer or disc.
- Do not forget to make copies after recording!
- Recording stops automatically as it cannot be performed for 12 or more consecutive hours according to specifications. (It may take some time to resume recording.)
- For long recordings, the file is split into two or more files if the size exceeds 4 GB.
- You can connect this unit to the AC adapter to record for long hours indoors.

Video Quality

This unit can perform recording in both high and standard definition. By default, it is set to high definition (LS)(GZ-HM30/GZ-HM50) or (XP)(GZ-HM430).

■ To change the setting

"VIDEO QUALITY" (☞ p. 68)


| | GZ-HM30/GZ-HM50 | | GZ-HM430 | |
|---------------------|-----------------|----------|------------------------|--------------------------------|
| High Definition | LS (16:9) | | UXP (16:9) | Higher video quality ↑↓ |
| | LE (16:9) | | XP (16:9) | |
| | | | SP (16:9) EP (16:9) | |
| Standard Definition | SSW (16:9) | SS (4:3) | SSW (16:9) | More recording time |
| | SEW (16:9) | SE (4:3) | SEW (16:9) | |

- For the approximate video recording time, refer to the following page. "Remaining Recording Time/Battery Power" (☞ p. 35)

Zooming

The angle of view can be adjusted using zoom.

- Use the W end (wide angle end) to shoot a wider field of view.
- Use the T end (telephoto end) to magnify the subject for shooting.

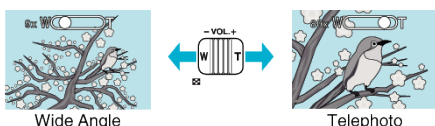

Memo :

- You can expand the zoom area without degrading the image quality by using dynamic zoom.
- When digital zoom is used, the image becomes grainy as it is digitally enlarged.
- The zoom ratio range can be changed.

“ZOOM” (☞ p. 69)

- Zoom ratio setting depends on the setting of “VIDEO QUALITY”.


“VIDEO QUALITY” (☞ p. 68)

Manual Recording


You can adjust settings, such as brightness, by using the manual mode.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

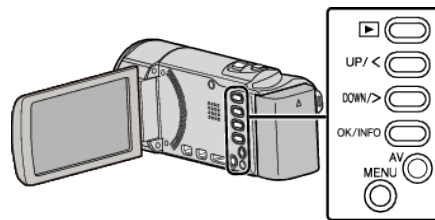


- 1 Open the lens cover.

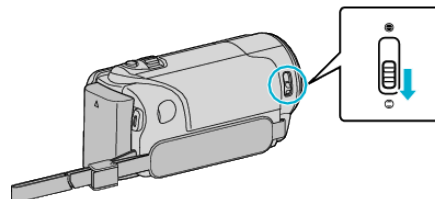

- 2 Open the LCD monitor.

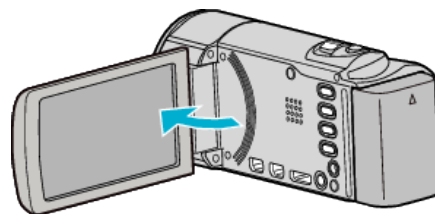


- 3 Select the Manual recording mode.

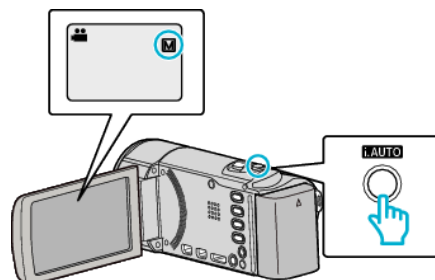

- If the mode is Intelligent Auto, press the i.AUTO button to switch. The mode changes between Intelligent Auto and Manual with every press.

- 4 Start recording.

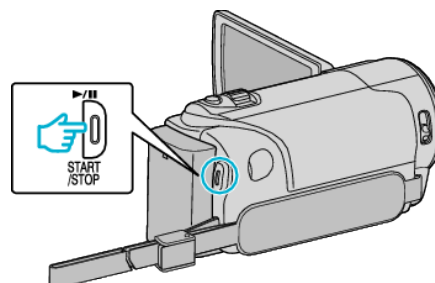

- Press again to stop.

Memo :

- The manual settings are displayed only in the manual mode.

Manual Recording Menu


The following items can be set.

| Name | Description |
|-------------------|--|
| SCENE SELECT | <ul style="list-style-type: none"> Recordings that suit the shooting conditions can be performed easily. "Scene Selection" (☞ p. 25) |
| FOCUS | <ul style="list-style-type: none"> Use manual focus if the subject is not focused automatically. "Adjusting Focus Manually" (☞ p. 26) |
| BRIGHTNESS ADJUST | <ul style="list-style-type: none"> Overall brightness on the screen can be adjusted. Use this when recording in a dark or bright location. "Adjusting Brightness" (☞ p. 27) |
| WHITE BALANCE | <ul style="list-style-type: none"> Overall color on the screen can be adjusted. Use this when the color on the screen appears differently from the actual color. "Setting White Balance" (☞ p. 28) |
| BACKLIGHT COMP. | <ul style="list-style-type: none"> Corrects the image when the subject appears dark due to backlight. Use this when shooting against the light. "Setting Backlight Compensation" (☞ p. 29) |
| TELE MACRO | <ul style="list-style-type: none"> Use this to take close-up (macro) shots of the subject. "Taking Close-up Shots" (☞ p. 30) |


Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.


Memo : _____
 To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

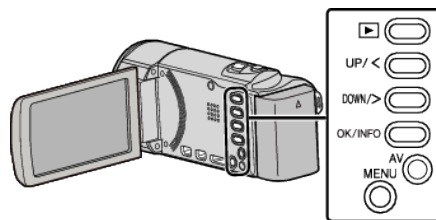


1 Press MENU.

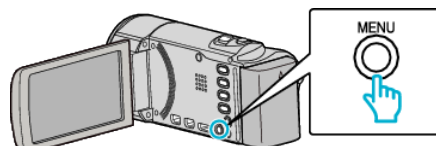


2 Select "MANUAL SETTING" and press OK.

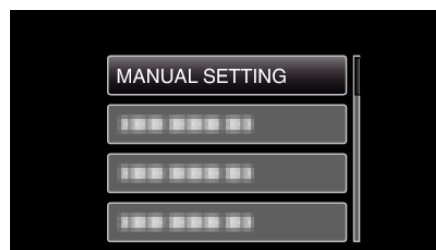

3 Select "SCENE SELECT" and press OK.

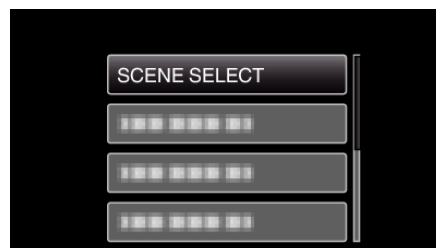
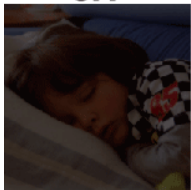
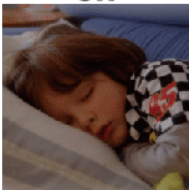


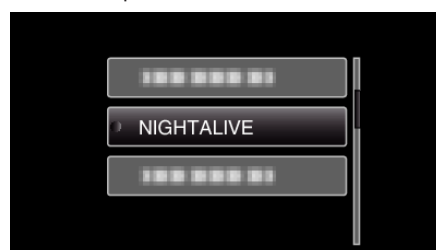


4 Select the scene and press OK.



- After setting, press OK.

*The image is only an impression.


| Setting | Effect |
|---|--|
|  NIGHTALIVE | Increases gain and brightens the scene automatically using a slow shutter when the surrounding is dark. To prevent camera shake, use a tripod. <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> OFF  </div> <div style="text-align: center;"> ON  </div> </div> |
|  SPOTLIGHT | Prevents the human subject from appearing too bright under light. <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> OFF  </div> <div style="text-align: center;"> ON  </div> </div> |

Adjusting Focus Manually


Set this when the focus is not clear in Intelligent Auto or when manual focusing is desired.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

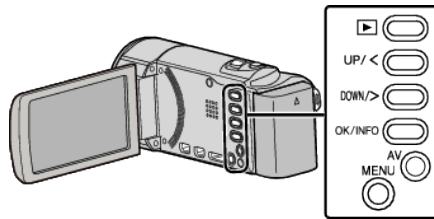

1 Press MENU.

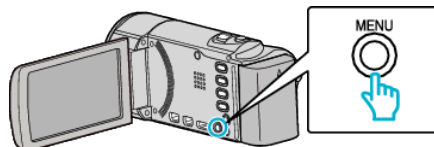


2 Select "MANUAL SETTING" and press OK.

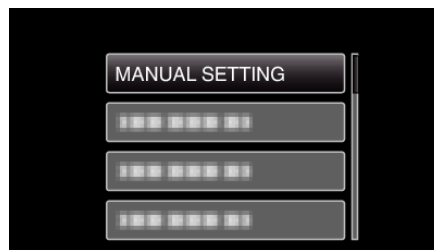

3 Select "FOCUS" and press OK.



4 Select "MANUAL" and press OK.

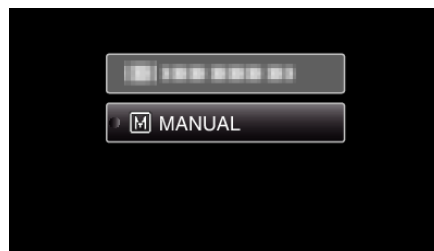


5 Adjust the focus with the UP/< and DOWN/> buttons.



- Press UP/< to focus on a distant subject.
- Press DOWN/> to focus on a near subject.

6 Press OK to confirm.

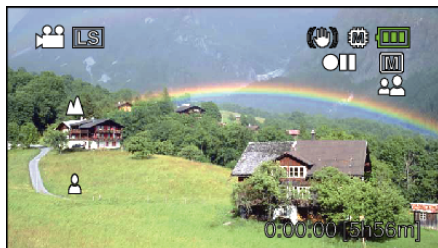**Memo :**


- A subject that is focused at the telephoto (T) end remains in focus when it is zoomed out to the wide angle (W) end.

Adjusting Brightness


You can adjust the brightness to your preferred level.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

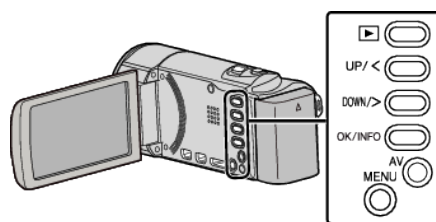


- 1 Press MENU.

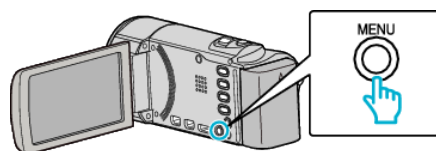


- 2 Select "MANUAL SETTING" and press OK.

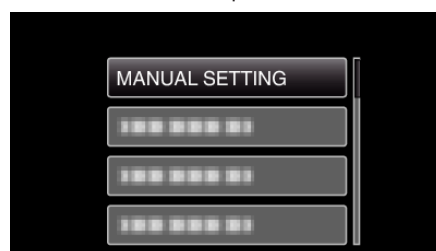


- 3 Select "BRIGHTNESS ADJUST" and press OK.

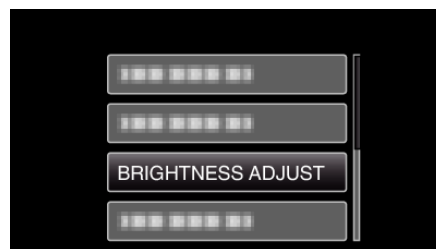


- 4 Select "MANUAL" and press OK.

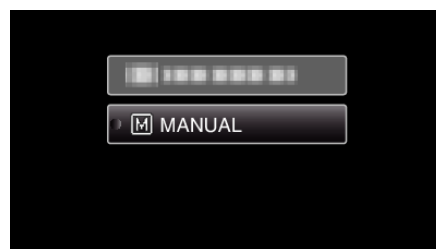

- 5 Select the brightness value with the UP/< and DOWN/> buttons.

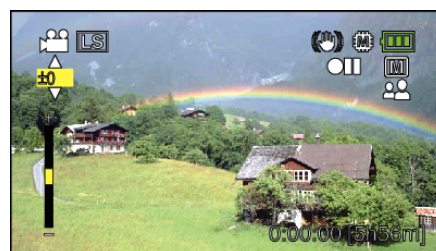

- Compensation range during video recording: -6 to +6
 - Press UP/< to increase the brightness.
 - Press DOWN/> to decrease the brightness.
- 6 Press OK to confirm.

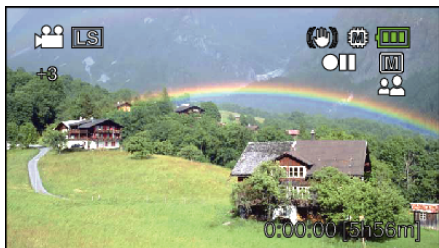


Setting White Balance


You can set the color tone to suit the light source.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

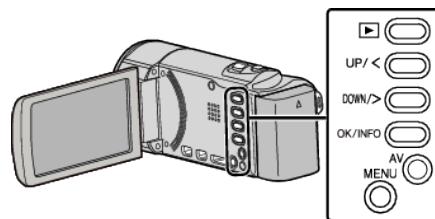


1 Press MENU.

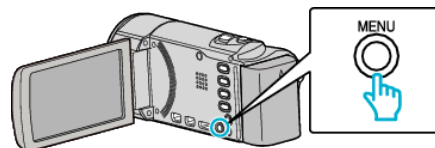


2 Select "MANUAL SETTING" and press OK.

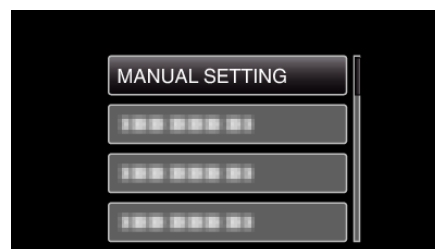

3 Select "WHITE BALANCE" and press OK.

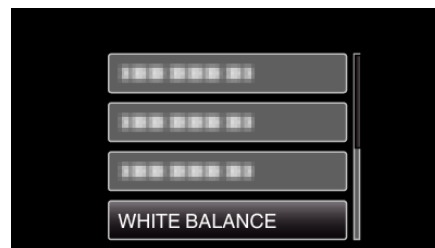

4 Select the white balance setting and press OK.

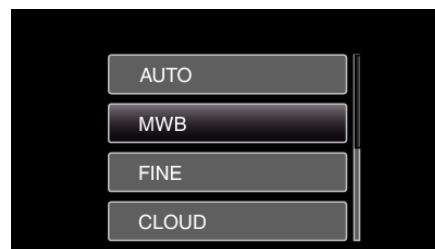

| Setting | Details |
|---------|--|
| AUTO | Adjusts automatically to the natural colors. |
| MWB | Use this when the problem of unnatural colors is not resolved. |
| FINE | Set this when shooting outdoors on a sunny day. |
| CLOUD | Set this when shooting on a cloudy day or inside a shade. |
| HALOGEN | Set this when shooting under illumination such as a video light. |

Using MWB


1 Hold a sheet of plain white paper in front of the lens so that the white paper fills the screen.

- 2 Select "MWB" and keep pressing OK.
 - The cursor blinks.
- 3 Release OK after the menu disappears.


Setting Backlight Compensation

You can correct the image when the subject appears too dark due to backlight.


Memo : _____
 To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

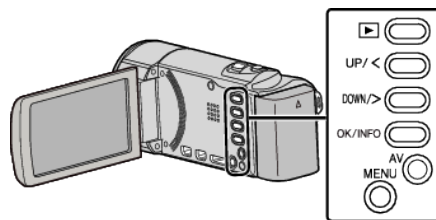

- 1 Press MENU.

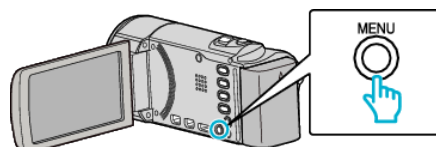


- 2 Select "MANUAL SETTING" and press OK.

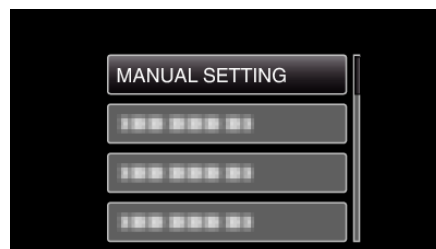

- 3 Select "BACKLIGHT COMP." and press OK.



- 4 Select "ON" and press OK.

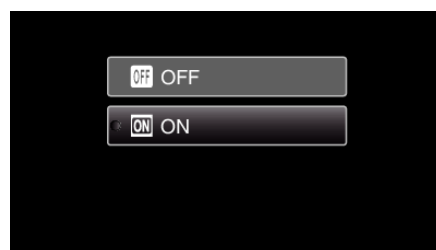

Taking Close-up Shots


You can take close-up shots of an object using the tele macro function.




*The image is only an impression.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

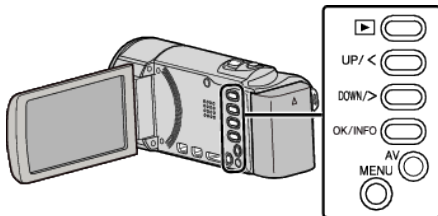

1 Press MENU.

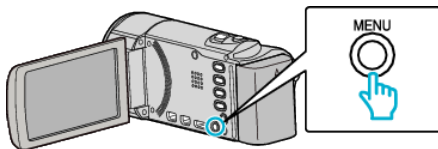


2 Select "MANUAL SETTING" and press OK.

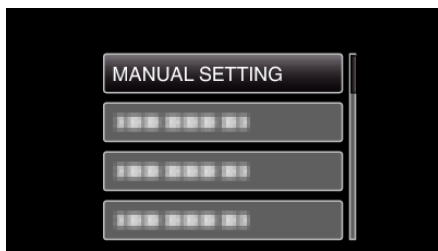

3 Select "TELE MACRO" and press OK.



4 Select "ON" and press OK.

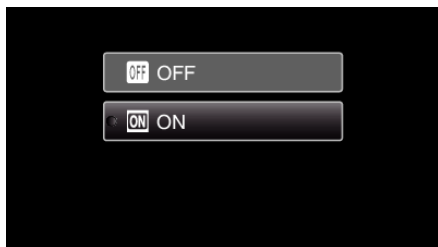

Caution :


- When you are not taking close-up shots, set "TELE MACRO" to "OFF". Otherwise, the image may be blur.

| Setting | Details |
|---------|--|
| OFF | Enables close-up shots up to 1 m at the telephoto (T) end. Enables close-up shots up to 5 cm at the wide angle (W) end. |
| ON | Enables close-up shots up to 50 cm at the telephoto (T) end. Enables close-up shots up to 5 cm at the wide angle (W) end. |


Reducing Camera Shake

When the image stabilizer is set, camera shake during recording can be effectively reduced.


Memo : _____
 To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

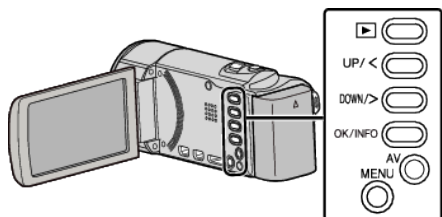

1 Press MENU.

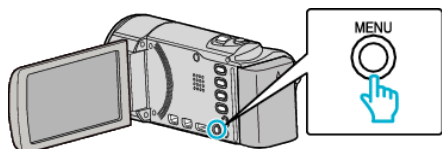

2 Select "DIS" (image stabilizer) and press OK.

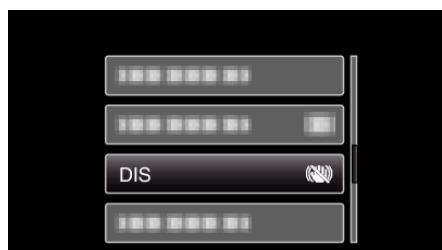

3 Select "ON" or "ON (AIS)" to activate the image stabilizer and press OK.



| Display | Setting |
|----------|---|
| OFF | Deactivates image stabilizer. |
| ON | Reduces camera shake under normal shooting conditions. |
| ON (AIS) | Reduces camera shake more effectively when shooting bright scenes on the wide angle end. Only on the wide angle end (approx. 5x). |


Memo : _____

- It is recommended to set the image stabilizer to "OFF" when shooting a subject of little movement with the unit on a tripod.
- Complete stabilization may not be possible if camera shake is excessive.
- This setting is effective for video recording only.


Capturing Human Subjects Clearly (Face Detection AE/AF)

"FACE PRIORITY AE/AF" automatically adjusts the detected face with appropriate focus and brightness.


Memo : _____
 To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

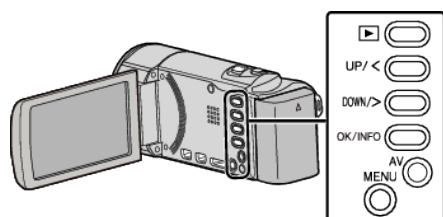


1 Press MENU.

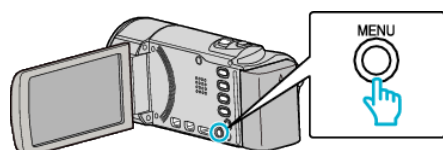


2 Select "FACE PRIORITY AE/AF" and press OK.

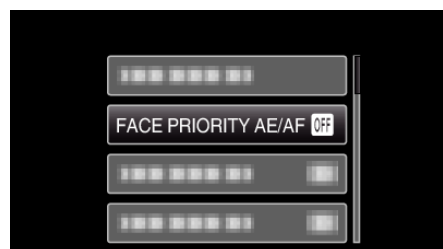

3 Select "ON" and press OK.

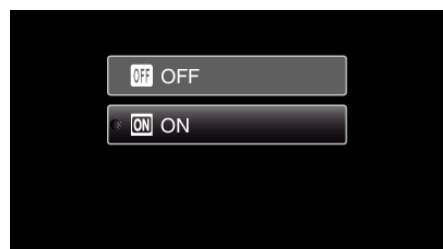


4 Point the camera toward the human subject.

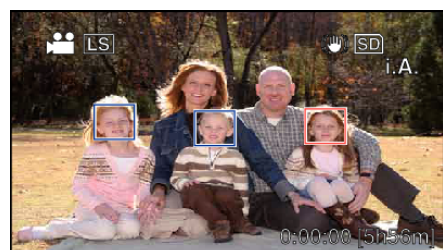

- A frame appears around the face of the subject, and the focus and brightness are automatically adjusted.
- If multiple faces are detected, the face that is closest to the camera will be focused.

5 Start recording.

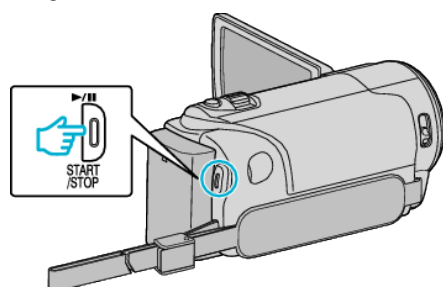

Caution :

- When “FACE PRIORITY AE/AF” is set to “ON”, the following settings will change.
 - If “SCENE SELECT” is set to “SPOTLIGHT”, it will be switched to “OFF”.
 - If “FOCUS” is set to “MANUAL”, it will be switched to “AUTO”.
 - If “BACKLIGHT COMP.” is set to “ON”, it will be switched to “OFF”.
- When the following settings are made, “FACE PRIORITY AE/AF” will switch to “OFF”.
 - When “SCENE SELECT” is set to “SPOTLIGHT”
 - When “FOCUS” is set to “MANUAL”
 - When “BACKLIGHT COMP.” is set to “ON”

Memo :


- The camera is able to detect up to 16 faces.
- Some faces may not be detected depending on the shooting environment.
- If appropriate results cannot be obtained, record with “FACE PRIORITY AE/AF” set to “OFF”.

Recording at Intervals (TIME-LAPSE RECORDING)


Enables the changes of a scene that occur slowly over a long period to be shown within a short time by taking frames of it at a certain interval. This is useful for making observations such as the opening of a flower bud.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

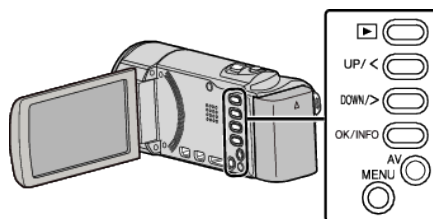

1 Press MENU.

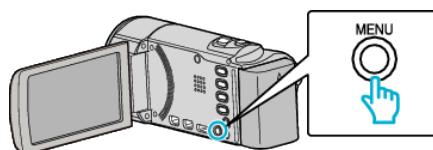

2 Select “TIME-LAPSE RECORDING” and press OK.

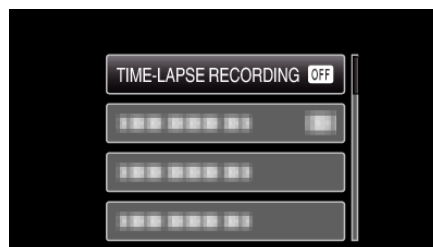


3 Select a recording interval (1 to 80 seconds) and press OK.




- The greater the number of seconds, the longer the recording interval.

4 Start recording.

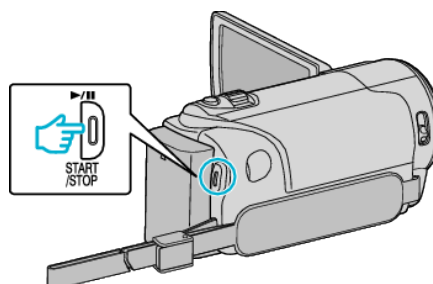

- A frame is taken at intervals of the selected period.
- When the recording interval is set to “20SEC INTERVAL” or higher, this unit switches to the power-saving mode between recordings. At the next point to record, the power-saving mode will be turned off and recording will start automatically.
- Press the START/STOP button again to stop recording.

Indications During Time-Lapse Recording

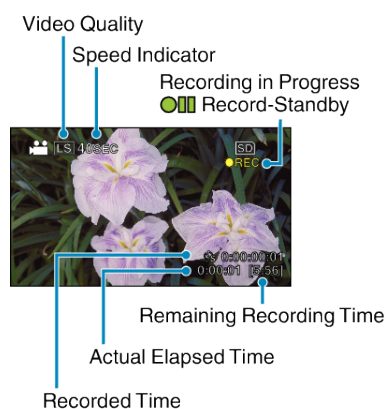

| Display | Description |
|---------------------------------|---|
| Speed Indicator | Displays the recording interval that is set. |
| Video Quality | Displays the icon of the video quality that is set. |
| Remaining Recording Time | Remaining time left to record with the currently selected video quality. |
| Recording in Progress | Appears when video recording is in progress. When in the power-saving mode, it blinks. |
| Record-Standby | Appears when video recording is paused. |
| Actual Elapsed Time | Displays the actual elapsed time after recording starts. |
| Recorded Time | Displays the actual recorded time of the video. Recorded time increases in units of frames. |

Time-Lapse Setting

The greater the number of seconds, the longer the recording interval.

| Setting | Details |
|-----------------------|---|
| OFF | Deactivates the function. |
| 1SEC INTERVAL | Takes a frame at 1-second intervals. Recorded videos will be played back at 30 times speed. |
| 2SEC INTERVAL | Takes a frame at 2-second intervals. Recorded videos will be played back at 60 times speed. |
| 5SEC INTERVAL | Takes a frame at 5-second intervals. Recorded videos will be played back at 150 times speed. |
| 10SEC INTERVAL | Takes a frame at 10-second intervals. Recorded videos will be played back at 300 times speed. |
| 20SEC INTERVAL | Takes a frame at 20-second intervals. Recorded videos will be played back at 600 times speed. |
| 40SEC INTERVAL | Takes a frame at 40-second intervals. Recorded videos will be played back at 1 200 times speed. |
| 80SEC INTERVAL | Takes a frame at 80-second intervals. Recorded videos will be played back at 2 400 times speed. |

Caution :

- Audio cannot be recorded during time-lapse recording.
- Zooming, face priority AE/AF, and image stabilizer are not available in time-lapse recording.
- When recording is stopped with the recorded time less than "0:00:00:17", the video will not be saved.
- Automatic switching of recording media is disabled in time-lapse recording.

Memo :

- Settings of time-lapse recording are not saved when the power is turned off.
 - Recording stops automatically 99 hours after it is started.
 - Make use of a tripod and AC adapter for time-lapse recordings with long intervals.
- It is also recommended to fix the focus and white balance manually.

"Tripod Mounting" (☞ p. 19)

"Adjusting Focus Manually" (☞ p. 26)


"Setting White Balance" (☞ p. 28)

Recording Automatically by Sensing Movements (AUTO REC)

This function enables the unit to record automatically by sensing the changes in subject's movement (brightness) within the red frame displayed on the LCD monitor. (AUTO REC)

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

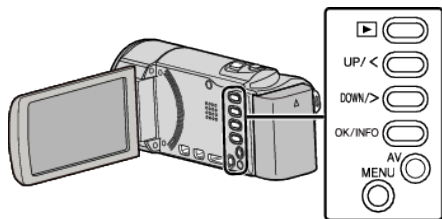


1 Compose the picture according to the subject.

- Adjust the angle of view with the zoom, etc.


2 Press MENU.

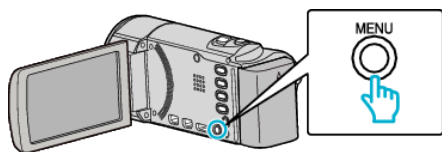

3 Select "AUTO REC" and press OK.

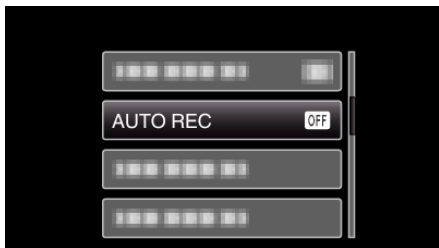

4 Select "ON" and press OK.

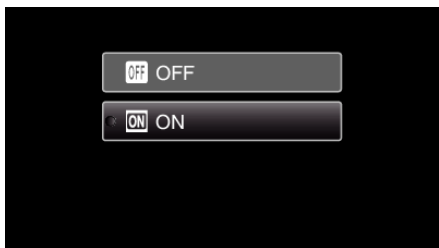

5 Recording starts automatically when the subject within the red frame moves.



- A red frame appears 2 seconds after the menu display disappears.
- For video recording, recording continues while there are still movements of the subject (changes in brightness) within the red frame. When there are no more movements of the subject (changes in brightness) within the red frame, recording will stop in 5 seconds.
- To stop video recording manually, press the START/STOP button. However, as the "AUTO REC" setting remains at "ON" even after the video recording is stopped, recording starts again when movements of the subject (changes in brightness) are detected within the red frame. To cancel "AUTO REC", set it to "OFF".

- The only manual recording setting available is "TELE MACRO". The rest are all set to "AUTO".
- Digital zoom and image stabilizer are not available after "AUTO REC" is set.
- "AUTO REC" cannot be used together with "TIME-LAPSE RECORDING". When both are set, priority is given to "TIME-LAPSE RECORDING".
- The auto power off and power-saving modes are not available after "AUTO REC" is set.

Memo : _____

- Recording stops when there are no changes for 5 seconds during video recording.
- Recording may not start when the movements of the subject within the red frame are too fast or the changes in brightness are too small.
- Recording may start due to changes in brightness even if there is no movement within the red frame.
- While zooming, recording cannot be started.


Caution : _____

Remaining Recording Time/Battery Power


You can check the remaining video recording time on the built-in memory (GZ-HM50) and SD card as well as the remaining battery power.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

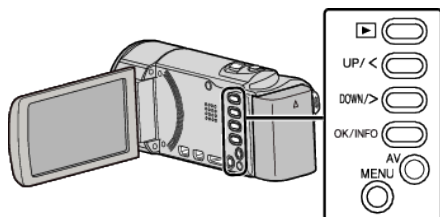

- 1 Open the LCD monitor.

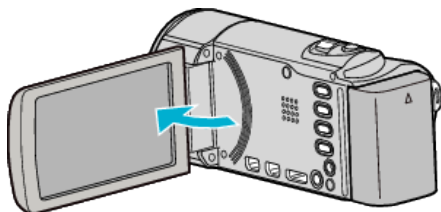

- 2 Press OK/INFO.

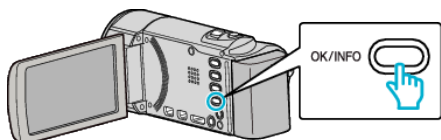


- 3 Display the remaining recording time.



- Only the remaining recording time of the media selected in "REC MEDIA SETTING" is displayed. (GZ-HM50)
- To display the remaining battery power, press OK/INFO.
- To exit the display, press MENU.

- 4 Display the remaining battery power.

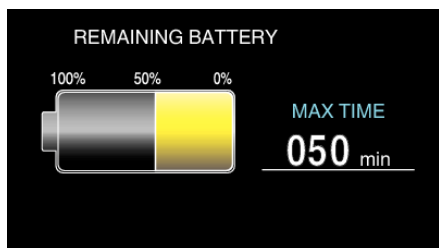

- To exit the display, press OK/INFO.
- Remaining battery power will not be displayed when the AC adapter is connected.

Memo :

- You can change the video quality from the remaining recording time display. Select the video quality with the UP/< and DOWN/> buttons and press OK.

Recording

Approximate Video Recording Time

GZ-HM430

| Quality | SDHC/SDXC Card | | | | | |
|---------|----------------|----------|-----------|-----------|-----------|-----------|
| | 4 GB | 8 GB | 16 GB | 32 GB | 48 GB | 64 GB |
| UXP | 20 m | 40 m | 1 h 20 m | 2 h 50 m | 4 h 20 m | 5 h 50 m |
| XP | 30 m | 1 h | 2 h | 4 h 10 m | 6 h 10 m | 8 h 20 m |
| SP | 40 m | 1 h 20 m | 2 h 50 m | 5 h 50 m | 8 h 40 m | 11 h 50 m |
| EP | 1 h 40 m | 3 h 40 m | 7 h 10 m | 14 h 50 m | 21 h 50 m | 29 h 50 m |
| SSW | 1 h 20 m | 2 h 50 m | 5 h 40 m | 11 h 30 m | 17 h | 23 h |
| SEW | 2 h 50 m | 5 h 50 m | 11 h 40 m | 23 h 50 m | 35 h 10 m | 47 h 40 m |

GZ-HM30/GZ-HM50

| Quality | Built-in Memory (GZ-HM50) | SDHC/SDXC Card | | | | | |
|---------|---------------------------|----------------|----------|-----------|-----------|-----------|-----------|
| | | 4 GB | 8 GB | 16 GB | 32 GB | 48 GB | 64 GB |
| LS | 1 h 20 m | 40 m | 1 h 30 m | 3 h 10 m | 6 h 30 m | 9 h 30 m | 13 h |
| LE | 3 h 20 m | 1 h 50 m | 3 h 40 m | 7 h 20 m | 15 h 10 m | 22 h 20 m | 30 h 20 m |
| SSW/SS | 2 h 30 m | 1 h 20 m | 2 h 50 m | 5 h 40 m | 11 h 30 m | 17 h | 23 h |
| SEW/SE | 5 h 20 m | 2 h 50 m | 5 h 50 m | 11 h 40 m | 23 h 50 m | 35 h 10 m | 47 h 40 m |

- LS/LE: High definition (1280 x 720 pixels, 16:9)
- SSW/SEW: Standard definition (720 x 480 pixels, 16:9)
- SS/SE: Standard definition (720 x 480 pixels, 4:3)
- The actual recording time may shorten depending on the shooting environment.

Approximate Recording Time (Using Battery)


| Battery Pack | Actual Recording Time | Continuous Recording Time |
|---------------------|-----------------------|---------------------------|
| BN-VG108U/BN-VG107U | 40 m | 1 h 5 m |
| BN-VG114U | 1 h 15 m | 2 h 10 m |
| BN-VG121U | 1 h 55 m | 3 h 15 m |

- The above are values when "MONITOR BRIGHTNESS" is set to "3" (standard).
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly. (It is recommended to prepare battery packs ready for three times the expected recording time.)

Playing Back Videos


You can select and play back the recorded videos from an index screen (thumbnail display).

1 Select the playback mode.

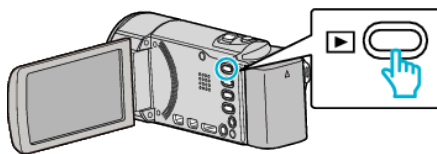

- Press again to return to the recording mode.

2 Select the desired video and press OK or .

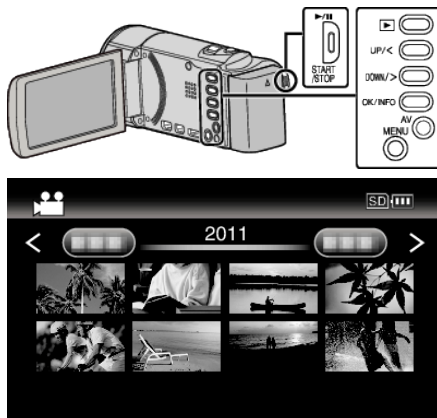

- Press the button to stop (pause) playback.
- To return to the index screen, slide along the (zoom) lever while playback is paused.
- To move to the next page on the index screen, slide along the (zoom) lever.
- Videos recorded in high definition and standard definition are displayed on the index screen separately. Set “VIDEO QUALITY” in the recording menu to “UXP”, “XP”, “SP”, “EP”, “LS”, or “LE” to view the videos recorded in high definition, or to “SSW”, “SS”, “SEW”, or “SE” to view the videos recorded in standard definition, before selecting the playback mode.

“VIDEO QUALITY” (see p. 68)

Operation Buttons/Levers for Video Playback

During Index Screen Display

| Operation Button/Lever | Description |
|------------------------|-----------------------------------|
| UP/< DOWN/> | Select/move cursor |
| OK/INFO | Play back video |
| Zoom T/W | Move to the next or previous page |

During Video Playback

| Operation Button/Lever | During Video Playback | During Video Pause |
|------------------------|------------------------|--|
| | Pause | Playback |
| Zoom | - | Stop (returns to thumbnail display) |
| Zoom T / Vol.+ | Increases volume level | - |
| Zoom W / Vol.- | Decreases volume level | - |
| UP/<* | Reverse search | Frame-by-frame playback in reverse direction |
| DOWN/>* | Forward search | Frame-by-frame playback in forward direction |

*Press and hold to start slow playback.

Memo : _____

- You can search for a specific file by the recording date.

“Date Search” (see p. 39)

Caution : _____

Playback

- Make a backup of important recorded data.
It is recommended to copy your important recorded data to a DVD or other recording media for storage.
JVC will not be responsible for any lost data.


Adjusting the Volume of Videos



Checking the Recording Date and Other Information

You can display the recording date and duration of the selected file.

- 1 Pause playback.
- 2 Press OK/INFO.

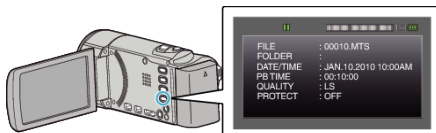


Playing a Video with Defective Management Information


Plays videos with defective management information.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

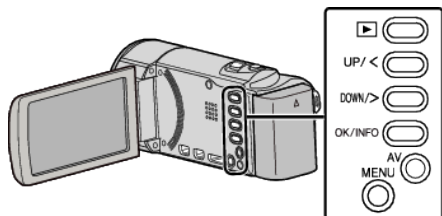


- 1 Select the playback mode.

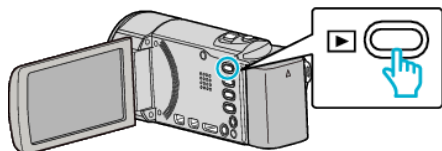

- 2 Press MENU.

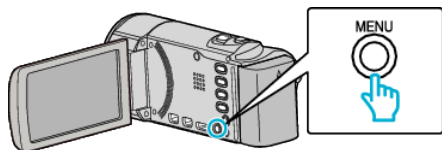

- 3 Select "PLAYBACK OTHER FILE" and press OK.

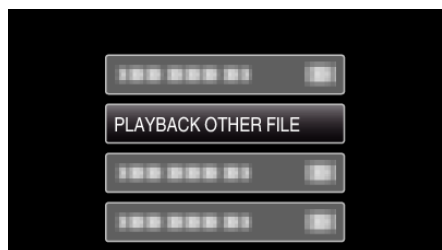

- 4 Select the desired video and press OK or ►/||.



"Playing Back Videos" (p. 37)

- To cancel and return to the previous screen, press MENU.

Memo :

- An MTS file is created in the EXTMOV folder when management information is corrupted.
- Depending on the condition of the damaged file, playback might fail or may not run smoothly.

Searching for a Specific Video

When there is a large number of recorded videos, it is difficult to look for the desired file from the index screen.

Use the search function to find the file you want.

- For videos, you can search by "SEARCH DATE".


"To search by recording dates" (p. 39)

Date Search


You can search and play videos according to recording dates.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

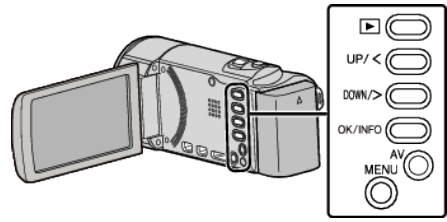


- 1 Select the playback mode.

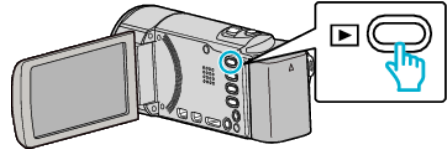


- 2 Press MENU.

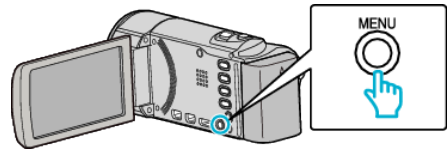

- 3 Select "SEARCH DATE" and press OK.

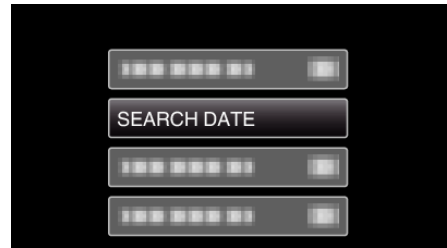

- 4 Press UP/< or DOWN/> to select a recording date and press OK.

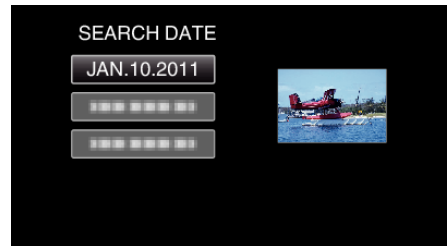

- To cancel and return to the previous screen, press MENU.

- 5 Select the desired video and press OK or ►/||.



- Only the files recorded on the selected date are displayed.
- To cancel and return to the previous screen, press MENU.
- To move to the next page on the index screen, slide along the [SD] (zoom) lever.

Connecting to and Viewing on TV

You can connect this unit to a TV for playback. The image quality on TV varies with the type of TV and the connecting cable. Select the connector that best suits your TV.

- Refer also to the instruction manual of the TV in use.

“Connecting via the HDMI Mini Connector” (☞ p. 40)

“Connecting via the Component Connector (GZ-HM30/GZ-HM50)” (☞ p. 42)

“Connecting via the AV Connector” (☞ p. 43)

Unnatural Displays on TV

| Trouble | Action |
|--|--|
| Images do not appear on the TV properly. | <ul style="list-style-type: none"> • Disconnect the cable and connect again. • Turn off and on this unit again. • When connected via the component connector, check if the setting of “COMPONENT OUTPUT” in the “CONNECTION SETTINGS” menu suits the connected TV. (Set to “1080i/720p” by default) <p>“COMPONENT OUTPUT (GZ-HM30/GZ-HM50)” (☞ p. 81)</p> |
| Images are projected vertically on the TV. | <ul style="list-style-type: none"> • Set “VIDEO OUTPUT” in the “CONNECTION SETTINGS” menu to “4:3”. <p>“VIDEO OUTPUT” (☞ p. 80)</p> |
| Images are projected horizontally on the TV. | <ul style="list-style-type: none"> • Adjust the TV’s screen accordingly. |
| The color of images looks strange. | <ul style="list-style-type: none"> • If the video was recorded with “x.v.Color” set to “ON”, set the x.v.Color setting of the TV to on. <p>“x.v.Color” (☞ p. 70)</p> <ul style="list-style-type: none"> • Adjust the TV’s screen accordingly. |
| HDMI-CEC functions do not work properly, and the TV does not work in conjunction with this unit. | <ul style="list-style-type: none"> • TVs may operate differently depending on the specifications, even if they are HDMI-CEC compliant. Therefore, the HDMI-CEC functions of this unit cannot be guaranteed to operate in combination with all the TVs. In such cases, set “HDMI CONTROL” to “OFF”. <p>“HDMI CONTROL” (☞ p. 82)</p> |
| The language on the display changed. | <ul style="list-style-type: none"> • It may occur when you connect this unit to a TV with different language setting using an HDMI mini cable. |


Connecting via the HDMI Mini Connector

If you are using an HDTV, you can play back in HD quality by connecting to the HDMI connector.


- Use a High Speed HDMI Cable.
- Refer also to the instruction manual of the TV in use.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

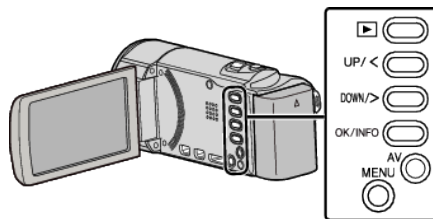

- 1 Connect to a TV.

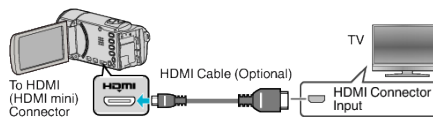

- 2 Connect the AC adapter to this unit.

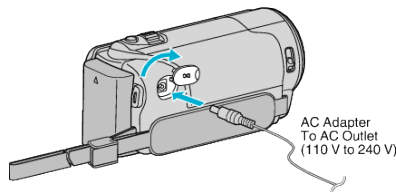

- This unit powers on automatically when the AC adapter is connected.

- 3 Press the external input button on the TV to switch to the input from this unit via the connected connector.



- 4 Play back a file.



“Playing Back Videos” (☞ p. 37)

Memo :

- To play back with date/time display, set “DISPLAY ON TV” in the “CONNECTION SETTINGS” menu to “ON”.

“DISPLAY ON TV” (☞ p. 80)

- Change the settings in “HDMI OUTPUT” according to the connection.
- “HDMI OUTPUT” (☞ p. 81)

- When connected to the TV via the HDMI mini cable, images and sounds may not be output properly depending on the TV connected. In such cases, perform the following operations.
 - 1) Disconnect the HDMI mini cable and connect it again.
 - 2) Turn off and on this unit again.

- For questions about the TV or method of connection, contact your TV's manufacturer.

Operating in Conjunction with TV via HDMI

Connecting this unit to an HDMI-CEC-enabled TV using the HDMI cable allows linked operations with the TV to be performed.

- HDMI-CEC (Consumer Electronics Control) is an industry standard that enables interoperability between HDMI-CEC compliant devices that are connected via HDMI cables.

Memo :

- Not all HDMI-control devices comply with the HDMI-CEC standard. The HDMI control function of this unit will not work when connected to these devices.
- This unit is not guaranteed to operate with all HDMI-CEC-enabled devices.
- Depending on the specifications of each HDMI-CEC-enabled device, some functions may not work with this unit. (For details, refer to the instruction manual of your TV.)
- Unintended operations may occur with some connected devices. In these cases, set "HDMI CONTROL" to "OFF".

"HDMI CONTROL" (☞ p. 82)

Preparations

- Connect an HDMI cable between this unit and the TV.

"Connecting via the HDMI Mini Connector" (☞ p. 40)

- Turn on the TV and set the HDMI-CEC related setting to "ON". (For details, refer to the instruction manual of the TV.)
- Turn on this unit and set "HDMI CONTROL" to "ON".

"HDMI CONTROL" (☞ p. 82)

Operation Method 1

- 1 Connect the HDMI cable.
 - 2 Connect the AC adapter to this unit.
 - This unit powers on automatically when the AC adapter is connected.
 - TV turns on automatically and switches to HDMI input mode when this unit is turned on.
 - 3 Select the playback mode.
-

Operation Method 2

- 1 Turn off the TV.
 - This unit turns off automatically.

Memo :

- Depending on the TV connected, the display language of this unit will automatically switch to the language that is selected for the TV when this unit is turned on.
(This is applicable only if this unit supports the language selected for the TV.) To use this unit with a language that differs from the display language of the TV, set "HDMI CONTROL" to "OFF".
- The display language of the TV will not switch automatically, even if the display language of this unit is changed.
- These functions may not work correctly when devices such as amplifier and selector are connected. Set "HDMI CONTROL" to "OFF".
- If HDMI-CEC does not work properly, turn off and on this unit again.

Caution :

- Do not remove the recording medium or perform any other operation (such as turning off the power) while accessing files. Also, be sure to use the provided AC adapter, as the data on the recording medium may be corrupted if the battery becomes exhausted during operation. If the data on the recording medium becomes corrupted, format the recording medium to use the medium again.
-

Playback


Connecting via the Component Connector (GZ-HM30/GZ-HM50)

You can connect this unit to the component connector of a TV to play back videos in analog high-definition quality.


- Refer also to the instruction manual of the TV in use.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

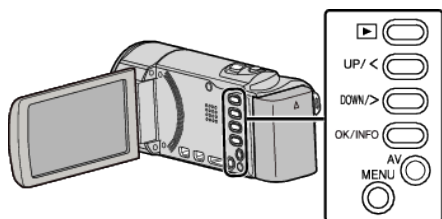

- 1 Connect to a TV.

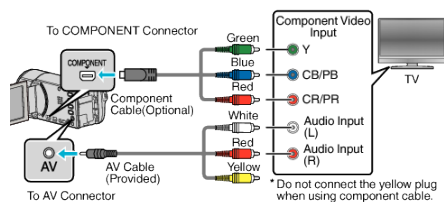

- 2 Connect the AC adapter to this unit.

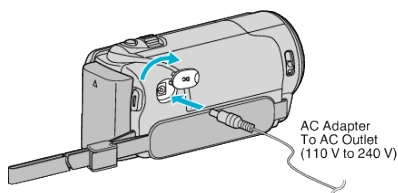

- This unit powers on automatically when the AC adapter is connected.

- 3 Press the external input button on the TV to switch to the input from this unit via the connected connector.



- 4 Play back a file.



“Playing Back Videos” (☞ p. 37)

Memo :

- To play back with date/time display, set “DISPLAY ON TV” in the “CONNECTION SETTINGS” menu to “ON”.
- “DISPLAY ON TV” (☞ p. 80)
- When playing back in HD quality, set “COMPONENT OUTPUT” in the “CONNECTION SETTINGS” menu to “1080i/720p”.
- The video is output in standard quality if the setting remains at “480i”.
- “COMPONENT OUTPUT (GZ-HM30/GZ-HM50)” (☞ p. 81)
- Component and composite (AV) cannot be output at the same time.

- For questions about the TV or method of connection, contact your TV's manufacturer.


Connecting via the AV Connector

By connecting the supplied AV cable to the AV connector, videos can be played back on a TV.


- Refer also to the instruction manual of the TV in use.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

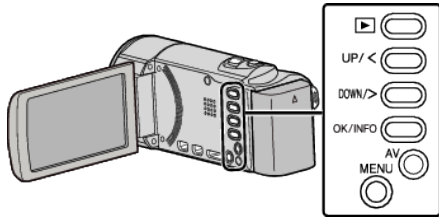

1 Connect to a TV.

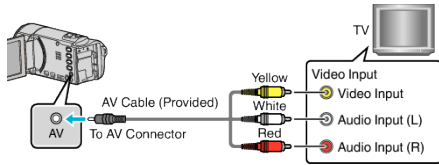

2 Connect the AC adapter to this unit.

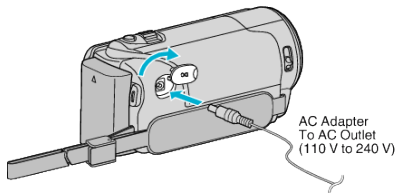

- This unit powers on automatically when the AC adapter is connected.

3 Press the external input button on the TV to switch to the input from this unit via the connected connector.



4 Play back a file.



“Playing Back Videos” (☞ p. 37)

Memo : _____

- To play back with date/time display, set “DISPLAY ON TV” in the “CONNECTION SETTINGS” menu to “ON”.

“DISPLAY ON TV” (☞ p. 80)

- For questions about the TV or method of connection, contact your TV's manufacturer.

Deleting Unwanted Files

Delete unwanted videos when the space in the recording media is running out.

The capacity of the recording media can be restored after deleting the files.

“Deleting the Currently Displayed File” (☞ p. 44)

“Deleting Selected Files” (☞ p. 45)

“Deleting All Files” (☞ p. 46)

Memo :

- Deleted files cannot be restored.
 - Files that are protected cannot be deleted.
Release protection before deleting the file.
- “Protecting Files” (☞ p. 46)
- Be sure to back up important files on a computer.
- “Backing Up All Files” (☞ p. 58)

Deleting a Video with Defective Management Information

Videos with defective management information cannot be deleted with the “Deleting the Currently Displayed File” function. This deletion is also not possible on the index screen.

■ To delete a video with defective management information


- Start or pause playback of a file.
“Playing a Video with Defective Management Information” (☞ p. 38)
- Press MENU.
- Select “DELETE” and press OK.
 - “CURRENT” cannot be selected.

Deleting the Currently Displayed File

Deletes the currently displayed file.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

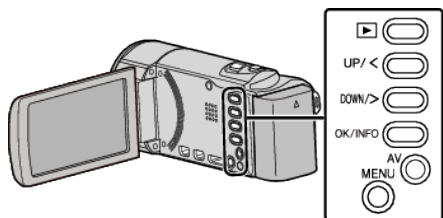


Caution :

- Deleted files cannot be restored.


- Select the playback mode.

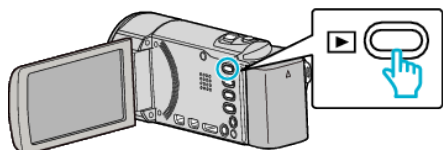


- Press MENU.

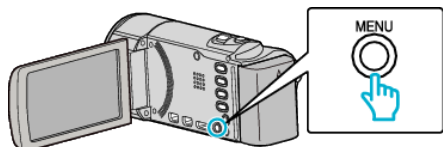


- Select “DELETE” and press OK.

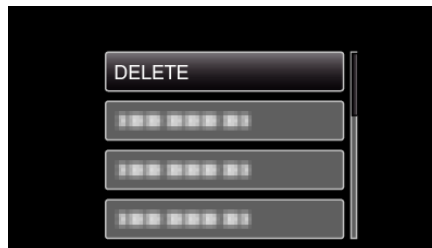

- Select “CURRENT” and press OK.

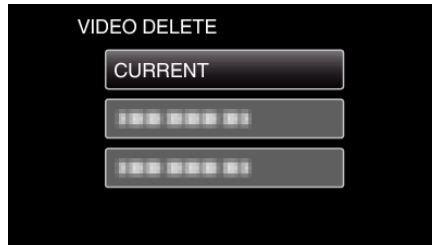

- Check that it is the file to delete, select “YES” and press OK.

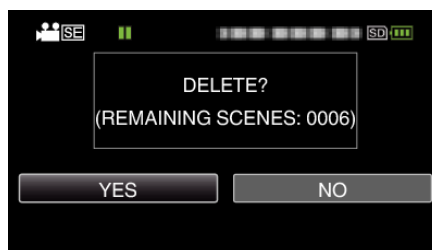

- The file to delete appears on this screen.
- Press the zoom lever to select the previous or next file.
- After deleting, press MENU.

Memo :

- Files that are protected cannot be deleted.
Release protection before deleting the file.


“Protecting Files” (☞ p. 46)

Deleting Selected Files

Deletes the selected files.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

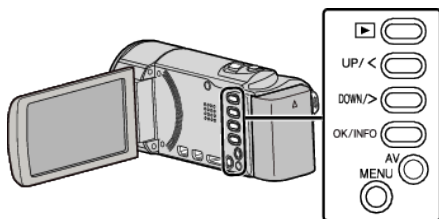


Caution : _____

- Deleted files cannot be restored.


1 Select the playback mode.

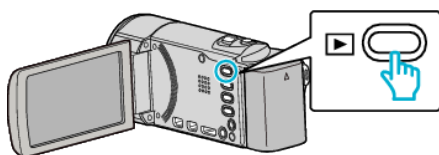


2 Press MENU.

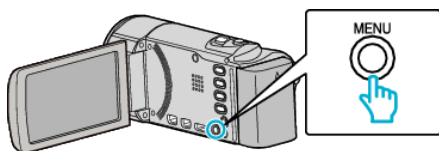

3 Select "DELETE" and press OK.

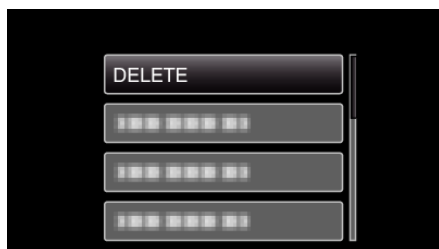

4 Select "FILE SELECT" and press OK.

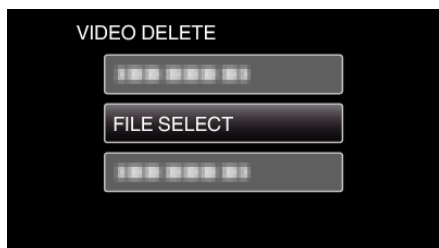


5 Select the files to delete and press OK.




- Press UP/< or DOWN/> to select files.
- A delete mark appears on the selected file. To remove the delete mark, press OK again.
- To move to the next page on the index screen, slide along the (zoom) lever.

6 After selecting all the files to delete, press MENU.

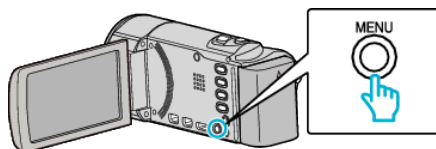

7 Select "EXECUTE" and press OK.

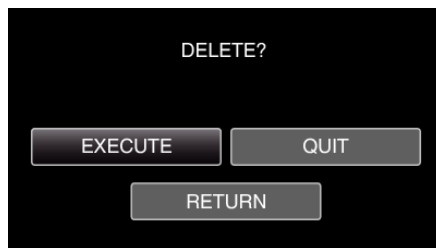

- After deleting, press OK.
- To cancel the deletion, select "QUIT" and press OK.
- To return to the previous screen, select "RETURN" and press OK.

Memo : _____

- Files that are protected cannot be deleted. Release protection before deleting the file.


"Protecting Files" (p. 46)

Deleting All Files

Deletes all files.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

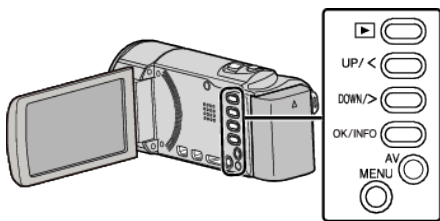


Caution : _____

- Deleted files cannot be restored.


1 Select the playback mode.

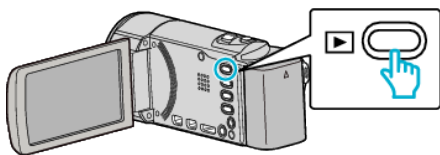


2 Press MENU.

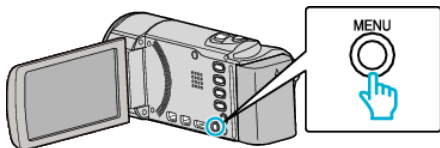

3 Select "DELETE" and press OK.

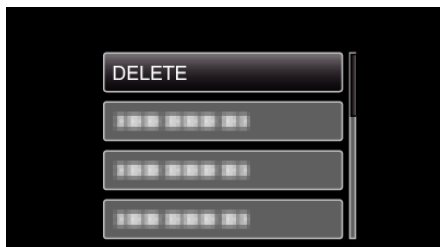

4 Select "DELETE ALL" and press OK.

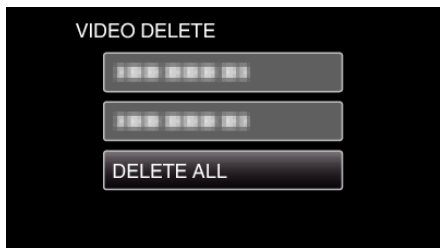

5 Select "YES" and press OK.



- After deleting, press OK.
- To cancel the deletion, select "NO" and press OK.

Memo : _____

- Files that are protected cannot be deleted. Release protection before deleting the file.

"Protecting Files" (p. 46)

Protecting Files

Prevent important videos from being deleted accidentally by protecting them.

"Protecting the Currently Displayed File" (p. 46)

"Protecting Selected Files" (p. 47)

"Protecting All Files" (p. 48)

"Releasing Protection of All Files" (p. 48)

Caution : _____


- When the recording media is formatted, even the protected files will be deleted.

Protecting the Currently Displayed File


Protects or releases protection of the currently displayed file.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

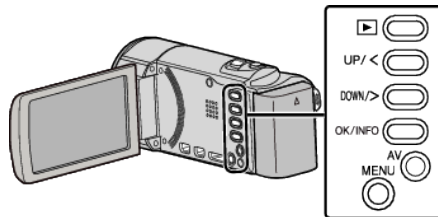


1 Select the playback mode.

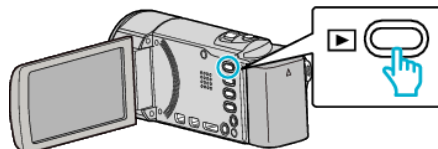


2 Press MENU.

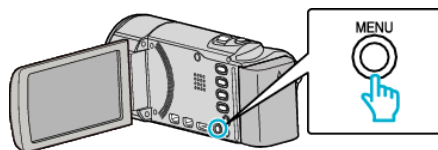

3 Select "PROTECT/CANCEL" and press OK.

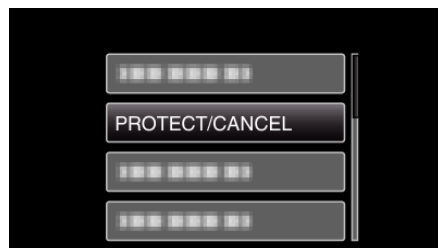

4 Select "CURRENT" and press OK.

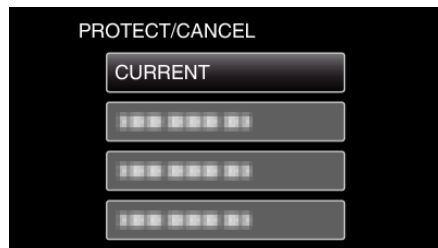

5 Check that it is the file to protect, select "YES" and press OK.




- The file to protect appears on this screen.
- To cancel the protection, select "NO" and press OK.
- Press the zoom lever to select the previous or next file.
- After setting, press OK.
- To exit the screen, press MENU.

Protecting Selected Files


Protects or releases protection of the selected files.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

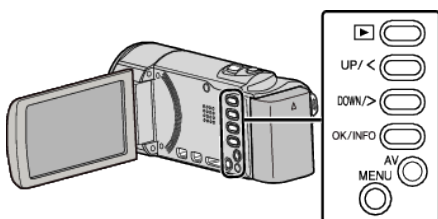


- 1 Select the playback mode.

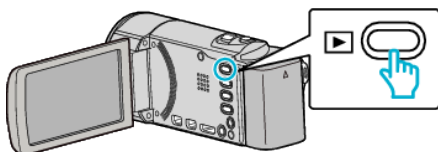


- 2 Press MENU.

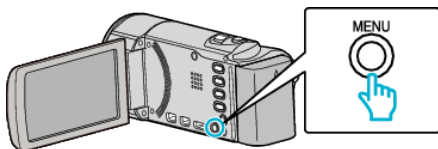

- 3 Select "PROTECT/CANCEL" and press OK.

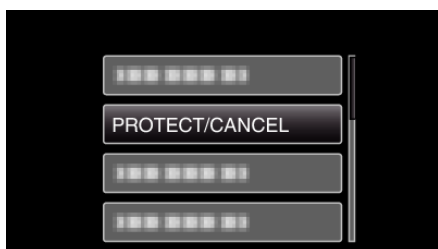



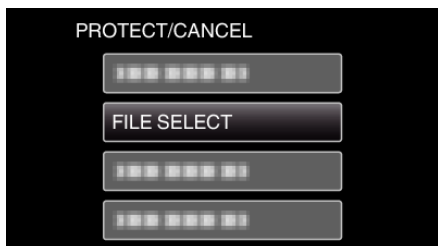

- 4 Select "FILE SELECT" and press OK.




- To exit, press MENU, select "YES" and press OK.

- 5 Select the files to protect or release protection of and press OK.



- A protect mark  appears on the selected file. To remove the protect mark , press OK again.
- To move to the next page on the index screen, slide along the  (zoom) lever.
- If the transmission mode of Eye-Fi Helper is set to "Share Selected Files Only" or "Transmit Selected Files Only",  will be displayed.

- 6 After selecting all the files to protect or release protection of, press MENU.

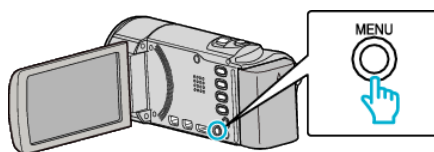

- 7 Select "YES" and press OK.


- To cancel the protection, select "NO" and press OK.

Protecting All Files


Protects all files.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

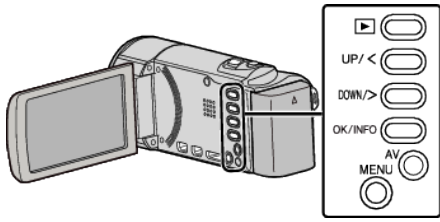


1 Select the playback mode.

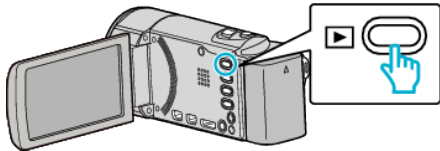

2 Press MENU.

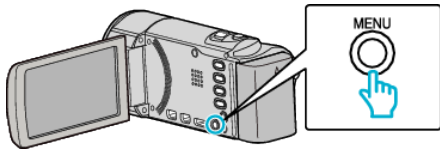

3 Select "PROTECT/CANCEL" and press OK.

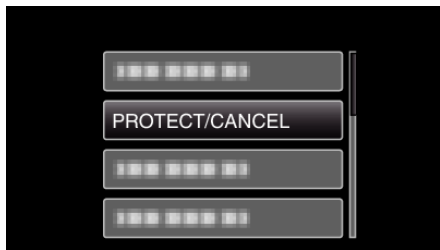

4 Select "PROTECT ALL" and press OK.



5 Select "YES" and press OK.




- After setting, press OK.

Releasing Protection of All Files


Releases protection of all files.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

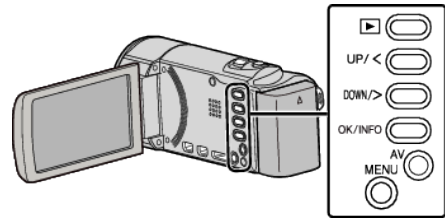


1 Select the playback mode.

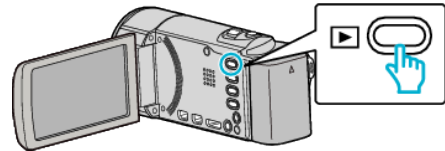


2 Press MENU.

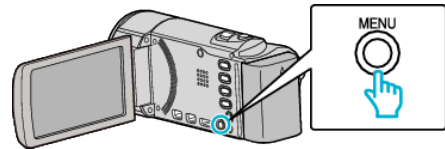

3 Select "PROTECT/CANCEL" and press OK.

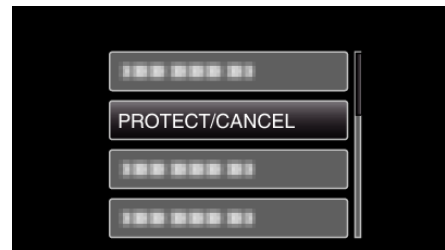

4 Select "CANCEL ALL" and press OK.

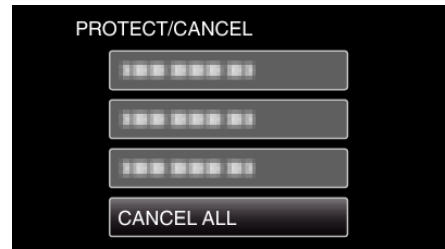

5 Select "YES" and press OK.



- After protection is released, press OK.


Combining Videos Recorded by Seamless Recording (GZ-HM50)

Videos that are recorded on two separate media and with "SEAMLESS RECORDING" in the video recording menu enabled can be combined into a single video.


"SEAMLESS RECORDING (GZ-HM50)" (E3 p. 69)

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

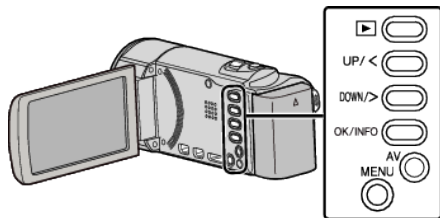

1 Select the playback mode.

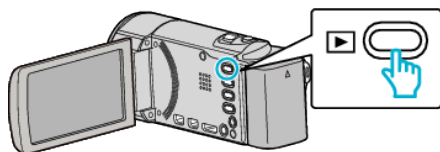

2 Press MENU.

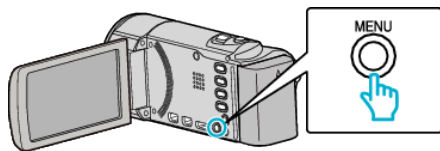

3 Select "SEAMLESS REC CTRL" and press OK.




4 Select "COMBINE SCENES" and press OK.




- This unit starts a search to detect seamless videos. Combining cannot be performed if no seamless videos are found.
- When "DEL COMBINED SCENES" is selected, the combination information of seamless videos will be deleted.


5 Select "YES" and press OK.

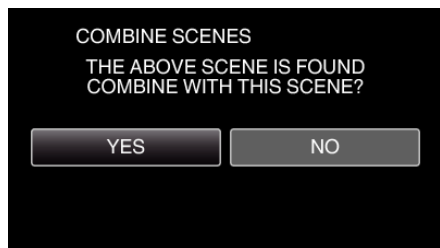

6 Select the media to store the combined video and press OK.

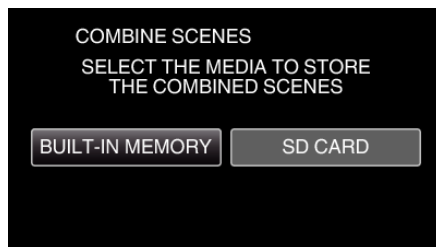

7 Select "YES" and press OK.

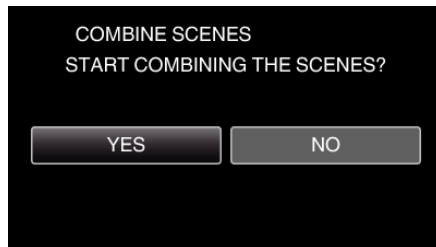

- Combining of the videos starts.
- After videos are combined, press OK.

Memo : _____

- Seamless videos cannot be combined if there is not enough free space in the built-in memory or SD card. Check the amount of remaining free space before combining.

How to Enable Seamless Video Recording Again

To start seamless recording again after the previous session is complete, it is necessary to combine seamless videos, or delete the combination information of the seamless videos.

To delete the combination information of seamless videos, select "DEL COMBINED SCENES" in step 4.

Select "DEL COMBINED SCENES" for each media to delete the combination information of seamless videos completely. The icons on the files will be removed.

Copying Files to Card (GZ-HM50)

You can copy videos from the built-in memory to an SD card.
“Copying All Files (GZ-HM50)” (☞ p. 50)
“Copying Selected Files (GZ-HM50)” (☞ p. 51)

Caution :


- Make sure that there is enough space left in the destination medium.
- Videos in the SD card cannot be copied to the built-in memory.

Copying All Files (GZ-HM50)


Copies all videos to an SD card.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

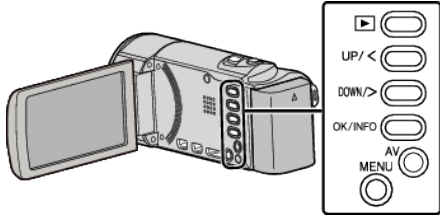


- 1 Select the playback mode.

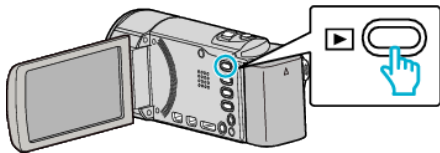

- 2 Press MENU.

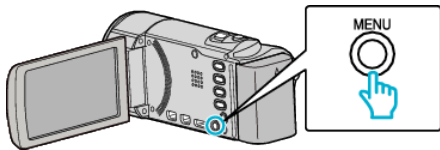


- 3 Select “COPY” and press OK.

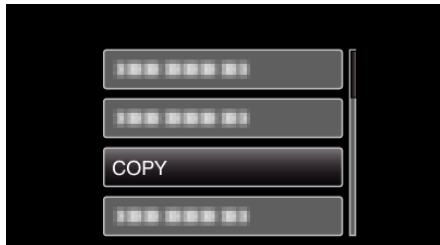

- 4 Select “COPY ALL” and press OK.



- 5 Select “EXECUTE” and press OK.

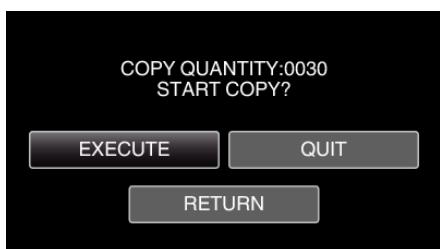

- Copying starts.

- 6 Press OK.




Copying Selected Files (GZ-HM50)


Copies selected videos to an SD card.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

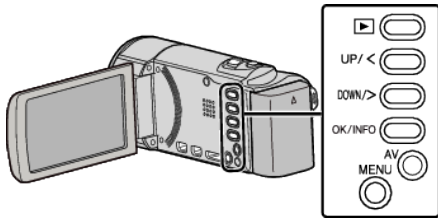


1 Select the playback mode.

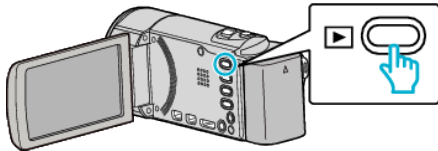

2 Press MENU.

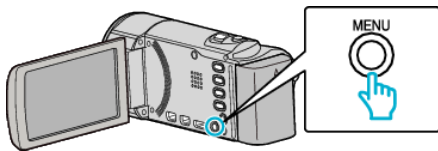

3 Select "COPY" and press OK.

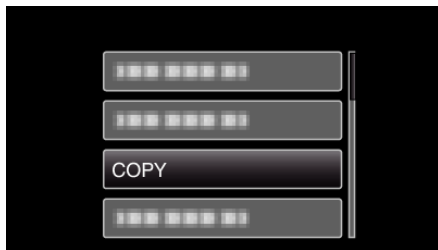

4 Select "SELECT AND COPY" and press OK.




5 Select the desired file and press OK.



- A check mark appears on the selected file. To remove the check mark, press OK again.

6 Press MENU.

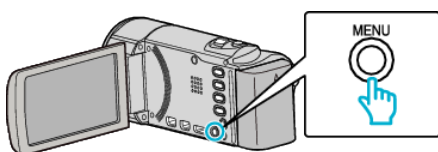


7 Select "EXECUTE" and press OK.



- Copying starts.

8 Press OK.

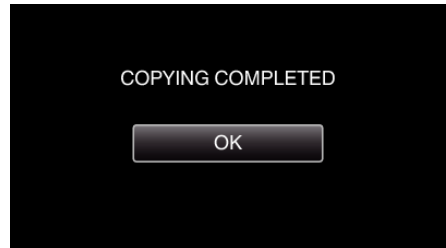

Moving Files to Card (GZ-HM50)

You can move videos from the built-in memory to an SD card. Files that are moved will be deleted from the original media. Files with a protect mark will not be deleted from the original media. "Moving All Files (GZ-HM50)" (p. 52)
"Moving Selected Files (GZ-HM50)" (p. 53)

Caution :


- Make sure that there is enough space left in the destination medium.
- Videos in the SD card cannot be moved to the built-in memory.

Moving All Files (GZ-HM50)


Moves all videos to an SD card. Files that are moved will be deleted from the original media. Files with a protect mark will not be deleted from the original media.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

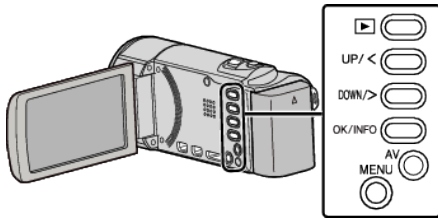


1 Select the playback mode.

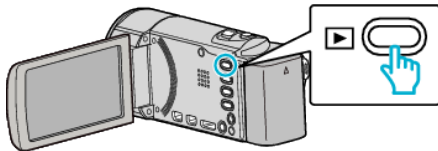

2 Press MENU.

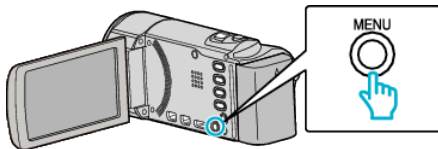

3 Select "MOVE" and press OK.

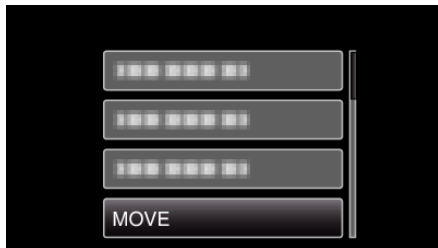

4 Select "MOVE ALL" and press OK.



5 Select "EXECUTE" and press OK.



- Moving of files starts.

6 Press OK.




Moving Selected Files (GZ-HM50)


Moves selected videos to an SD card.
Files that are moved will be deleted from the original media.
Files with a protect mark will not be deleted from the original media.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

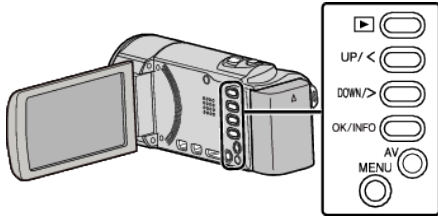


1 Select the playback mode.

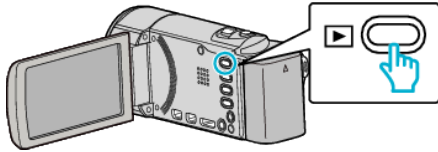


2 Press MENU.

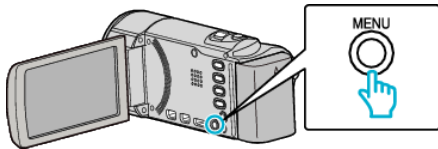

3 Select "MOVE" and press OK.

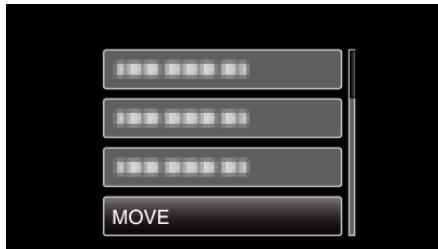

4 Select "SELECT AND MOVE" and press OK.

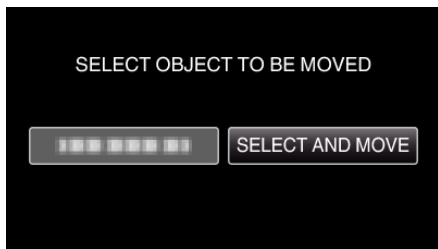


5 Select the desired file and press OK.



- A check mark appears on the selected file.
To remove the check mark, press OK again.

6 Press MENU.

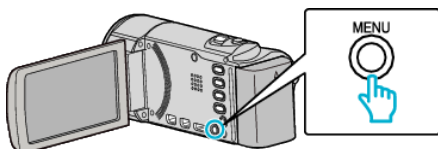

7 Select "EXECUTE" and press OK.



- Moving of files starts.

8 Press OK.




Dubbing Files by Connecting to a DVD Recorder or VCR

You can dub videos in standard quality by connecting to a DVD recorder or VCR.

- Refer also to the instruction manuals of the TV, DVD recorder, VCR, etc.

1 Connect to a VCR/DVD recorder.

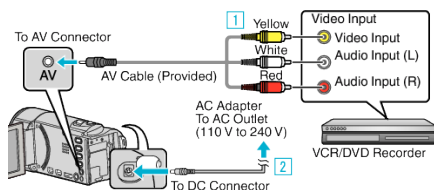


1 Connect using the provided AV cable.

2 Connect the AC adapter to this unit.

- This unit powers on automatically when the AC adapter is connected.
- Be sure to use the supplied JVC AC adapter.

2 Select the playback mode.

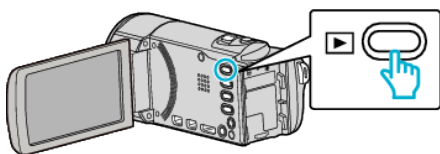

3 Prepare the TV/VCR for recording.

- Switch to a compatible external input.
- Insert a DVD-R or video tape.

4 Prepare this unit for playback.

- Set "VIDEO OUTPUT" in the "CONNECTION SETTINGS" menu to the aspect ratio ("4:3" or "16:9") of the connecting TV.

"VIDEO OUTPUT" (p. 80)

- To include the date during dubbing, set "DISPLAY ON TV" in the "CONNECTION SETTINGS" menu to "ON".
Set "ON-SCREEN DISPLAY" in the playback menu to "ON".

"DISPLAY ON TV" (p. 80)

"ON-SCREEN DISPLAY" (p. 74)

5 Start recording.

- Start playback on this unit and press the record button on the recorder.
- "Playing Back Videos" (p. 37)
- After playback is complete, stop the recording.

Caution :


- File copying by connecting this unit to a DVD writer is not supported.

Creating a Disc Using a Connected Blu-ray Recorder


You can create discs using a Blu-ray recorder by connecting it to this unit using a USB cable.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

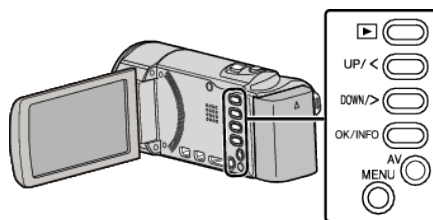

1 Open the LCD monitor.

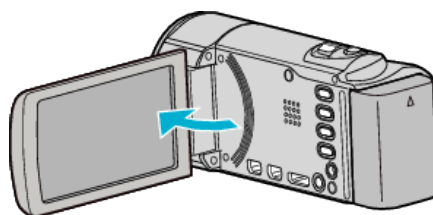

2 Connect to a Blu-ray recorder.

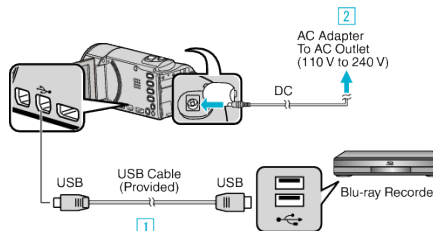

1 Connect using the provided USB cable.


2 Connect the AC adapter to this unit.

- This unit powers on automatically when the AC adapter is connected.
- Be sure to use the supplied JVC AC adapter.
- 3 The "SELECT DEVICE" menu appears.

3 Select "CONNECT TO OTHER" and press OK.



4 (GZ-HM50) Select the desired media and press OK.

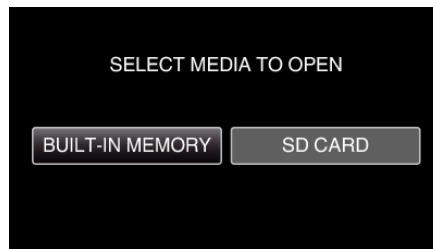

- "BUILT-IN MEMORY" is applicable to GZ-HM50 only.

5 Perform dubbing on the Blu-ray recorder.

- Refer also to the instruction manual of the Blu-ray recorder.

Memo :

- The created discs are playable only on AVCHD Lite compatible Blu-ray recorders.
- Refer also to the following website.

<http://www.jvc-victor.co.jp/dvmain/>

Copying

Copying to Windows PC

You can copy files to a computer using the provided software.

DVDs can also be created using the computer's DVD drive.

If the provided software is not installed, this unit will be recognized as an external storage when connected.

Memo :

- To record to discs, a recordable DVD drive is required for the computer in use.


Trouble with Using the Provided Software Everio MediaBrowser 3

Consult the customer service center below.

- Pixela User Support Center

| | |
|------------------|--|
| Telephone | USA and Canada (English): +1-800-458-4029 (toll-free) Europe (UK, Germany, France, and Spain) (English/German/French/Spanish): +800-1532-4865 (toll-free) Other Countries in Europe (English/German/French/Spanish): +44-1489-564-764 Asia (Philippines) (English): +63-2-438-0090 China (Chinese): 10800-163-0014 (toll-free) |
| Homepage | http://www.pixela.co.jp/oem/jvc/mediabrowser/e/ |

- For details on how to upload to YouTube, refer to "MediaBrowser Help" in the "Help" menu of Everio MediaBrowser.

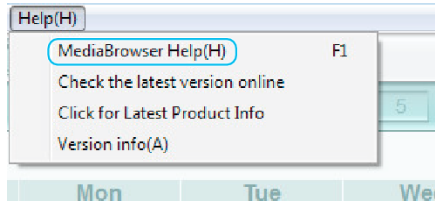

Verifying System Requirements (Guideline)

Right-click on “Computer” (or “My Computer”) in the “Start” menu and select “Properties” to check the following items.

Windows Vista/Windows 7

- Refer to the operating instructions found in the animation on the Detailed User Guide.

Windows XP

- Refer to the operating instructions found in the animation on the Detailed User Guide.

| | Windows Vista/Windows 7 | Windows XP |
|---------------|--|--|
| OS | Windows Vista 32/64-bit Home Basic or Home Premium (Pre-installed versions only) Service Pack 2 Windows 7 32/64-bit Home Premium (Pre-installed versions only) | Windows XP Home Edition or Professional (Pre-installed versions only) Service Pack 3 |
| CPU | High definition: Intel Core Duo, CPU 1.66 GHz or higher (Intel Core 2 Duo, CPU 2.13 GHz or higher recommended) Standard definition: Intel Pentium 4, CPU 3.0 GHz or higher (Intel Pentium D, CPU 3.0 GHz or higher recommended) | High definition: Intel Core Duo, CPU 1.66 GHz or higher (Intel Core 2 Duo, CPU 2.13 GHz or higher recommended) Standard definition: Intel Pentium 4, CPU 3.0 GHz or higher (Intel Pentium D, CPU 3.0 GHz or higher recommended) |
| RAM | At least 2 GB | At least 1 GB |
| Video editing | High definition: Intel Core i7, CPU 2.53 GHz or higher recommended Standard definition: Intel Core 2 Quad, CPU 2.4 GHz or higher recommended | High definition: Intel Core i7, CPU 2.53 GHz or higher recommended Standard definition: Intel Core 2 Quad, CPU 2.4 GHz or higher recommended |

Other requirements

Display: 1024×768 pixels or above (1280×1024 pixels or above recommended)

Graphic: Intel G965 or higher recommended

Memo :

- If your PC does not meet the above system requirements, operations of the provided software cannot be guaranteed.
- For more information, contact your PC's manufacturer.

Installing the Provided Software

You can display the recorded images in calendar format and perform simple editing using the provided software.

Windows Vista/Windows 7

- Refer to the operating instructions found in the animation on the Detailed User Guide.

Windows XP


- Refer to the operating instructions found in the animation on the Detailed User Guide.

Copying


Backing Up All Files

Before making backup, make sure that enough free space is left in the computer's hard disk (HDD).


Memo : To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

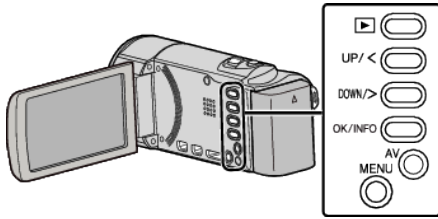

1 Open the LCD monitor.

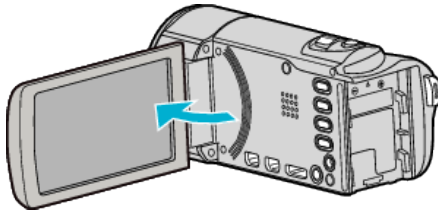


2 Connect the USB cable and the AC adapter.

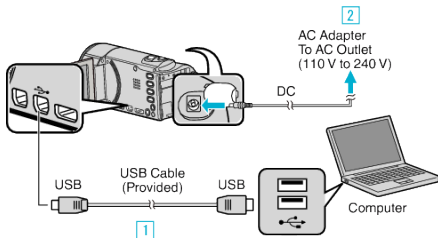

- 1 Connect using the provided USB cable.
 - 2 Connect the AC adapter to this unit.
 - This unit powers on automatically when the AC adapter is connected.
 - Be sure to use the supplied JVC AC adapter.
 - 3 The "SELECT DEVICE" menu appears.
- 3 Select "CONNECT TO PC" and press OK.



- Press UP/< or DOWN/> to move the cursor.
- 4 Select "BACK UP" and press OK.

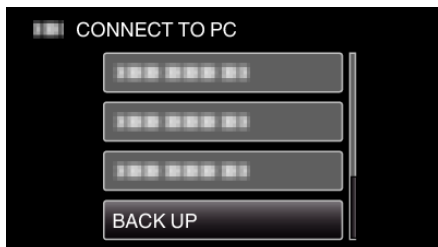


- Press UP/< or DOWN/> to move the cursor.
 - To cancel and return to the previous screen, press MENU.
 - The provided software Everio MediaBrowser 3 starts up on the computer. The subsequent operations are to be performed on the computer.
- 5 Select "Back-up".




Click "All volume in camcorder"

6 Start backup.

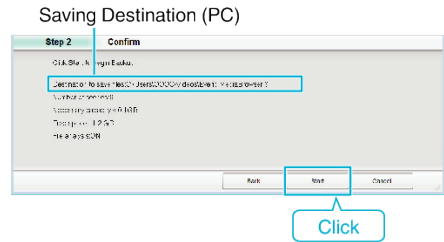

- Backup starts.

7 After backup is complete, click "OK".

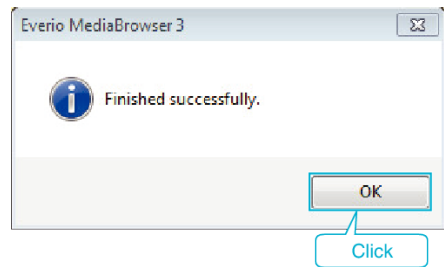

Memo :


- Before making backup, load the SD card in which the videos are stored on this unit.
- After backing up your files using the provided software, they cannot be restored to this unit.
- If you encounter any problems with the provided software Everio MediaBrowser 3, please consult the "Pixela User Support Center".

| | |
|------------------|--|
| Telephone | USA and Canada (English): +1-800-458-4029 (toll-free) Europe (UK, Germany, France, and Spain) (English/German/French/Spanish): +800-1532-4865 (toll-free) Other Countries in Europe (English/German/French/Spanish): +44-1489-564-764 Asia (Philippines) (English): +63-2-438-0090 China (Chinese): 10800-163-0014 (toll-free) |
| Homepage | http://www.pixela.co.jp/oem/jvc/mediabrowser/e/ |

- Delete unwanted videos before making backup. It takes time to back up many videos.
- "Deleting Unwanted Files" (p. 44)

Disconnecting this Unit from Computer

1 Click "Safely Remove Hardware and Eject Media".

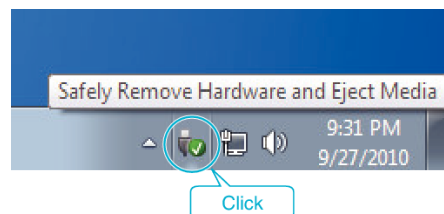

- 2 Click "Safely Remove USB Mass Storage Device".
- 3 (For Windows Vista) Click "OK".
- 4 Disconnect the USB cable and close the LCD monitor.


Organizing Files

After backing up your files, organize them by adding labels such as "Family Trip" or "Athletic Meet". This is useful not only for creating discs, but for viewing the files too.


- 1 Double-click on the Everio MediaBrowser 3 icon.
 - The provided software starts up.



- 2 Display the month of the files to organize.

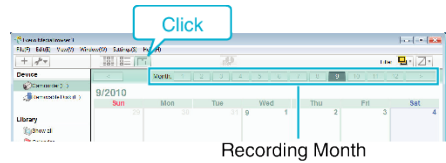

- 3 Create a user list.

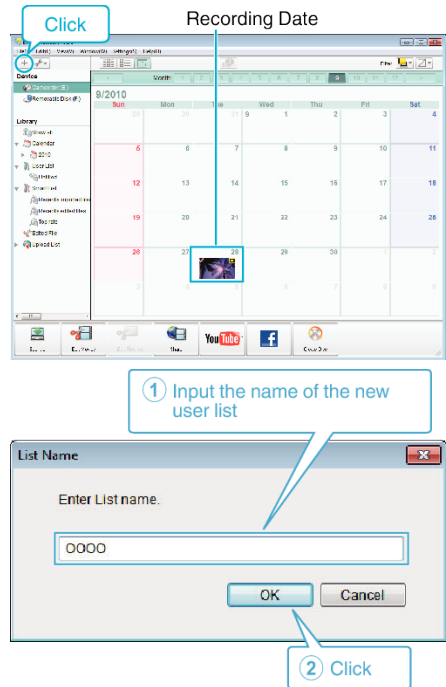


- A new user list is added to the user list library.

- 4 Click on the recording day.

 - The thumbnails of the files recorded on the day are displayed.

- 5 Register files to the created user list.

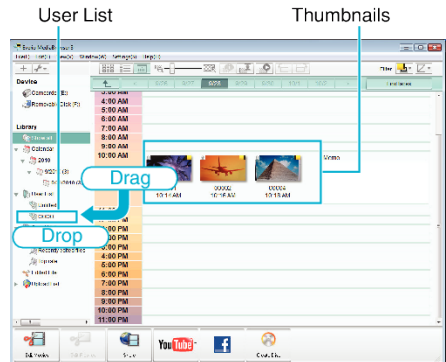

Memo :

- If you encounter any problems with the provided software Everio MediaBrowser 3, please consult the "Pixela User Support Center".

| | |
|------------------|--|
| Telephone | USA and Canada (English): +1-800-458-4029 (toll-free) Europe (UK, Germany, France, and Spain) (English/German/French/Spanish): +800-1532-4865 (toll-free) Other Countries in Europe (English/German/French/Spanish): +44-1489-564-764 Asia (Philippines) (English): +63-2-438-0090 China (Chinese): 10800-163-0014 (toll-free) |
| Homepage | http://www.pixela.co.jp/oem/jvc/mediabrowser/e/ |

Recording Videos to Discs

Copy the files that are arranged using the user list to DVDs.

GZ-HM430

You can create only AVCHD discs using the provided application software.


To create DVD-Video discs, refer to “Dubbing Files by Connecting to a DVD Recorder or VCR” (p. 54).

Using the optional application software, you can create DVD-Video and BD discs on a computer.

Download the optional software here


http://www.pixela.co.jp/oem/jvc/mediabrowser/e/purchase_dl/mediabrowser_hd_2/

- 1 Insert a new disc into the PC's recordable DVD or Blu-ray drive.
- 2 Select the desired user list.

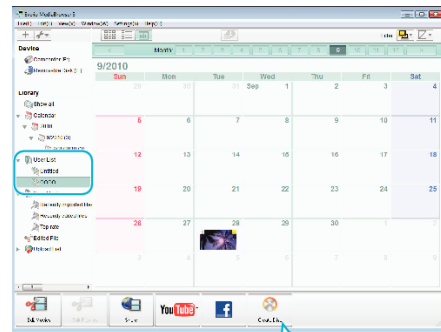

Click


- 3 Select the files to copy to disc in order.

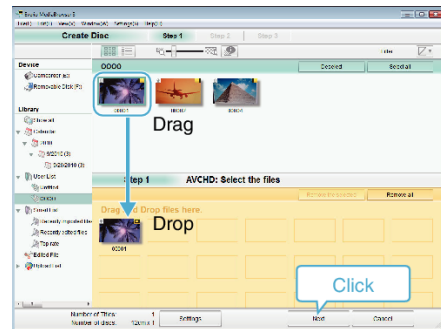

Click

- Click “Settings” to select the disc type. Image quality is set to standard when DVD-Video is selected.
- Click “Select all” to select all the displayed files.
- After selecting, click “Next”.

- 4 Set the title of the top menu of the disc.

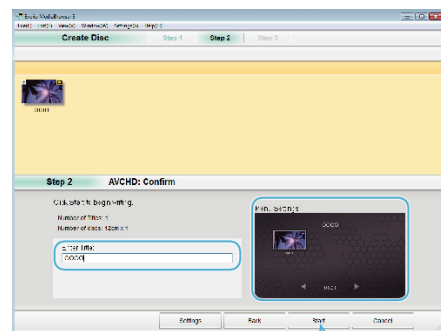

Click

- Click “Settings” to select the menu background.
- After setting, click “Start”.

- 5 After copying is complete, click “OK”.

Memo :

- The following types of discs can be used on the provided software Everio MediaBrowser 3.
DVD-R
DVD-R DL
DVD-RW

DVD+R
 DVD+R DL
 DVD+RW

- Everio MediaBrowser 3 supports 2 disc formats: DVD-Video and AVCHD.
- Use Everio MediaBrowser 3 Player to play back the disc. Refer to the help file of the provided Everio MediaBrowser 3 software to operate.
- To view the help file of Everio MediaBrowser 3, select "Help" from the Everio MediaBrowser 3's menu bar or press F1 on the keyboard.
- If you encounter any problems with the provided software Everio MediaBrowser 3, please consult the "Pixela User Support Center".


| | |
|------------------|--|
| Telephone | USA and Canada (English): +1-800-458-4029 (toll-free) Europe (UK, Germany, France, and Spain) (English/German/French/Spanish): +800-1532-4865 (toll-free) Other Countries in Europe (English/German/French/Spanish): +44-1489-564-764 Asia (Philippines) (English): +63-2-438-0090 China (Chinese): 10800-163-0014 (toll-free) |
| Homepage | http://www.pixela.co.jp/oem/jvc/mediabrowser/e/ |

Backing Up Files Without Using Provided Software


Copy the files to a computer using the following method.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

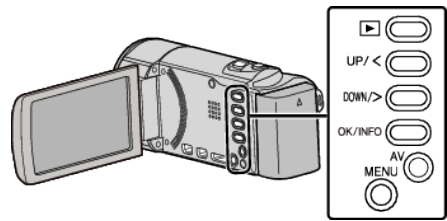

1 Open the LCD monitor.

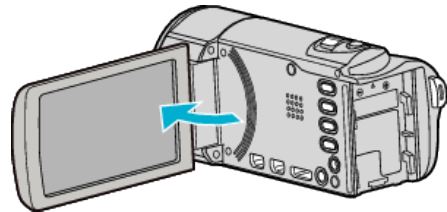

2 Connect the USB cable and the AC adapter.

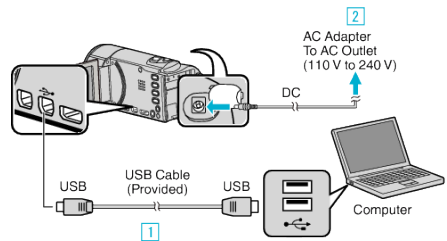

1 Connect using the provided USB cable.

2 Connect the AC adapter to this unit.


- This unit powers on automatically when the AC adapter is connected.
- Be sure to use the supplied JVC AC adapter.
- 3 The "SELECT DEVICE" menu appears.

3 Select "CONNECT TO PC" and press OK.



- Press UP/< or DOWN/> to move the cursor.

4 Select "PLAYBACK ON PC" and press OK.

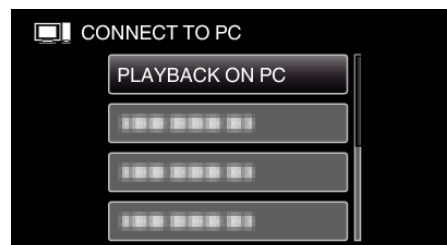

- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.
- Close the Everio MediaBrowser 3 program, if it starts.
- The subsequent operations are to be performed on the computer.

5 Select "Computer" (Windows Vista) / "My Computer" (Windows XP) / "Computer" (Windows 7) from the "Start" menu, then click on the "JVCCAM_MEM" or "JVCCAM_SD" icon.

- Open the folder with the desired files.
- "List of Files and Folders" (p. 62)

Copying

- 6 Copy the files to any folder in the computer (desktop, etc).

Caution :


- When the folders or files are deleted/moved/rename in the computer, they cannot be played back on this unit anymore.

Memo :

- To edit/view the files, use a software that supports AVCHD (video) files.
- The above operations on computer may vary with the system used.

Disconnecting this Unit from Computer

- 1 Click "Safely Remove Hardware and Eject Media".

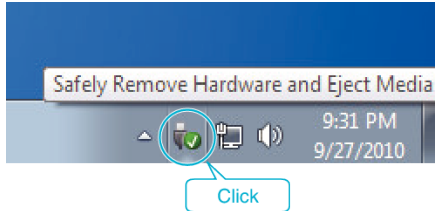


- 2 Click "Safely Remove USB Mass Storage Device".
- 3 (For Windows Vista) Click "OK".
- 4 Disconnect the USB cable and close the LCD monitor.

List of Files and Folders

Folders and files are created in the built-in memory and SD card as shown below.

They are created only when necessary.

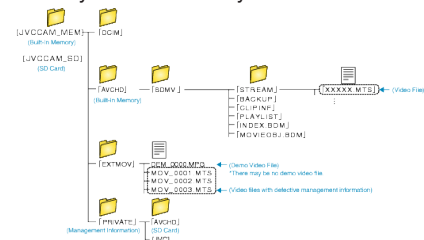

Caution :


- When the folders or files are deleted/moved/rename in the computer, they cannot be played back on this unit anymore.

Copying to Mac Computer


Copy the files to a Mac computer using the following method.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

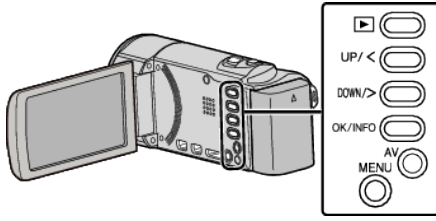

1 Open the LCD monitor.

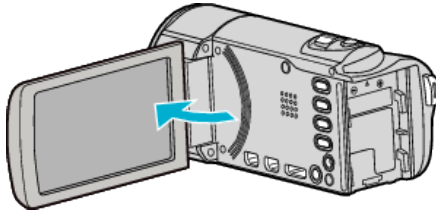


2 Connect the USB cable and the AC adapter.

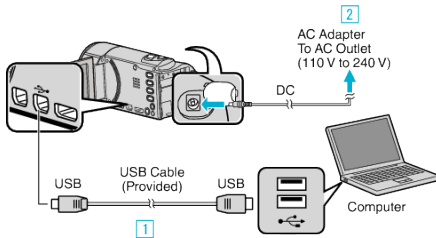

- 1 Connect using the provided USB cable.
 - 2 Connect the AC adapter to this unit.
 - This unit powers on automatically when the AC adapter is connected.
 - Be sure to use the supplied JVC AC adapter.
 - 3 The "SELECT DEVICE" menu appears.
 - The provided software is not required for this process.
- 3 Select "CONNECT TO PC" and press OK.




- Press UP/< or DOWN/> to move the cursor.
- 4 Select "PLAYBACK ON PC" and press OK.

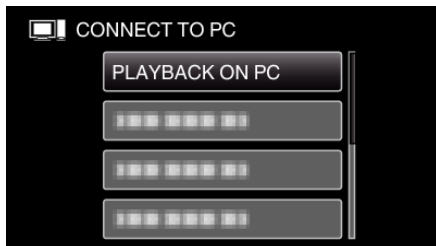


- Press UP/< or DOWN/> to move the cursor.
 - To cancel and return to the previous screen, press MENU.
 - Close the Everio MediaBrowser 3 program, if it starts.
 - The subsequent operations are to be performed on the computer.
- 5 Click on the "JVCCAM_MEM" or "JVCCAM_SD" icon on the desktop.
- The folder opens.
- 6 Click on the column display icon.

Column Display Icon

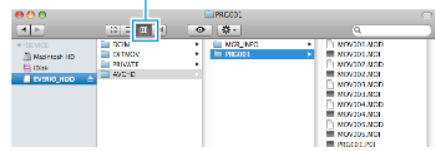

- Open the folder with the desired files. "List of Files and Folders" (p. 62)

7 Copy the files to any folder in the computer (desktop, etc).

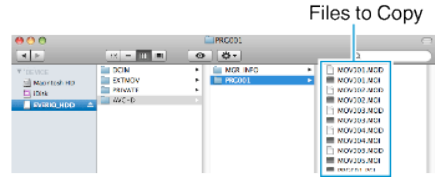

Caution :

- When the folders or files are deleted/moved/renamed in the computer, they cannot be played back on this unit anymore.
- MTS files that are copied to a Mac computer cannot be imported to iMovie. To use MTS files with iMovie, import the files using iMovie.

Memo :

- To edit/view the files, use a software that supports AVCHD (video) files.
- When removing this unit from the computer, drag and drop the "JVCCAM_MEM" or "JVCCAM_SD" icon on the desktop to the trash bin.

iMovie

You can import files from this unit to a computer using Apple's iMovie '08, '09 or '11.

To verify the system requirements, select "About This Mac" from the Apple menu. You can determine the operating system version, processor and amount of memory.

- Standard definition (SSW/SEW/SS/SE) is not supported.
- For the latest information on iMovie, refer to the Apple website.
- For details on how to use iMovie, refer to the help file of the software.
- There is no guarantee that the operations will work with all computer environments.


Operating the Menu

Use the operation buttons to set the menu.


- The menu differs according to the mode in use.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

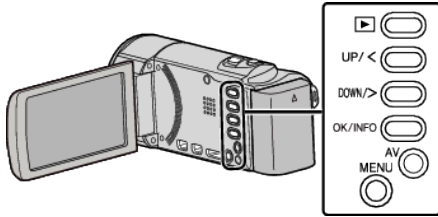


- 1 Press MENU.

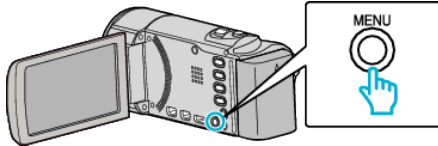

- 2 Select the desired menu and press OK.

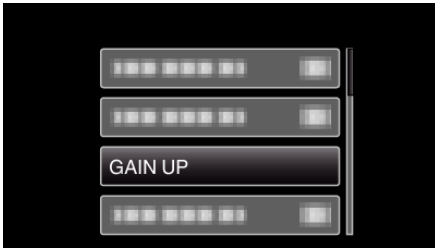

- 3 Select the desired setting and press OK.

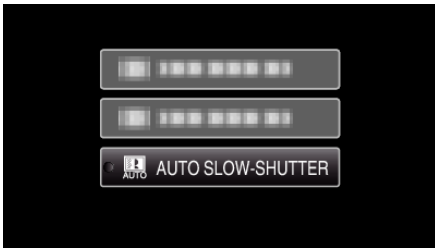

Memo : _____

- To return to the previous screen, press MENU.

Returning All Settings to Default: _____

- Set using "FACTORY PRESET" in the basic settings menu.

"FACTORY PRESET" (p. 79)

Recording Menu (Video)

You can adjust various settings, such as brightness and white balance, to suit the subject or purpose. You can also change settings such as picture quality and gain.

| Setting | Details |
|----------------------|---|
| MANUAL SETTING | Recording settings can be adjusted manually. <ul style="list-style-type: none"> They are displayed only when recording in the manual mode. "Manual Recording" (☞ p. 24) |
| FACE PRIORITY AE/AF | Detects faces and adjusts the brightness and focus automatically. "Capturing Human Subjects Clearly (Face Detection AE/AF)" (☞ p. 31) |
| DIS | Camera shake during recording can be effectively reduced. "Reducing Camera Shake" (☞ p. 31) |
| GAIN UP | Makes the subject appear bright automatically when recording in dark places. "GAIN UP" (☞ p. 67) |
| WIND CUT | Reduces the noise caused by wind. "WIND CUT" (☞ p. 67) |
| TIME-LAPSE RECORDING | Enables the changes of a scene that occur slowly over a long period to be shown within a short time by taking frames of it at a certain interval. "Recording at Intervals (TIME-LAPSE RECORDING)" (☞ p. 32) |
| AUTO REC | This function enables the unit to record automatically by sensing the changes in subject's movement (brightness) within the red frame displayed on the LCD monitor. "Recording Automatically by Sensing Movements (AUTO REC)" (☞ p. 34) |
| VIDEO QUALITY | Sets the video quality. "VIDEO QUALITY" (☞ p. 68) |
| ZOOM | Sets the maximum zoom ratio. "ZOOM" (☞ p. 69) |
| SEAMLESS RECORDING | Automatically switches to a different media and continues recording when the remaining space on the current recording media runs out. For example, when the remaining space on the built-in memory runs out during recording, the recording continues on the SD card without stopping. "SEAMLESS RECORDING (GZ-HM50)" (☞ p. 69) |
| x.v.Color | Captures the true colors. (Use an x.v.Color compatible TV for playback.) "x.v.Color" (☞ p. 70) |
| CLOCK ADJUST | Resets the current time or sets to the local time when using this unit overseas. "CLOCK ADJUST" (☞ p. 70) |

FACE PRIORITY AE/AF

Detects faces and adjusts the brightness and focus automatically.

Operating Details

“Capturing Human Subjects Clearly (Face Detection AE/AF)” (📖 p. 31)

DIS

Camera shake during recording can be effectively reduced.

Operating Details

“Reducing Camera Shake” (📖 p. 31)

GAIN UP

Makes the subject appear bright automatically when recording in dark places.

| Setting | Details |
|-------------------|--|
| OFF | Deactivates the function. |
| ON | Electrically brightens the scene when it is dark. |
| AUTO SLOW-SHUTTER | Automatically brightens the scene when it is dark. |


Memo : _____

- Although "AUTO SLOW-SHUTTER" brightens the scene more than "ON", movements of the subject may become unnatural.


Displaying the Item

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

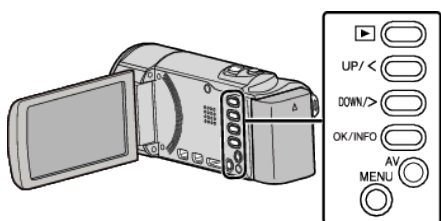

- 1 Press MENU.

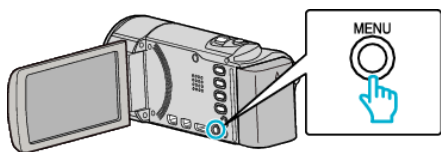

- 2 Select "GAIN UP" and press OK.

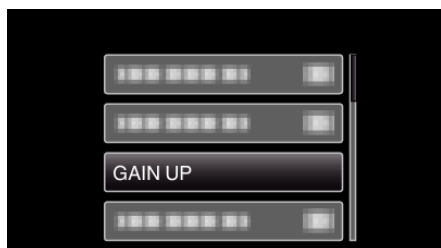

WIND CUT


Reduces the noise caused by wind.

| Setting | Details |
|---------|---------------------------|
| OFF | Deactivates the function. |
| ON | Activates the function. |


Displaying the Item

Memo : _____

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

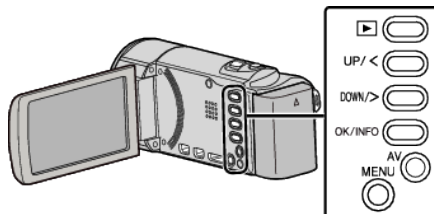

- 1 Press MENU.

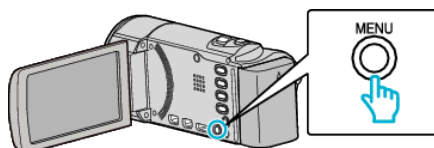

- 2 Select "WIND CUT" and press OK.



TIME-LAPSE RECORDING

Enables the changes of a scene that occur slowly over a long period to be shown within a short time by taking frames of it at a certain interval.

This is useful for making observations such as the opening of a flower bud.

Operating Details

"Recording at Intervals (TIME-LAPSE RECORDING)" (p. 32)

AUTO REC

Starts/stops recording automatically by sensing the changes in subject's movement (brightness) within the red frame displayed on the LCD monitor.

Operating Details

"Recording Automatically by Sensing Movements (AUTO REC)" (p. 34)

VIDEO QUALITY

Sets the video quality.
GZ-HM30/GZ-HM50

| Setting | Details | |
|---------|--------------------------|--|
| LS | 1280 x 720 pixels 60p | Records in high definition with high quality (16:9). |
| LE | 1280 x 720 pixels 60p | For long recordings in high definition with high quality (16:9). |
| SSW | 720 x 480 pixels 60i | Records in standard definition (16:9). |
| SEW | 720 x 480 pixels 60i | For long recordings in standard definition (16:9). |
| SS | 720 x 480 pixels 60i | Records in standard quality (4:3). |
| SE | 720 x 480 pixels 60i | For long recordings in standard quality (4:3). |

GZ-HM430

| Setting | Details | |
|---------|---------------------------|---|
| UXP | 1920 x 1080 pixels 50p | Enables recording in the best picture quality (16:9). <ul style="list-style-type: none"> Applies to BDs only. To save to DVDs, it is necessary to re-encode the videos to XP mode using the provided software (16:9). |
| XP | 1920 x 1080 pixels 50p | Enables recording in high picture quality (16:9). |
| SP | 1920 x 1080 pixels 50p | Enables recording in standard quality (16:9). |
| EP | 1920 x 1080 pixels 50p | Enables long recording (16:9). |
| SSW | 720 x 576 pixels 50i | Records in standard definition with high quality (16:9). |
| SEW | 720 x 576 pixels 50i | For long recordings in standard definition with high quality (16:9). |


Memo :

- Set to "LS" mode when recording fast-moving scenes or scenes with extreme changes of brightness to avoid noise. (GZ-HM30/GZ-HM50)
- Set to "UXP" or "XP" mode when recording fast-moving scenes or scenes with extreme change of brightness to avoid noise. (GZ-HM430)
- You can change the video quality from the remaining recording time display.
 Select the video quality with the UP/< and DOWN/> buttons and press OK.


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

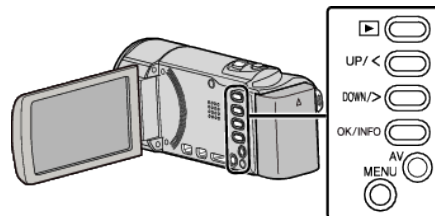

1 Press MENU.

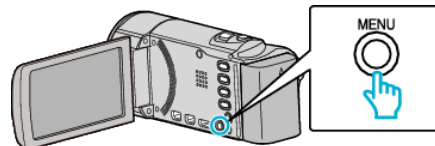

2 Select "VIDEO QUALITY" and press OK.

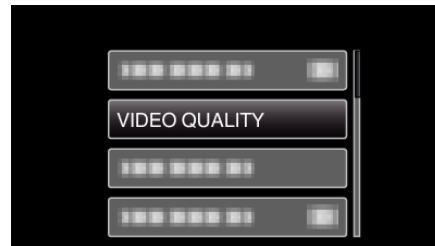

ZOOM

Sets the maximum zoom ratio.

| Setting | Details |
|--------------|-----------------------------|
| 40x/OPTICAL | Enables zooming up to 40x. |
| 70x/DYNAMIC | Enables zooming up to 70x. |
| 60x/DYNAMIC | Enables zooming up to 60x. |
| 80x/DIGITAL | Enables zooming up to 80x. |
| 200x/DIGITAL | Enables zooming up to 200x. |


Memo :

- “70x/DYNAMIC” is available only when “VIDEO QUALITY” is set to “SSW” or “SEW”.
- “60x/DYNAMIC” is available only when “VIDEO QUALITY” is set to “SS” or “SE”.
- “80x/DIGITAL” is available only when “VIDEO QUALITY” is set to “LS” or “LE”.
- You can expand the zoom area without degrading the image quality by using dynamic zoom.
- When digital zoom is used, the image becomes grainy as it is digitally enlarged.


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

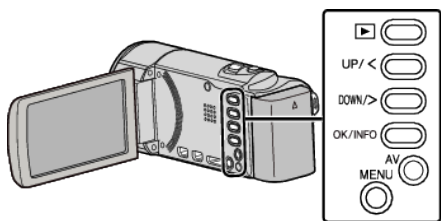

1 Press MENU.

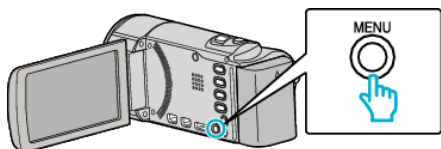

2 Select “ZOOM” and press OK.

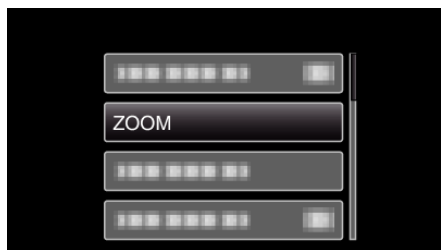


- Seamless recording cannot be performed if there is not enough free space in the built-in memory or SD card.
- The seamless recording setting switches to “OFF” automatically after seamless recording is complete.
- To start seamless recording again after the previous session is complete, it is necessary to combine seamless videos, or delete the combination information of the seamless videos. If seamless recording cannot be performed, will be displayed.

“Combining Videos Recorded by Seamless Recording (GZ-HM50)”
(p. 49)


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

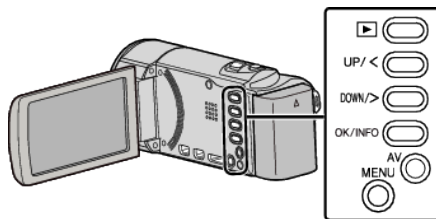


1 Press MENU.

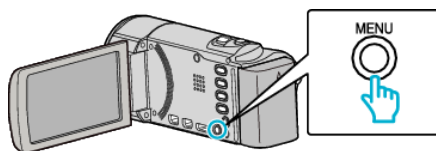

2 Select “SEAMLESS RECORDING” and press OK.

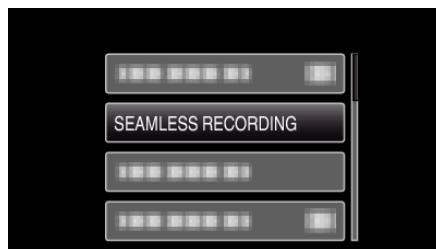

3 Select “ON” and press OK.

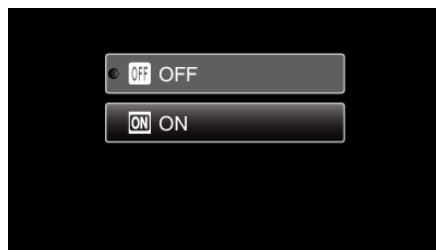

SEAMLESS RECORDING (GZ-HM50)

Automatically switches to a different media and continues recording when the remaining space on the current recording media runs out.

For example, when the remaining space on the built-in memory runs out during recording, the recording continues on the SD card without stopping.

| Setting | Details |
|---------|--|
| OFF | Does not switch recording media automatically. |
| ON | Switches recording media automatically. |

Memo :

Menu Settings

x.v.Color

Captures the true colors.

(Use an x.v.Color compatible TV for playback.)

| Setting | Details |
|---------|---|
| OFF | Captures colors with the same standard as TV broadcasting. |
| ON | Captures the true colors. (for TVs that supports x.v.Color) |


Memo :

- "x.v.Color" is available only when "VIDEO QUALITY" is set to "LS" or "LE"


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

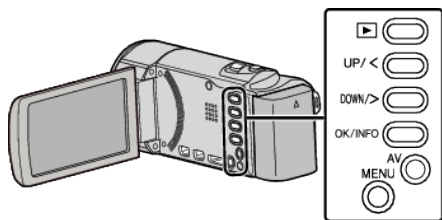

- 1 Press MENU.

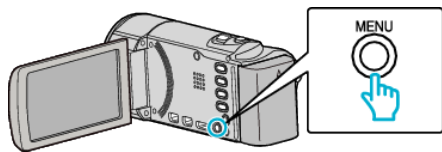


- 2 Select "x.v.Color" and press OK.

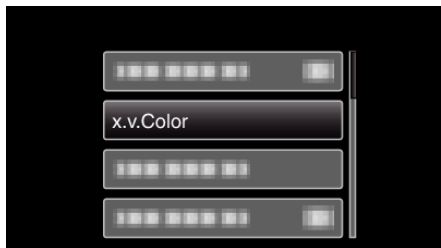


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

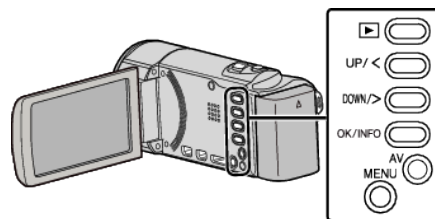

- 1 Press MENU.

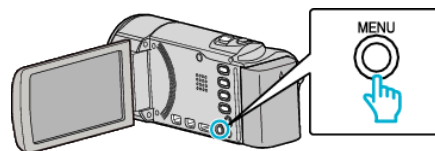

- 2 Select "CLOCK ADJUST" and press OK.

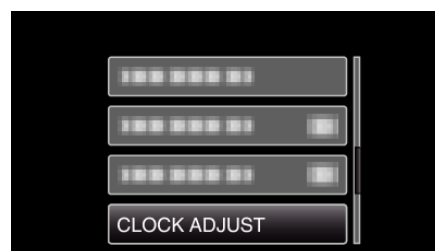

CLOCK ADJUST

Resets the current time or sets to the local time when using this unit overseas.

| Setting | Details |
|---------------|--|
| CLOCK SETTING | Resets the current time or changes the settings. "Resetting the Clock" (p. 17) |
| AREA SETTING | Sets to the local time when using this unit overseas simply by selecting the destination. "Setting the Clock to Local Time when Traveling" (p. 20) |
| DST SETTING | Sets whether daylight saving time is observed at the travel destination. "Setting Daylight Saving Time" (p. 20) |

Memo :

- Daylight saving time is the system of setting the clock 1 hour ahead for a fixed period in summer. It is used mainly in the Western countries.

Manual Settings Menu

Recording settings can be adjusted manually.

Memo :

- They are displayed only when recording in the manual mode.

| Setting | Details |
|-------------------|--|
| SCENE SELECT | Settings to suit the shooting condition can be selected. "Scene Selection" (☞ p. 25) |
| FOCUS | Focus can be adjusted manually. "Adjusting Focus Manually" (☞ p. 26) |
| BRIGHTNESS ADJUST | Adjusts the overall brightness of the screen. "Adjusting Brightness" (☞ p. 27) |
| WHITE BALANCE | Adjusts the color according to the light source. "Setting White Balance" (☞ p. 28) |
| BACKLIGHT COMP. | Corrects the image when the subject appears dark due to backlight. "Setting Backlight Compensation" (☞ p. 29) |
| TELE MACRO | Enables close-up shots when using the telephoto (T) end of the zoom. "Taking Close-up Shots" (☞ p. 30) |

SCENE SELECT

Settings to suit the shooting condition can be selected.

Operating Details

"Scene Selection" (☞ p. 25)

FOCUS

Focus can be adjusted manually.

Operating Details

"Adjusting Focus Manually" (☞ p. 26)

BRIGHTNESS ADJUST

Adjusts the overall brightness of the screen.

Operating Details

"Adjusting Brightness" (☞ p. 27)

WHITE BALANCE

Adjusts the color according to the light source.

Operating Details

"Setting White Balance" (☞ p. 28)

BACKLIGHT COMP.

Corrects the image when the subject appears dark due to backlight.

Operating Details

"Setting Backlight Compensation" (☞ p. 29)

TELE MACRO

Enables close-up shots when using the telephoto (T) end of the zoom.

Operating Details

"Taking Close-up Shots" (☞ p. 30)

Playback Menu (Video)

You can delete or look for specific videos.

| Setting | Details |
|---------------------|--|
| DELETE | Deletes unwanted videos. “Deleting the Currently Displayed File” (p. 44) “Deleting Selected Files” (p. 45) “Deleting All Files” (p. 46) |
| PROTECT/CANCEL | Protects files from being deleted accidentally. “Protecting the Currently Displayed File” (p. 46) “Protecting Selected Files” (p. 47) “Protecting All Files” (p. 48) “Releasing Protection of All Files” (p. 48) |
| COPY | Copies files to another media. “Copying All Files (GZ-HM50)” (p. 50) “Copying Selected Files (GZ-HM50)” (p. 51) |
| MOVE | Moves files to another media. “Moving All Files (GZ-HM50)” (p. 52) “Moving Selected Files (GZ-HM50)” (p. 53) |
| SEARCH DATE | Refines the index screen of videos according to recording date. “Date Search” (p. 39) |
| PLAYBACK OTHER FILE | Plays videos with defective management information. “Playing a Video with Defective Management Information” (p. 38) |
| SEAMLESS REC CTRL | Videos that are recorded on two separate media and with “SEAMLESS RECORDING” in the video recording menu enabled can be combined into a single video. “Combining Videos Recorded by Seamless Recording (GZ-HM50)” (p. 49) |
| CLOCK ADJUST | Resets the current time or sets to the local time when using this unit overseas. “CLOCK ADJUST” (p. 73) |
| REC MEDIA SETTING | Sets the recording/playback media of videos. “REC MEDIA SETTING (GZ-HM50)” (p. 74) |
| ON-SCREEN DISPLAY | Sets whether to show on-screen displays such as icons during playback. “ON-SCREEN DISPLAY” (p. 74) |

DELETE

Deletes unwanted videos.
 Operating Details
 "Deleting the Currently Displayed File" (p. 44)
 "Deleting Selected Files" (p. 45)
 "Deleting All Files" (p. 46)

PROTECT/CANCEL

Protects files from being deleted accidentally.
 Operating Details
 "Protecting the Currently Displayed File" (p. 46)
 "Protecting Selected Files" (p. 47)
 "Protecting All Files" (p. 48)
 "Releasing Protection of All Files" (p. 48)

COPY (GZ-HM50)

Copies files to another media.
 Operating Details
 "Copying All Files (GZ-HM50)" (p. 50)
 "Copying Selected Files (GZ-HM50)" (p. 51)

MOVE (GZ-HM50)

Moves files to another media.
 Operating Details
 "Moving All Files (GZ-HM50)" (p. 52)
 "Moving Selected Files (GZ-HM50)" (p. 53)

SEARCH DATE

Refines the index screen of videos according to recording date.
 Operating Details
 "Date Search" (p. 39)

PLAYBACK OTHER FILE

Plays videos with defective management information.
 Operating Details
 "Playing a Video with Defective Management Information" (p. 38)

SEAMLESS REC CTRL (GZ-HM50)

Videos that are recorded on two separate media and with "SEAMLESS RECORDING" in the video recording menu enabled can be combined into a single video.
 Operating Details
 "Combining Videos Recorded by Seamless Recording (GZ-HM50)" (p. 49)

CLOCK ADJUST

Resets the current time or sets to the local time when using this unit overseas.

| Setting | Details |
|---------------|---|
| CLOCK SETTING | Resets the current time or changes the settings. "Resetting the Clock" (p. 17) |
| AREA SETTING | Sets to the local time when using this unit overseas simply by selecting the destination. "Setting the Clock to Local Time when Traveling" (p. 20) |
| DST SETTING | Sets whether daylight saving time is observed at the travel destination. "Setting Daylight Saving Time" (p. 20) |


Memo :

- Daylight saving time is the system of setting the clock 1 hour ahead for a fixed period in summer. It is used mainly in the Western countries.


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

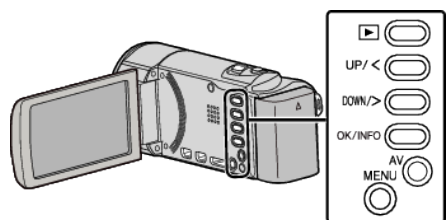

1 Press MENU.

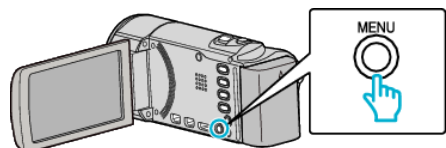

2 Select "CLOCK ADJUST" and press OK.

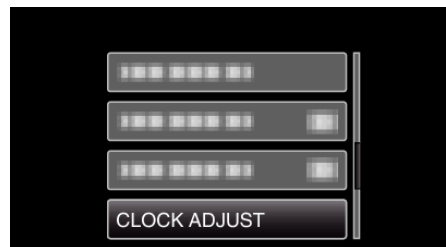

Menu Settings

REC MEDIA SETTING (GZ-HM50)


Sets the recording/playback media of videos.

| Setting | Details |
|-----------------|--|
| BUILT-IN MEMORY | Records videos to this unit's built-in memory. |
| SD CARD | Records videos to the SD card. |


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

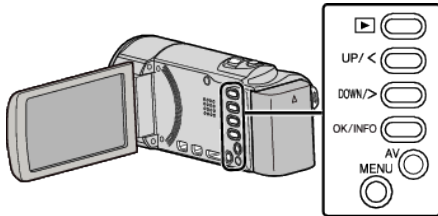


1 Press MENU.

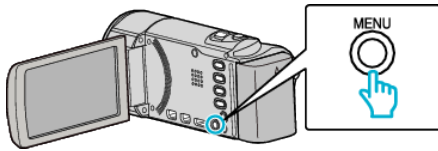

2 Select "REC MEDIA SETTING" and press OK.

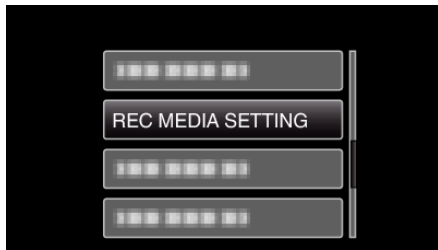

2 Select "ON-SCREEN DISPLAY" and press OK.

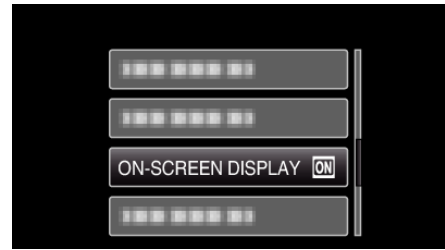

ON-SCREEN DISPLAY


Sets whether to show on-screen displays such as icons during playback.

| Setting | Details |
|---------|----------------------|
| OFF | No display at all. |
| ON | Displays everything. |


Displaying the Item

Memo :

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

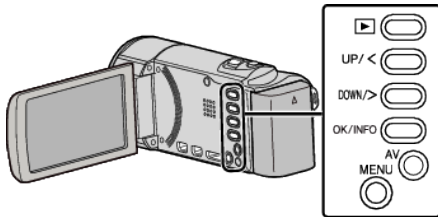

1 Press MENU.

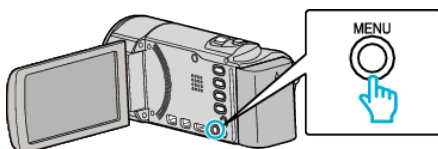

Display Settings Menu

You can adjust various display settings such as the LCD monitor's brightness, etc.

| Setting | Details |
|--------------------|---|
| LANGUAGE | The language on the display can be changed. "Changing the Display Language" (☞ p. 18) |
| DATE DISPLAY STYLE | Sets the order of year, month, day and the time display format (24H/12H). "DATE DISPLAY STYLE" (☞ p. 75) |
| MONITOR BRIGHTNESS | Sets the brightness of the LCD monitor. "MONITOR BRIGHTNESS" (☞ p. 76) |

LANGUAGE

The language on the display can be changed.

Operating Details

"Changing the Display Language" (☞ p. 18)


- For date display, set to any format from "month.day.year", "year.month.day", and "day.month.year".
- For time display, set to any format from "12h" and "24h".
- Press UP/< or DOWN/> to move the cursor.
- After setting, press OK.

DATE DISPLAY STYLE


Sets the order of year, month, day and the time display format (24H/12H).

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

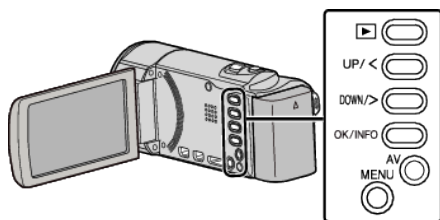


1 Press MENU.

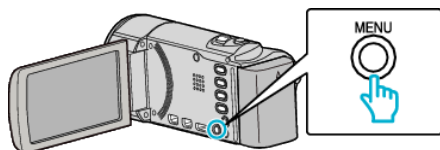


2 Select "DISPLAY SETTINGS" and press OK.

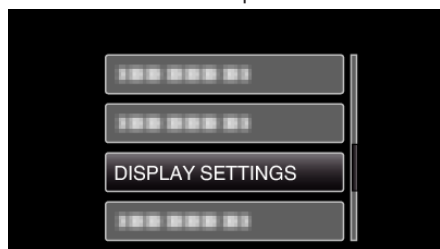

3 Select "DATE DISPLAY STYLE" and press OK.


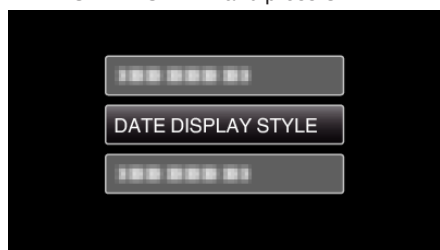


4 Set the style of date and time display.

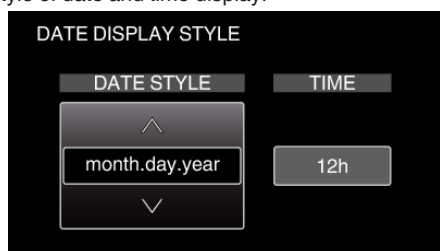

Clock Set Style

The clock set style of this unit varies with the models.

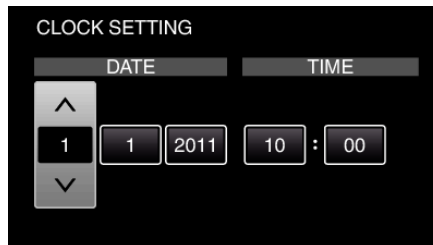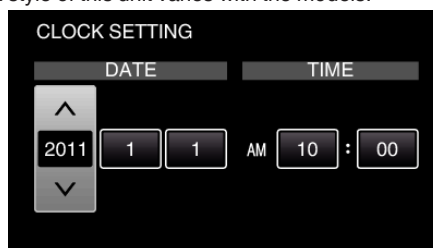

- The order of "Year, Month, Day, Time" changes according to the date display style.

Menu Settings

MONITOR BRIGHTNESS


Sets the brightness of the LCD monitor.

| Setting | Details |
|---------|---|
| 4 | Brightens the backlight of the monitor regardless of the surrounding conditions. |
| 3 | Sets to the standard brightness. |
| 2 | Darkens the backlight of the monitor regardless of the surrounding conditions. |
| 1 | Sets to dim brightness. Helps to save battery life when selected. |
| AUTO | Sets the brightness automatically to "4" when using outdoors and to "3" when using indoors. |


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

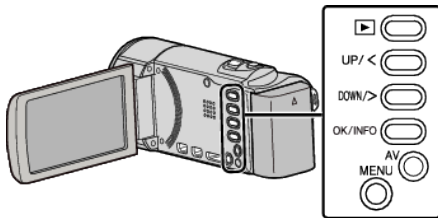


- 1 Press MENU.

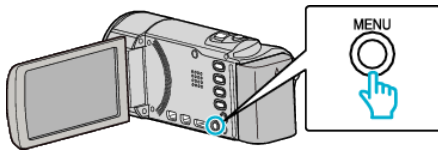

- 2 Select "DISPLAY SETTINGS" and press OK.

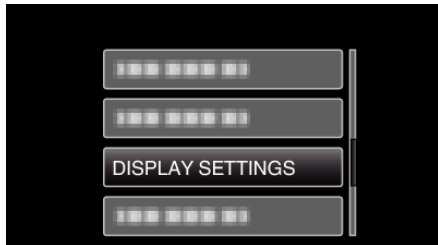

- 3 Select "MONITOR BRIGHTNESS" and press OK.

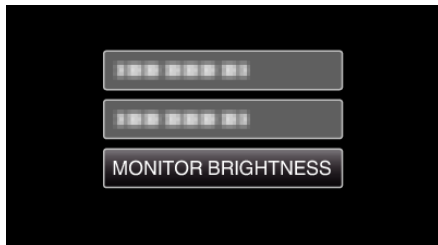

Basic Settings Menu

You can adjust various camera settings such as operation sound, etc.

| Setting | Details |
|-----------------|---|
| DEMO MODE | Introduces the special features of this unit in digest form. “DEMO MODE” (☞ p. 77) |
| AUTO POWER OFF | Prevents the situation of forgetting to turn off the power when this is set. “AUTO POWER OFF” (☞ p. 78) |
| OPERATION SOUND | Turns on or off the operation sound. “OPERATION SOUND” (☞ p. 78) |
| QUICK RESTART | Reduces the power consumption within 5 minutes after the LCD monitor is closed to 1/3 of that used during recording. “QUICK RESTART” (☞ p. 79) |
| UPDATE | Updates the functions of this unit to the latest version. “UPDATE” (☞ p. 79) |
| FACTORY PRESET | Returns all the settings to their default values. “FACTORY PRESET” (☞ p. 79) |

DEMO MODE

Plays a demonstration of the special features of this unit.

| Setting | Details |
|---------|---|
| OFF | Deactivates the function. |
| ON | Plays a demonstration of the special features of this unit. |

Displaying Demo Mode

- 1 Remove the battery pack and SD card.
- 2 Connect the AC adapter.
- 3 Open the LCD monitor and the unit powers on automatically.

- Demonstration starts playing after 3 minutes.
- To stop playback, press OK.


Memo : _____

- This mode is not available in the playback mode.


Displaying the Item

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

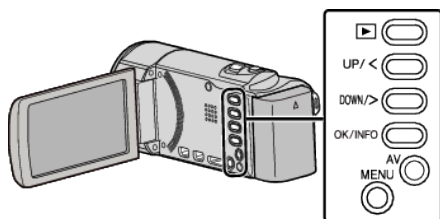


- 1 Press MENU.

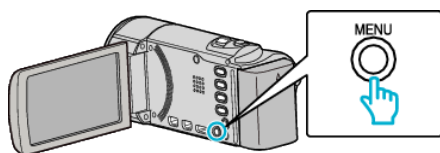

- 2 Select “BASIC SETTINGS” and press OK.

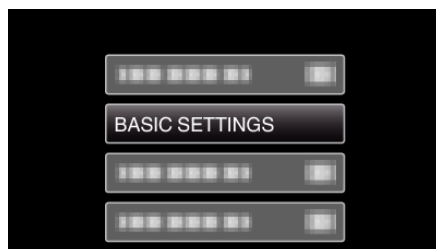

- 3 Select “DEMO MODE” and press OK.

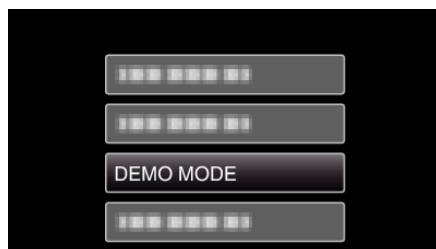

Menu Settings

OPERATION SOUND


Turns on or off the operation sound.

| Setting | Details |
|---------|--------------------------------|
| OFF | Turns off the operation sound. |
| ON | Turns on the operation sound. |


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

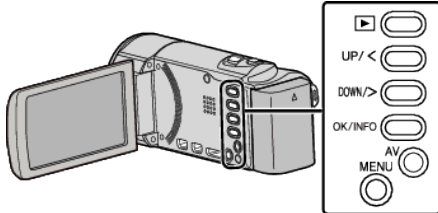

1 Press MENU.

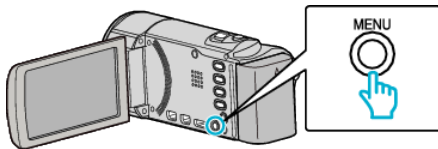

2 Select "BASIC SETTINGS" and press OK.

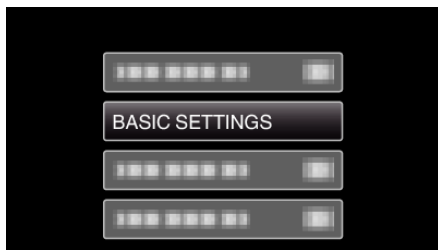

3 Select "OPERATION SOUND" and press OK.



AUTO POWER OFF

Prevents the situation of forgetting to turn off the power when this is set.

| Setting | Details |
|---------|---|
| OFF | Power is not turned off even if this unit is not operated for 5 minutes. |
| ON | Turns off the power automatically if this unit is not operated for 5 minutes. |


Memo :

- When using battery, power is turned off automatically if this unit is not operated for 5 minutes.
- When using the AC adapter, this unit goes into standby mode.


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

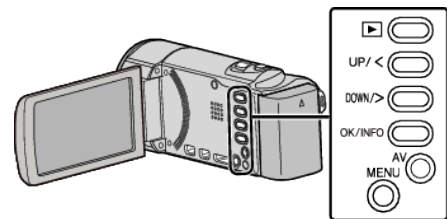

1 Press MENU.

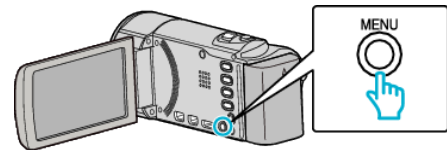

2 Select "BASIC SETTINGS" and press OK.

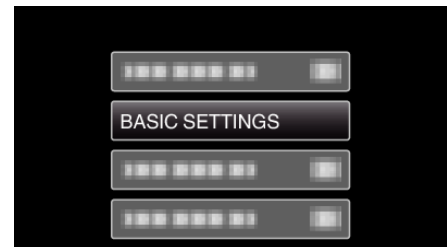

3 Select "AUTO POWER OFF" and press OK.



QUICK RESTART

Enables the power to turn on quickly when the LCD monitor is opened again within 5 minutes.

| Setting | Details |
|---------|---|
| OFF | Deactivates the function. |
| ON | Enables the power to turn on quickly when the LCD monitor is opened again within 5 minutes. |


Memo : _____

- The power consumption within 5 minutes after the LCD monitor is closed is reduced.


Displaying the Item

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

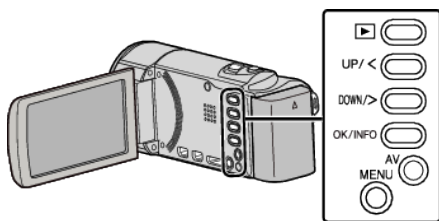


1 Press MENU.

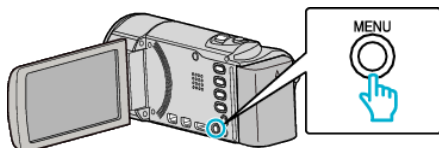

2 Select "BASIC SETTINGS" and press OK.

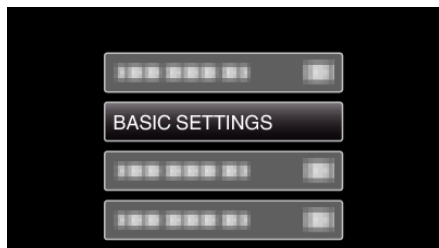

3 Select "QUICK RESTART" and press OK.

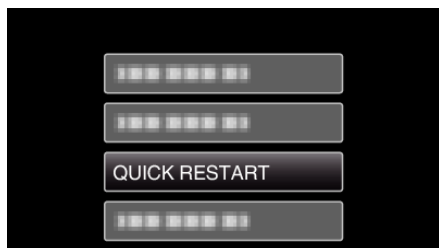

- The power consumption within 5 minutes after the LCD monitor is closed is reduced.

UPDATE

Updates the functions of this unit to the latest version. For details, refer to the JVC homepage. (When no program to update the software of this unit is available, nothing will be provided on the homepage.)


<http://www.jvc-victor.co.jp/dvmain/support/download/index.html>

FACTORY PRESET


Returns all the settings to their default values.

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

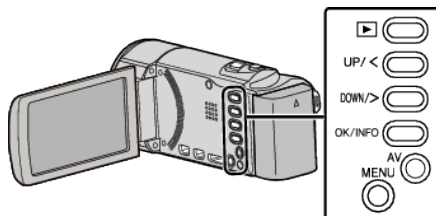

1 Press MENU.

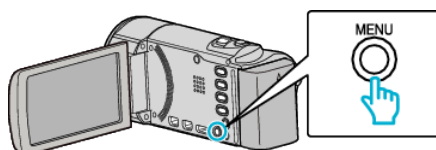


2 Select "BASIC SETTINGS" and press OK.

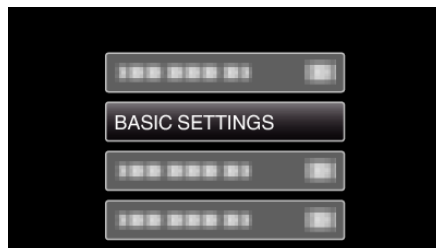

3 Select "FACTORY PRESET" and press OK.



4 Select "YES" and press OK.

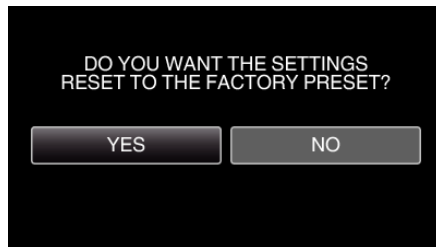

- All settings return to their default values.

Connection Settings Menu

You can adjust various settings for connecting to a TV or DVD recorder.

| Setting | Details |
|------------------|--|
| DISPLAY ON TV | Displays icons and date/time on a TV screen. "DISPLAY ON TV" (☞ p. 80) |
| VIDEO OUTPUT | Sets the aspect ratio (16:9 or 4:3) according to the connecting TV. "VIDEO OUTPUT" (☞ p. 80) |
| COMPONENT OUTPUT | Sets the definition of the video output from the COMPONENT connector. "COMPONENT OUTPUT (GZ-HM30/GZ-HM50)" (☞ p. 81) |
| HDMI OUTPUT | Sets the definition of the video output from the HDMI mini connector. "HDMI OUTPUT" (☞ p. 81) |
| HDMI CONTROL | Sets the linked operations ON/OFF when the TV and this unit are connected using the HDMI mini connector. "HDMI CONTROL" (☞ p. 82) |

DISPLAY ON TV


Displays icons and date/time on a TV screen.

| Setting | Details |
|---------|---|
| OFF | Does not display icons and date/time on TV. |
| ON | Displays icons and date/time on TV. |


Displaying the Item

Memo :

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

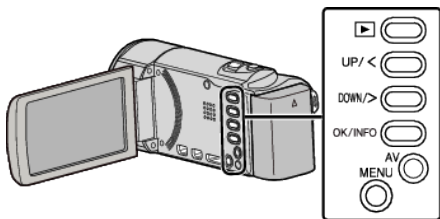

1 Press MENU.

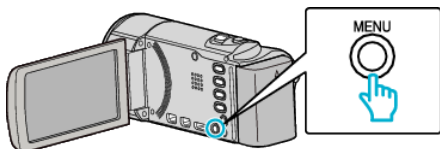

2 Select "CONNECTION SETTINGS" and press OK.



3 Select "DISPLAY ON TV" and press OK.



VIDEO OUTPUT


Sets the aspect ratio (16:9 or 4:3) according to the connecting TV.

| Setting | Details |
|---------|---|
| 4:3 | Select this when connecting to a conventional TV (4:3). |
| 16:9 | Select this when connecting to a widescreen TV (16:9). |


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

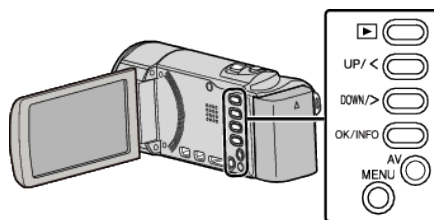


1 Press MENU.

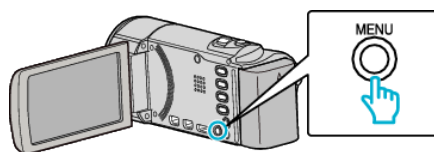

2 Select "CONNECTION SETTINGS" and press OK.

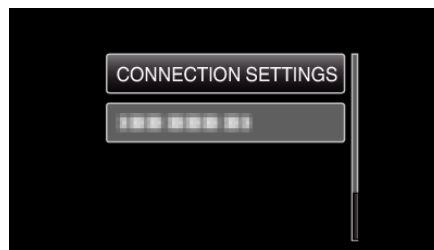

3 Select "VIDEO OUTPUT" and press OK.

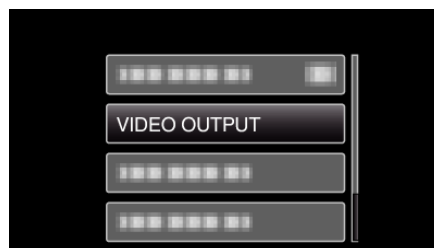

COMPONENT OUTPUT (GZ-HM30/GZ-HM50)


Sets the definition of the video output from the COMPONENT connector.

| Setting | Details |
|------------|------------------------|
| 480i | Outputs at 480i. |
| 1080i/720p | Outputs at 1080i/720p. |


Displaying the Item

Memo : _____

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

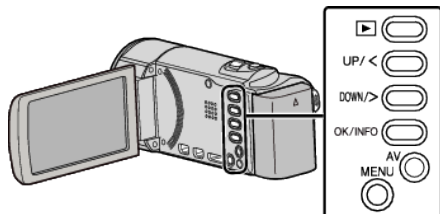


1 Press MENU.

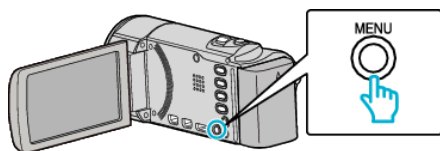

2 Select "CONNECTION SETTINGS" and press OK.



3 Select "COMPONENT OUTPUT" and press OK.

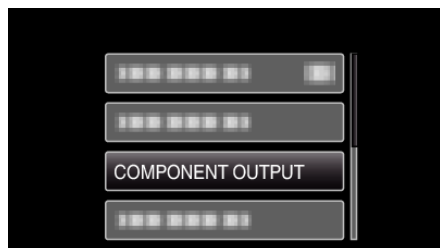

HDMI OUTPUT

Sets the output from the HDMI connector of this unit when it is connected to a TV.

| Setting | Details |
|---------|---|
| AUTO | It is recommended to select "AUTO" usually. |
| 480p | Select this when the video is not output in "AUTO" correctly. |


Memo : _____

• "1080p" will be displayed on the LCD monitor if a 1080p compatible TV is connected to this unit in playback mode.


Displaying the Item

Memo : _____


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

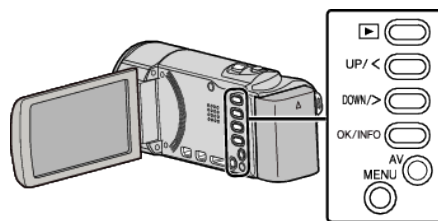


1 Press MENU.

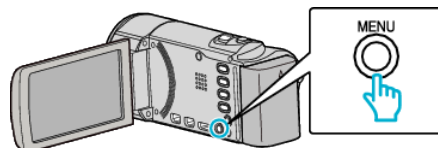

2 Select "CONNECTION SETTINGS" and press OK.

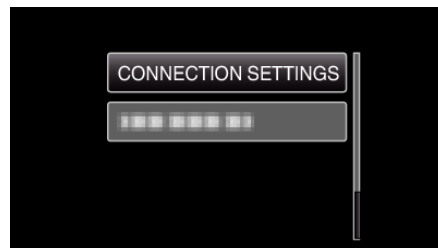

3 Select "HDMI OUTPUT" and press OK.

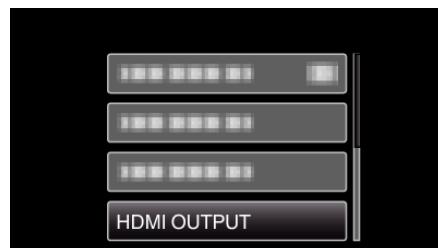

Menu Settings

HDMI CONTROL


Sets whether to link operations with an HDMI-CEC compliant TV.

| Setting | Details |
|---------|------------------------------|
| OFF | Turns off linked operations. |
| ON | Turns on linked operations. |


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

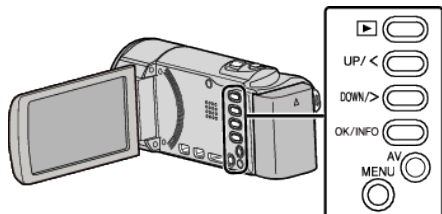


- 1 Press MENU.

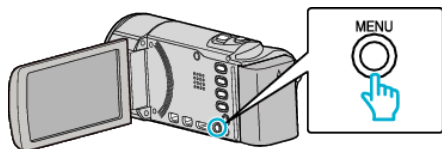

- 2 Select "CONNECTION SETTINGS" and press OK.

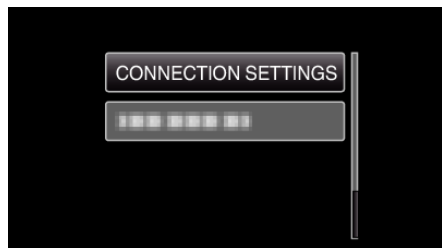

- 3 Select "HDMI CONTROL" and press OK.

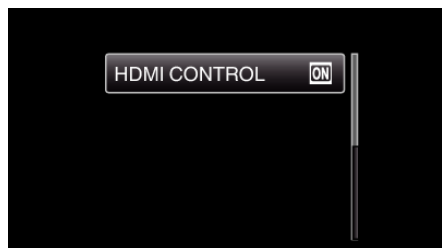

Media Settings Menu

You can perform various settings for the recording media.

| Setting | Details |
|----------------------|---|
| FORMAT SD CARD | Deletes all files on the SD card. "FORMAT SD CARD" (p. 83) |
| FORMAT BUILT-IN MEM. | Deletes all files on the built-in memory. "FORMAT BUILT-IN MEM. (GZ-HM50)" (p. 84) |
| ERASE ALL DATA | Execute this process when disposing of this unit or passing it to another person. "ERASE ALL DATA (GZ-HM50)" (p. 85) |

FORMAT SD CARD

Deletes all files on the SD card.

| Setting | Details |
|----------------------|---|
| FILE | Deletes all files on the SD card. |
| FILE + MANAGEMENT NO | Deletes all files on the SD card and resets the folder and file numbers to "1". |


Caution :

- Not available for selection when no SD card is inserted.
- All data on the card will be deleted when it is formatted.
Copy all files on the card to a computer before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

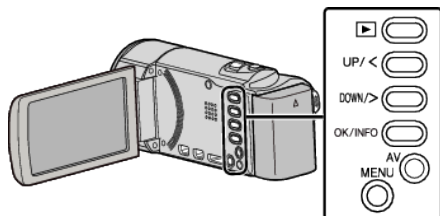


1 Press MENU.

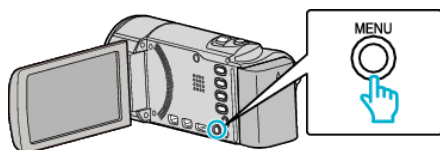

2 Select "MEDIA SETTINGS" and press OK.

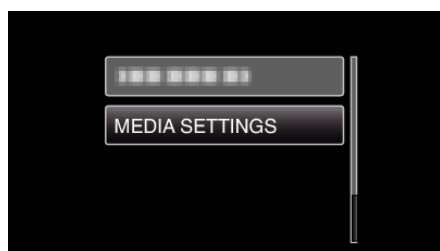


3 Select "FORMAT SD CARD" and press OK.

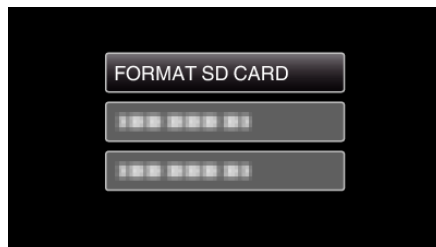

4 Select the desired setting and press OK.



5 Select "YES" and press OK.

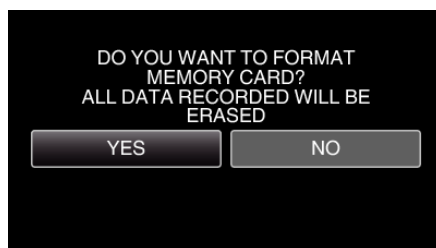

Menu Settings

FORMAT BUILT-IN MEM. (GZ-HM50)

Deletes all files on the built-in memory.

| Setting | Details |
|----------------------|---|
| FILE | Deletes all files on the built-in memory. |
| FILE + MANAGEMENT NO | Deletes all files on the built-in memory and resets the folder and file numbers to "1". |


Caution :

- All data on the built-in memory will be deleted when it is formatted. Copy all files on the built-in memory to a computer before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.


Displaying the Item

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

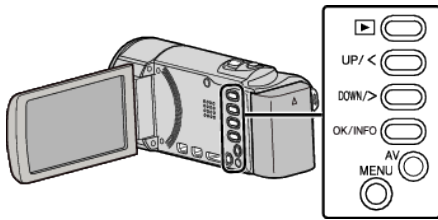


- 1 Press MENU.

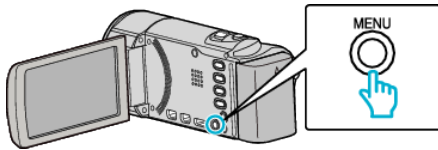


- 2 Select "MEDIA SETTINGS" and press OK.

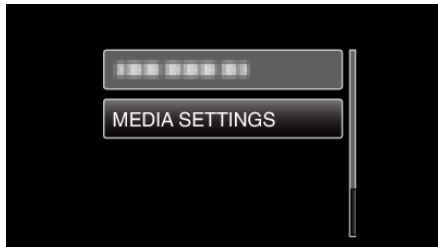


- 3 Select "FORMAT BUILT-IN MEM." and press OK.

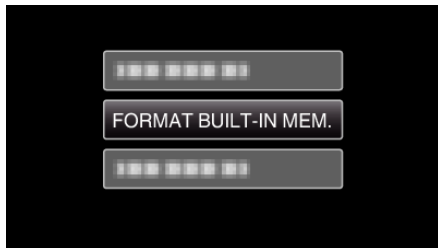

- 4 Select the desired setting and press OK.

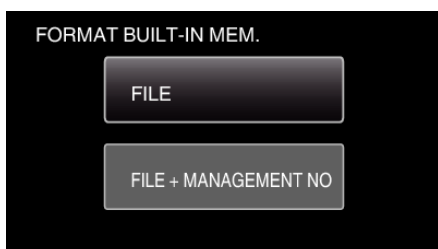


- 5 Select "YES" and press OK.

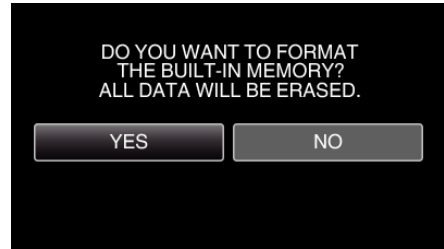


ERASE ALL DATA (GZ-HM50)

Execute this process when disposing of this unit or passing it to another person.

Memo : _____
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

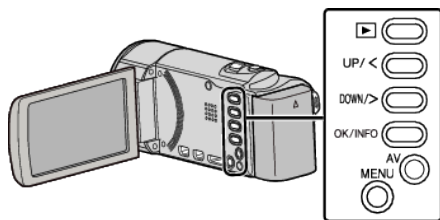


1 Press MENU.

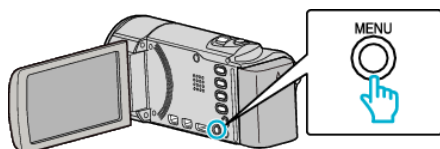

2 Select "MEDIA SETTINGS" and press OK.



3 Select "ERASE ALL DATA" and press OK.

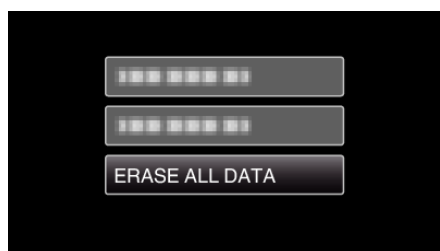

4 Select "YES" and press OK.




Caution : _____

- Connect the AC adapter as it may take some time to delete data.

Memo : _____


- Repeat the process to make data restoration even more difficult.

Front

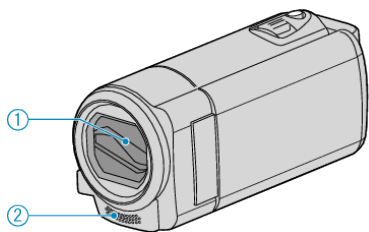


- 1** Lens Cover
 - Do not touch the lens and lens cover.
 - Do not cover the lens with your fingers during recording.
- 2** Monaural Microphone
 - Do not cover the microphone with your fingers during video recording.

Rear

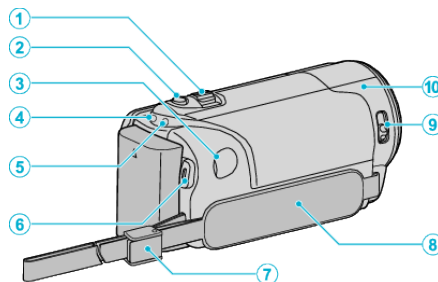


- 1** Zoom/Volume Lever
 - During shooting: Adjusts the shooting range.
 - During video playback: Adjusts the volume.
 - During index screen display: Moves to the next or previous page.
- 2** i.AUTO Button
 - Switches between Intelligent Auto and Manual modes.
- 3** DC Connector
 - Connects to an AC adapter to charge the battery.
- 4** ACCESS (Access) Lamp
 - Lights up/blinks during recording or playback.
 - Do not remove the battery pack, AC adapter, or SD card.
- 5** POWER/CHARGE (Power/Charge) Lamp
 - Lights up: Power "ON"
 - Blinks: Charging in progress
 - Goes out: Charging finished
- 6** START/STOP Button (Video Recording) /
▶/|| (Play/Pause) Button (Video Playback)
 - Starts/stops video recording.
 - Starts/pauses video playback.
- 7** Strap Lock
 - Allows the grip belt to be removed and used as a hand strap.
- 8** Grip Belt
 - Pass your hand through the grip belt to hold this unit firmly.
 - "Grip Adjustment" (☞ p. 14)
- 9** Lens Cover Switch
 - Opens and closes the lens cover.
- 10** Camera Sensor
 - Do not cover the internal sensor with your fingers during video recording.

Bottom

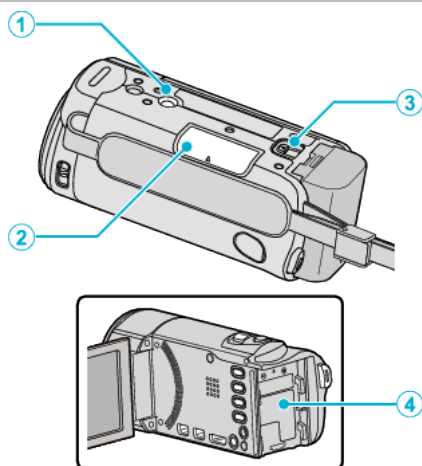


- 1** Tripod Mounting Hole
“Tripod Mounting” (☞ p. 19)
- 2** SD Card Slot
 - Insert an optional SD card.
“Inserting an SD Card” (☞ p. 14)
- 3** Battery Release Lever
“Charging the Battery Pack” (☞ p. 13)
- 4** Battery Mount

Interior

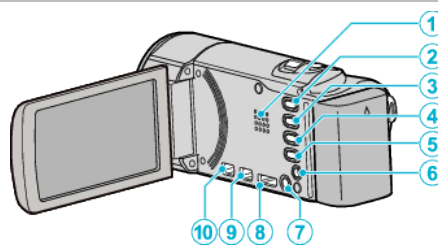


- 1** Speaker
 - Outputs audio sound during video playback.
- 2** (Play/Record) Button
 - Switches between recording and playback modes.
- 3** UP/< Button
 - UP: Scrolls/moves cursor on the icons upward
 - <: Reverse search
- 4** DOWN/> Button
 - DOWN: Scrolls/moves cursor on the icons downward
 - >: Forward search
- 5** OK/INFO Button
 - Confirms the selection. / Displays information as follows.
 - Recording: Displays the remaining time and battery power.
 - Playback: Displays file information such as recording date.
- 6** AV Connector
 - Connects to a TV, etc.
- 7** MENU (Menu) Button
- 8** HDMI Mini Connector
 - Connects to an HDMI TV.
- 9** USB Connector
 - Connects to computer using a USB cable.
- 10** COMPONENT (Component) Connector (GZ-HM30/GZ-HM50)
 - Connects to a TV, etc.

LCD Monitor

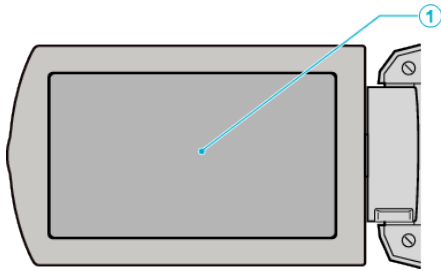

1 LCD Monitor


- Turns the power on/off by opening and closing.
- Enables self-portraits to be taken by rotating the monitor.

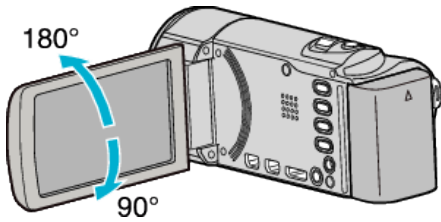

Caution :


- Do not press against the surface with force or subject it to strong impact. Doing so may damage or break the screen.

Video Recording

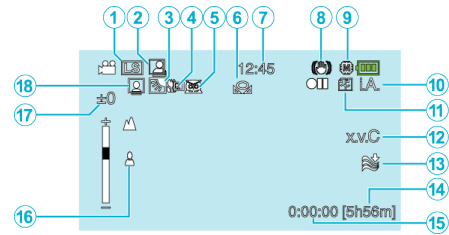

- 1 Video Quality**
"VIDEO QUALITY" (☞ p. 68)
- 2 Auto REC**
"Recording Automatically by Sensing Movements (AUTO REC)" (☞ p. 34)
- 3 Backlight Compensation**
"Setting Backlight Compensation" (☞ p. 29)
- 4 Tele Macro**
"Taking Close-up Shots" (☞ p. 30)
- 5 Scene Select**
"Scene Selection" (☞ p. 25)
- 6 White Balance**
"Setting White Balance" (☞ p. 28)
- 7 Date/Time**
"Clock Setting" (☞ p. 16)
- 8 Digital Image Stabilizer**
"Reducing Camera Shake" (☞ p. 31)
- 9 Media**
"REC MEDIA SETTING (GZ-HM50)" (☞ p. 74)
- 10 Recording Mode**
"Taking Videos in Intelligent Auto Mode" (☞ p. 22)
"Manual Recording" (☞ p. 24)
- 11 Seamless Recording**
"SEAMLESS RECORDING (GZ-HM50)" (☞ p. 69)
- 12 x.v.Color**
"x.v.Color" (☞ p. 70)
- 13 Wind Cut**
"WIND CUT" (☞ p. 67)
- 14 Remaining Recording Time**
- 15 Scene Counter**
- 16 Focus**
"Adjusting Focus Manually" (☞ p. 26)
- 17 Brightness**
"Adjusting Brightness" (☞ p. 27)
- 18 Face Priority AE/AF**
"Capturing Human Subjects Clearly (Face Detection AE/AF)" (☞ p. 31)

Video Playback

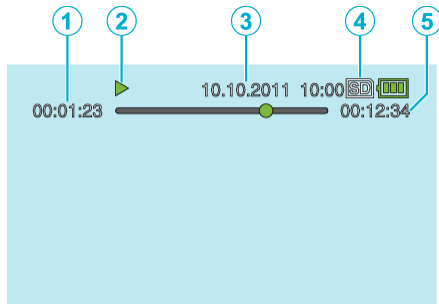

- 1** Scene Counter
- 2** Operation Indicator
"Playing Back Videos" (☞ p. 37)
- 3** Date/Time
"Clock Setting" (☞ p. 16)
- 4** Media
"REC MEDIA SETTING (GZ-HM50)" (☞ p. 74)
- 5** Playback Time
"Playing Back Videos" (☞ p. 37)

Battery Pack

Unable to turn on the power when using the battery pack.

Recharge the battery pack.

“Charging the Battery Pack” (☞ p. 12)

If the terminal of this unit or the battery pack is dirty, wipe it with a cotton swab or something similar.

If you use any other battery packs besides JVC battery packs, safety and performance cannot be guaranteed. Be sure to use JVC battery packs.

When the battery level is extremely low, this unit does not turn on until it is charged even if it is connected to a computer or AC adapter.

Short usage time even after charging.

Battery deterioration occurs when a battery pack is charged repeatedly.

Replace the battery pack with a new one.

“Optional Accessories” (☞ p. 21)

Unable to charge the battery pack.

When the battery pack is fully charged, the lamp does not flash.

If the terminal of this unit or the battery pack is dirty, wipe it with a cotton swab or something similar.

Using a non-original AC adapter may result in damage to this unit. Be sure to use an original AC adapter.

When charging via a computer, turn on the computer.

The remaining battery display is not correct.

Remaining battery power is not displayed when the AC adapter is connected.

If this unit is used for long periods of time in high or low temperatures, or if the battery pack is repeatedly charged, the amount of remaining battery may not be displayed correctly.

The battery depletes even when the AC adapter is connected.

Please use a JVC AC adapter (AC-V11U).

Recording

Recording cannot be performed.

Set to the recording mode with the  (Play/Record) button.

“Interior” (☞ p. 87)

Recording stops automatically.

Recording stops automatically as it cannot be performed for 12 or more consecutive hours according to specifications. (It may take some time to resume recording.)

Turn off this unit, wait for a while, and turn it on again. (This unit stops automatically to protect the circuit when the temperature rises.)

Insert a commercially available SD card, and set “REC MEDIA SETTING” to “SD CARD”. (There may be a malfunction with the built-in memory.) (GZ-HM50)

The focus is not adjusted automatically.

If you are recording in a dark place or a subject that has no contrast between dark and light, adjust the focus manually.

“Adjusting Focus Manually” (☞ p. 26)

Wipe the lens with a lens cleaning cloth.

Cancel manual focus on the manual recording menu.

“Adjusting Focus Manually” (☞ p. 26)

Zoom does not work.

Zoom operation is not available in time-lapse recording.

To use digital zoom, set “ZOOM” in the menu to “80x/DIGITAL” or “200x/DIGITAL”.

“ZOOM” (☞ p. 69)

Mosaic-type noise occurs when recording scenes with fast movements or extreme changes in brightness.

Set the “VIDEO QUALITY” to “LS” or “LE” for recording. (GZ-HM30/GZ-HM50)

Set the “VIDEO QUALITY” to “UXP” or “XP” for recording. (GZ-HM430)

“VIDEO QUALITY” (☞ p. 68)

Vertical lines appear on recorded images.

Such a phenomenon occurs when shooting a subject illuminated by bright light. This is not a malfunction.

Card

Cannot insert the SD card.

Make sure not to insert the card in the wrong direction.
 "Inserting an SD Card" (☞ p. 14)

Unable to copy to SD card.

To record to the card, it is necessary to perform media settings.
 "REC MEDIA SETTING (GZ-HM50)" (☞ p. 74)
 To use cards that have been used on other devices, it is necessary to format (initialize) the card using "FORMAT SD CARD" from media settings.
 "FORMAT SD CARD" (☞ p. 83)

Playback

Sound or video is interrupted.

Sometimes playback is interrupted at the connecting section between two scenes. This is not a malfunction.

The same image is displayed for a long time.

Replace the SD card. (When the SD card is damaged, difficulty in reading the data occurs. This unit will try to play back as much as possible, but it will stop eventually if the condition persists.)
 Execute "FORMAT BUILT-IN MEM." (GZ-HM50) or "FORMAT SD CARD" in the "MEDIA SETTINGS" menu. (All data will be deleted.)
 "FORMAT SD CARD" (☞ p. 83)

The motion is choppy.

Replace the SD card. (When the SD card is damaged, difficulty in reading the data occurs. This unit will try to play back as much as possible, but it will stop eventually if the condition persists.)
 Execute "FORMAT BUILT-IN MEM." (GZ-HM50) or "FORMAT SD CARD" in the "MEDIA SETTINGS" menu. (All data will be deleted.)
 "FORMAT SD CARD" (☞ p. 83)
 Verify the system requirements of your PC when using Everio MediaBrowser 3 to play back.
 "Verifying System Requirements (Guideline)" (☞ p. 57)

Cannot find a recorded file.

Cancel the date search function.
 "Searching for a Specific Video" (☞ p. 39)
 Change the setting in "REC MEDIA SETTING". (Files on other media are not displayed.)
 "REC MEDIA SETTING (GZ-HM50)" (☞ p. 74)
 Select "PLAYBACK OTHER FILE" in the menu. (Video files that have damaged management information can be played back.)
 "Playing a Video with Defective Management Information" (☞ p. 38)
 Videos recorded in high definition and standard definition are displayed on the index screen separately. Set "VIDEO QUALITY" in the recording menu to "UXP", "XP", "SP", "EP", "LS", or "LE" to view the videos recorded in high definition, or to "SSW", "SS", "SEW", or "SE" to view the videos recorded in standard definition, before selecting the playback mode.
 "VIDEO QUALITY" (☞ p. 68)

No date/time display.

Set "ON-SCREEN DISPLAY" in the menu accordingly.
 "ON-SCREEN DISPLAY" (☞ p. 74)
 Set "DISPLAY ON TV" in the menu to "ON".
 "DISPLAY ON TV" (☞ p. 80)

Images do not appear on the TV properly.

Disconnect the cable and connect again.
 "Connecting via the HDMI Mini Connector" (☞ p. 40)
 Turn off and on this unit again.

Images are projected vertically on the TV.

Set "VIDEO OUTPUT" in the "CONNECTION SETTINGS" menu to "4:3".
 "VIDEO OUTPUT" (☞ p. 80)
 Adjust the TV's screen accordingly.

The image displayed on TV is too small.

Set "VIDEO OUTPUT" in the "CONNECTION SETTINGS" menu to "16:9".
 "VIDEO OUTPUT" (☞ p. 80)

When connected to the TV via the HDMI mini cable, proper images and sounds are not output.

Images and sounds may not be output properly depending on the TV connected. In such cases, perform the following operations.
 ① Disconnect the HDMI mini cable and connect it again.
 ② Turn off and on this unit again.
 "Connecting via the HDMI Mini Connector" (☞ p. 40)

Editing/Copying

Unable to dub to a Blu-ray recorder.

Dubbing cannot be performed by connecting this unit to a Blu-ray recorder with a USB cable. Connect and dub using the supplied AV cable.
“Dubbing Files by Connecting to a DVD Recorder or VCR” (p. 54)

Unable to delete file.

Files that are protected cannot be deleted. Release protection before deleting the file.
“Protecting Files” (p. 46)

BACK-UP menu does not disappear.

While the USB cable is connected, the “BACK-UP” menu is displayed.
“Backing Up All Files” (p. 58)

Unable to turn off the BACK-UP menu.

Turn off the power of this unit or remove the AC adapter.

Computer

Unable to copy files to the computer's HDD.

Connect the USB cable correctly.
“Backing Up All Files” (p. 58)
If the provided software Everio MediaBrowser 3 is not installed, some functions may not work properly.
“Installing the Provided Software” (p. 57)
Before making backup, make sure that enough free space is left in the computer's hard disk (HDD).

Unable to copy files to DVD with a computer.

To record to discs, a recordable DVD drive is required for the computer in use.

I am using a Mac computer.

Copy the files to a Mac computer using the following method.
“Copying to Mac Computer” (p. 63)

The computer cannot recognize the SDXC card.

Confirm and update the OS of your computer.

Screen/Image

The LCD monitor is difficult to see.

The LCD monitor may be difficult to see if used in bright areas such as under direct sunlight.

A band or a ball of bright light appears on the LCD monitor.

Change the direction of this unit to prevent the light source from coming into view. (A band or a ball of bright light may appear when there is a bright light source near this unit, but this is not a malfunction.)

The recorded subject is too dark.

Use backlight compensation when the background is bright and the subject is dark.

“Setting Backlight Compensation” (☞ p. 29)

Use “NIGHTALIVE” in “SCENE SELECT”.

“Scene Selection” (☞ p. 25)

Use “GAIN UP” in the menu.

“GAIN UP” (☞ p. 67)

Set “BRIGHTNESS ADJUST” in the manual settings menu to the “+” side.

“Adjusting Brightness” (☞ p. 27)

The recorded subject is too bright.

Set “BACKLIGHT COMP.” to “OFF” if it is being used.

“Setting Backlight Compensation” (☞ p. 29)

Set “BRIGHTNESS ADJUST” in the manual settings menu to the “-” side.

“Adjusting Brightness” (☞ p. 27)

The color looks strange. (Too bluish, too reddish, etc.)

Wait for a while until natural colors are achieved. (It may take some time for white balance to be adjusted.)

Set “WHITE BALANCE” in the manual settings menu to “MANUAL”. Select from “FINE”/“CLOUD”/“HALOGEN” according to the light source. Select “MWB” and adjust accordingly.

“Setting White Balance” (☞ p. 28)

The color looks different.

Set “WHITE BALANCE” in the manual settings menu to “MANUAL”. Select from “FINE”/“CLOUD”/“HALOGEN” according to the light source. Select “MWB” and adjust accordingly.

“Setting White Balance” (☞ p. 28)

If the video was recorded with “x.v.Color” set to “ON”, set the x.v.Color setting of the TV to on.

“x.v.Color” (☞ p. 70)

There are bright or dark spots on the screen.

While the LCD monitor screen has more than 99.99% effective pixels, 0.01% of the pixels may be bright spots (red, blue, green) or dark spots. This is not a malfunction. The spots will not be recorded.

Other Problems

The image is grainy.

When digital zoom is used, the image becomes grainy as it is digitally enlarged.

This unit heats up.

This is not a malfunction. (This unit may become warm when used for a long time.)

The language on the display changed.

It may occur when you connect this unit to a TV with different language setting using an HDMI mini cable.

“Operating in Conjunction with TV via HDMI” (☞ p. 41)

HDMI-CEC functions do not work properly, and the TV does not work in conjunction with this unit.

TVs may operate differently depending on the specifications, even if they are HDMI-CEC compliant. Therefore, the HDMI-CEC functions of this unit cannot be guaranteed to operate in combination with all the TVs. In such cases, set “HDMI CONTROL” to “OFF”.

“HDMI CONTROL” (☞ p. 82)

The unit operates slowly when switching between modes, or when switching the power on or off.

It is recommended that you copy all files onto your computer, and erase the files from this unit. (If there are many recorded files on this unit, it takes time for the unit to respond.)

Make a backup of important recorded data.

It is recommended to copy your important recorded data to a DVD or other recording media for storage.

JVC will not be responsible for any lost data.

Error Message?

CHECK LENS COVER

Open the lens cover.

SET DATE/TIME!

Connect the AC adapter, charge the battery for more than 24 hours and set the clock. (If the message still appears, the clock battery is exhausted.

Consult your nearest JVC dealer.)

“Clock Setting” (☞ p. 16)

COMMUNICATION ERROR

Reconnect the USB cable.

Turn off this unit and the devices connected to it, and turn them on again.

Reattach the battery pack.

FORMAT ERROR!

Check the operating procedure, and perform once again.

“FORMAT BUILT-IN MEM. (GZ-HM50)” (☞ p. 84)

Turn off and on this unit again.

DATA DELETION ERROR

Check the operating procedure, and perform once again.

“ERASE ALL DATA (GZ-HM50)” (☞ p. 85)

Turn off and on this unit again.

ERROR IN BUILT-IN MEMORY!

Turn off and on this unit again.

If the above does not solve the problem, back up your files and execute “FORMAT BUILT-IN MEM.” (GZ-HM50) in the “MEDIA SETTINGS” menu. (All data will be deleted.)

“FORMAT BUILT-IN MEM. (GZ-HM50)” (☞ p. 84)

MEMORY CARD ERROR!

Turn off and on this unit again.

Remove the AC adapter and battery pack, then remove and re-insert the SD card.

Remove any dirt from the SD card terminals.

If the above does not solve the problem, back up your files and execute “FORMAT SD CARD” in the “MEDIA SETTINGS” menu. (All data will be deleted.)

“FORMAT SD CARD” (☞ p. 83)

NOT FORMATTED

Select “OK”, then select “YES” on the “DO YOU WANT TO FORMAT?” screen.

RECORDING FAILURE

Turn off and on this unit again.

PLAYBACK FAILED

Remove and re-insert the SD card.

“Inserting an SD Card” (☞ p. 14)

Remove any dirt from the SD card terminals.

Insert the SD card before turning on the power.

Do not subject this unit to any strong impact or vibration.

VIDEO MANAGEMENT FILE IS DAMAGED, RECOVERY IS REQUIRED TO RECORD/PLAYBACK, RECOVER?

Select “OK” to restore. (Videos that cannot be restored will not be displayed on the index screen, but you may be able to play them back using “PLAYBACK OTHER FILE” in the menu.)

“Playing a Video with Defective Management Information” (☞ p. 38)

UNSUPPORTED FILE!

Use files recorded with this unit. (Files recorded with other devices may not be playable.)

THIS FILE IS PROTECTED

Switch off the “PROTECT/CANCEL” function in the menu. “Protecting Files” (☞ p. 46)

CHECK CARD'S WRITE PROTECTION SWITCH

Set the write protect switch of the SD card to off.

INSUFFICIENT AVAILABLE SPACE

Delete files, or move files to a computer or other devices.

Replace the SD card with a new one.

Seamless videos cannot be combined if there is not enough free space in the built-in memory or SD card. Check the amount of remaining free space before combining. (GZ-HM50)

MAXIMUM QUANTITY RECORDING FOLDERS/FILES HAS BEEN REACHED

① Move the files or folders to a computer or other device. (Back up your files.)

② Select “FILE + MANAGEMENT NO” in “FORMAT BUILT-IN MEM.” (GZ-HM50) or “FORMAT SD CARD” of the “MEDIA SETTINGS” menu. (All data on the built-in memory or SD card will be deleted.)

SCENE QUANTITY EXCEEDED LIMIT

① Move the files or folders to a computer or other device. (Back up your files.)

② Select “FILE + MANAGEMENT NO” in “FORMAT BUILT-IN MEM.” (GZ-HM50) or “FORMAT SD CARD” of the “MEDIA SETTINGS” menu. (All data on the built-in memory or SD card will be deleted.)

NUMBER OF FOLDERS OVERFLOW

① Move the files or folders to a computer or other device. (Back up your files.)

② Select “FILE + MANAGEMENT NO” in “FORMAT BUILT-IN MEM.” (GZ-HM50) or “FORMAT SD CARD” of the “MEDIA SETTINGS” menu. (All data on the built-in memory or SD card will be deleted.)

FILE QUANTITY LIMIT EXCEEDED

① Move the files or folders to a computer or other device. (Back up your files.)

② Select “FILE + MANAGEMENT NO” in “FORMAT BUILT-IN MEM.” (GZ-HM50) or “FORMAT SD CARD” of the “MEDIA SETTINGS” menu. (All data on the built-in memory or SD card will be deleted.)

CAMERA TEMPERATURE IS TOO COLD KEEP CAMERA POWER ON PLEASE WAIT

Leave this unit turned on for a while.

If the warning still does not disappear, turn off the power and move the unit to a warm place while taking care to avoid a sudden temperature change.

Turn on the power again after a while.

NO FILES

Change the setting in “REC MEDIA SETTING”, and check that files are not recorded to the other media.

“REC MEDIA SETTING (GZ-HM50)” (☞ p. 74)

Perform regular maintenance of this unit to enable it to be used for a long time.

Caution :

- Be sure to detach the battery pack, AC adapter, and power plug before performing any maintenance.
-

Camcorder

- Wipe this unit with a dry, soft cloth to remove any dirt.
- When it is extremely dirty, soak the cloth in a solution of neutral detergent, wipe the body with it, and then use a clean cloth to remove the detergent.

Caution :

- Do not use benzene or thinner. Doing so may cause damage to the unit.
 - When using a chemical cloth or cleaner, be sure to observe the warning labels and instructions of the product.
 - Do not leave the device in contact with rubber or plastic products for a long time.
-

Lens/LCD Monitor

- Use a lens blower (commercially available) to remove any dust, and a cleaning cloth (commercially available) to wipe off any dirt.
Mold may form if the lens is left dirty.

Camera

| Item | Details |
|------------------------|--|
| Power supply | Using AC adapter: DC 5.2 V Using battery pack: DC 3.5 V - 3.6 V |
| Power consumption | 2.2 W (when "MONITOR BRIGHTNESS" is set to "3" (standard)) 2.4 W (when "MONITOR BRIGHTNESS" is set to "4" (brighter)) Rated Current Consumption: 1A |
| Dimensions (mm) | 50.5 mm x 55 mm x 110.5 mm (2-1/8" x 2-1/4" x 4-3/8") (W x H x D: excluding grip belt) |
| Mass | Approx. 185 g (0.4 lbs) (camera only), Approx. 215 g (0.47 lbs) (including supplied battery pack) |
| Operating environment | Allowable operating temperature: 0°C to 40°C (32°F to 104°F) Allowable storage temperature: -20°C to 50°C (-4°F to 122°F) Allowable relative humidity: 35 % to 80 % |
| Image pickup device | 1/5.8" 1,500,000 pixels (progressive CMOS) |
| Recording area (Video) | GZ-HM430: (UXP/XP/SP/EP) 630,000 to 1,050,000 pixels (AIS ON) (UXP/XP/SP/EP) 630,000 to 1,250,000 pixels (AIS OFF) (SSW/SEW) 340,000 to 1,050,000 pixels (dynamic zoom ON) (SSW/SEW) 630,000 to 1,050,000 pixels (dynamic zoom OFF) GZ-HM30/GZ-HM50: (LS/LE) 630,000 to 1,050,000 pixels (AIS ON) (LS/LE) 630,000 to 1,250,000 pixels (AIS OFF) (SSW/SEW) 340,000 to 1,050,000 pixels (dynamic zoom ON) (SSW/SEW) 630,000 to 1,050,000 pixels (dynamic zoom OFF) (SS/SE) 340,000 to 790,000 pixels (dynamic zoom ON) (SS/SE) 470,000 to 790,000 pixels (dynamic zoom OFF) |
| Lens | GZ-HM430: (UXP/XP/SP/EP) 35 mm conversion: 45.6 mm to 1,824 mm (AIS ON) (UXP/XP/SP/EP) 35 mm conversion: 42.0 mm to 1,680 mm (AIS OFF) (SSW/SEW) 35 mm conversion: 45.6 mm to 3,182 mm (dynamic zoom ON) (SSW/SEW) 35 mm conversion: 45.6 mm to 1,824 mm (dynamic zoom OFF) GZ-HM30/GZ-HM50: (LS/LE) 35 mm conversion: 45.6 mm to 1,824 mm (AIS ON) (LS/LE) 35 mm conversion: 42.0 mm to 1,680 mm (AIS OFF) (SSW/SEW) 35 mm conversion: 45.6 mm to 3,182 mm (dynamic zoom ON) (SSW/SEW) 35 mm conversion: 45.6 mm to 1,824 mm (dynamic zoom OFF) (SS/SE) 35 mm conversion: 55.9 mm to 3,376 mm (dynamic zoom ON) (SS/SE) 35 mm conversion: 55.9 mm to 2,236 mm (dynamic zoom OFF) |

| Item | Details |
|-------------------------------|--|
| Zoom (during video recording) | GZ-HM430: Optical zoom: Up to 40x (16:9/4:3) Dynamic zoom: Up to 70x (16:9) Digital zoom: Up to 200x (16:9/4:3) GZ-HM30/GZ-HM50: Optical zoom: Up to 40x (16:9/4:3) Dynamic zoom: Up to 70x (16:9), Up to 60x (4:3) Digital zoom: Up to 200x (16:9/4:3) |
| LCD monitor | 2.7" wide, 230K pixels, polysilicon color LCD |
| Recording media | GZ-HM50: Built-in memory (8 GB) SDHC/SDXC card (commercially available) Eye-Fi card (commercially available) GZ-HM30/GZ-HM430: SDHC/SDXC card (commercially available) Eye-Fi card (commercially available) |
| Clock battery | Rechargeable battery |

Connectors

| Item | Details |
|----------------------------|--|
| HDMI output connector | HDMI™ mini connector |
| Component output connector | Y, Pb, Pr component output Y: 1.0 V (p-p), 75 Ω Pb/Pr: 0.7 V (p-p), 75 Ω |
| AV output connector | Video output: 1.0 V (p-p), 75 Ω Audio output: 300 mV (rms), 1 KΩ |
| USB connector | Mini USB Type B, USB 2.0 compliant |

Video

| Item | Details |
|----------------------------|--|
| Recording/ Playback format | AVCHD standard Video: AVC/H.264 Audio: Dolby Digital 2ch |
| Extension | .MTS |
| Signal system | NTSC standard |
| Image quality (Video) | GZ-HM430: UXP 1920 x 1080i pixels Average Approximate 24 Mbps XP 1920 x 1080i pixels Average Approximate 17 Mbps SP 1920 x 1080i pixels Average Approximate 12 Mbps EP 1920 x 1080i pixels Average Approximate 4.8 Mbps SSW 720 x 576i pixels Average Approximate 6.2 Mbps SEW 720 x 576i pixels Average Approximate 3 Mbps GZ-HM30/GZ-HM50: LS 1280 x 720p pixels Average Approximate 11 Mbps LE 1280 x 720p pixels Average Approximate 4.7 Mbps SSW (16:9) 720 x 480i pixels Average Approximate 6.2 Mbps SEW (16:9) 720 x 480i pixels Average Approximate 3 Mbps SS (4:3) 720 x 480i pixels Average Approximate 6.2 Mbps SE (4:3) 720 x 480i pixels Average Approximate 3 Mbps |
| Sound quality (Audio) | 48 kHz, 256 kbps |

AC Adapter (AC-V11U)

| Item | Details |
|---------------------------------|---|
| Power supply | AC 110 V to 240 V, 50 Hz/60 Hz |
| Output | DC 5.2 V, 1 A |
| Allowable operating temperature | 0°C to 40°C (32°F to 104°F) (10°C to 35°C (50°F to 95°F) during charging) |
| Dimensions (mm) | 66 mm x 28 mm x 47 mm (2-5/8" x 1-1/8" x 1-7/8") (W x H x D: excluding cord and AC plug) |
| Mass | Approx. 71 g (0.15 lbs) |

Battery Pack (BN-VG108U)

| Item | Details |
|-----------------|---|
| Power voltage | 3.5 V - 3.6 V |
| Capacity | 860 mAh |
| Dimensions (mm) | 31 mm x 21.5 mm x 43 mm (1-1/4" x 7/8" x 1-3/4") (W x H x D) |
| Mass | Approx. 30 g (0.06 lbs) |

Battery Pack (BN-VG107U)

| Item | Details |
|-----------------|---|
| Power voltage | 3.5 V - 3.6 V |
| Capacity | 700 mAh |
| Dimensions (mm) | 31 mm x 21.5 mm x 43 mm (1-1/4" x 7/8" x 1-3/4") (W x H x D) |
| Mass | Approx. 26 g (0.06 lbs) |

Memo : _____
 ● The specifications and appearance of this product are subject to changes for further improvement without prior notice.

JVC