
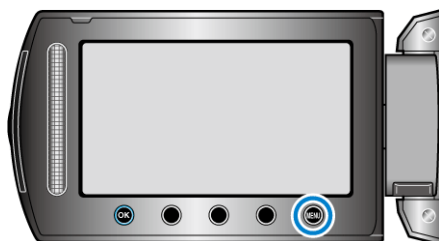 


## Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

1 Touch  to display the menu.



2 Select "MANUAL SETTING" and touch .





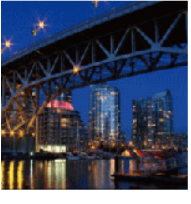 
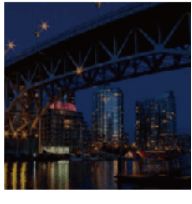 

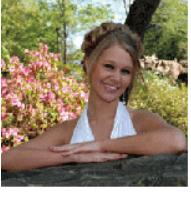 




 

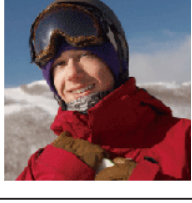 





3 Select "SCENE SELECT" and touch .



4 Select the scene and touch .



Setting	Effect
 NIGHT EYE	Increases gain and brightens the scene automatically when the surrounding is dark. To prevent camera shake, use a tripod. <b>OFF</b>   <b>ON</b>
 NIGHT (GZ-HD620)	Captures night scenes naturally. <b>OFF</b>   <b>ON</b>
 PORTRAIT (GZ-HD620)	Blurs the background to bring out the people in the picture. <b>OFF</b>   <b>ON</b>
 SPORTS (GZ-HD620)	Captures fast-moving subjects clearly in every single frame. <b>OFF</b>   <b>ON</b>
 SNOW (GZ-HD620)	Prevents the subject from appearing too dark when recording snow scenes on a sunny day. <b>OFF</b>   <b>ON</b>
 SPOTLIGHT	Prevents the human subject from appearing too bright under light. <b>OFF</b>   <b>ON</b>

\*The image is only an impression.