


## Rear

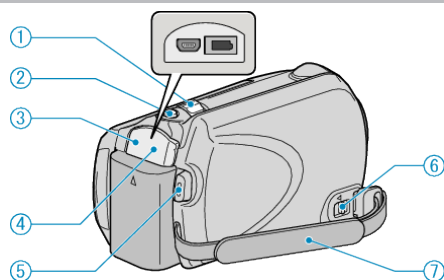

### 1 Zoom/Volume Lever

- During shooting: Adjusts the shooting range.
- During playback (index screen): Changes the number of images to display.
- During video playback: Adjusts the volume.

### 2 SNAPSHOT (Still image recording) Button

- Takes a still image.

### 3 USB Terminal

- Connects to PC using a USB cable.

### 4 DC Terminal

- Connects to an AC adapter to charge the battery.

### 5 START/STOP (Video recording) Button

- Starts/stops video recording.

### 6 Grip Belt Release Lever

- Allows the grip belt to be removed and used as a hand strap.

### 7 Grip Belt

- Pass your hand through the grip belt to hold this unit firmly.